

CG-3DI CLICKNGO MODULE 3 DIGITAL INPUTS



DATASHEET - V1.0x

Distributed by IOThrifty | Website: IOThrifty.com | Email: service@iothrifty.com | Telephone: 1-860-733-1117

INTRODUCTION

CG-3DI ClickNGo module has 3 digital inputs and was designed to work as an expansion module for NOVUS line of modular controllers.

CG-3DI must be attached to the controller dock (to insert the module to the controller, make sure the device is turned off). Once inserted, it will be automatically recognized. Its configuration parameters will be displayed according to the slot in which the module has been attached to the dock. You can configure this module directly at the controller, through the **QuickTune** software, or through the **QuickTune Mobile**.

DIMENSION

Built in UL94 polycarbonate and with an IP20 protection rating, the CG-3DI ClickNGo module has an identification engraving on the top and the following dimensions:


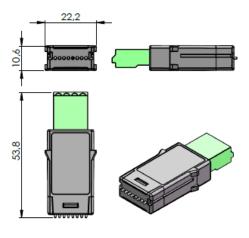


Figure 1 – Module overview

ELECTRICAL INSTALLATION

CG-3DI uses 1 plug-in connector and supports connections to PNP and NPN / Dry Contact sensors, as shown in the figures below:



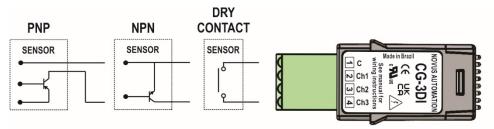

INSTALLATION RECOMENDATIONS

- The electrical connections must be made at the module's terminals and accept 0.32 to 2.5 mm² (28 to 11 AWG) wire. The terminals must have a torque of 0.45 Nm (4.0 lb in).
- The power supply for electronic instruments must come from a network suitable for instrumentation.
- The use of RC FILTERS (noise suppressors) in contactor coils, solenoids, etc. is recommended.
- In control applications, you must consider what can happen when any part of the system fails. The built-in safety features of the device do not guarantee total protection.

HOW TO INSERT THE MODULE TO THE DEVICE



Before you insert or remove a ClickNGo module from the device, make sure the device has been turned off.

Once the dock has been attached to the controller, simply plug the CG-3DI ClickNGo module into the desired slot, pressing it in until it clicks into place. If the module does not click into place, it is either not properly attached, or it has been plugged into the wrong slot.

Once the **CG-3DI** ClickNGo module is inserted into the dock and the device has been turned on, it will be automatically recognized. You can use the navigation keys to go through the parameter cycles and access the settings of the added module (see OPERATION section of the device manual). The module settings will be available in the parameter cycle and according to its position in the dock. A **CG-3DI** ClickNGo module inserted into slot 1 of the dock, for example, can be viewed within the Configuration Cycle, under module 1 (**LFL** >> **Md. 1**).

Once a module is removed from the dock, it will no longer be recognized by the device and the any settings made will be lost.

MODULE OPERATION

Once the module has been attached to the device, the controller will display the following parameters:

	Allows you to set the channel function:					
Eh 1F Channel 1 Function	OFF	Channel is off and will not be used by the application				
	RUN	Enables controller operation				
	Auto	Enables automatic control mode				
	E.RSP	Enables remote Setpoint				
	P.SEP	Pauses program				
	Pr 1	Sets the channel as program 1				
	FWB	Starts the timer				
Eh 1.EYP Channel 1 Type	Allows you to define the type of sensor to be used in the channel: PNP or NPN / Dry Contact.					
	Allows you to set the channel function:					
	OFF	Channel is off and will not be used by the application				
	RUN	Enables controller operation				
Channel 2	Auto	Enables automatic control mode				
Function	E.RSP	Enables remote Setpoint				
	P.SEP	Pauses program				
	Pr 1	Sets the channel as program 1				
	FWB	Starts the timer				
Eh2.E9P Channel 2 Type	Allows you to define the type of sensor to be used in the channel: PNP or NPN / Dry Contact.					
	Allows you to set the channel function:					
	DFF	Channel is off and will not be used by the application				
	RUN	Enables controller operation				
Channel 3	Auto	Enables automatic control mode				
Function	E.RSP	Enables remote Setpoint				
	P.SEP	Pauses program				
	Pr 1	Sets the channel as program 1				
	FWB	Starts the timer				
Eh3.E4P Channel 3 Type	Allows you to define the type of sensor to be used in the channel: PNP or NPN / Dry Contact.					

Table 1 - Module parameters

The parameters will be displayed in the cycle related to the position of the module in the device dock.



If the module is removed from the controller dock, all settings will be lost. Therefore, when possible, use QuickTune software or the QuickTune Mobile application to save a version of the settings you have made.

For more information on the controller primary operation, see the OPERATION chapter of the device manual.

CONFIGURATION SOFTWARE

Once you have inserted the **CG-3DI** ClickNGo module into the device dock, you can configure it using the **QuickTune** software, which is free and available for download on **NOVUS** official website, or the **QuickTune Mobile** app, which is also free and available on Google Play Store and Apple Store.

Information about the primary configuration of the device is available in the CONFIGURATION SOFTWARE chapter of the controller manual. This section shows information on how to configure the parameters for this module.

To start the configuration, simply click the **Configure** button on the home screen of the software or application. If you are using the **QuickTune Mobile** application, you must enable the Bluetooth interface of your smartphone. If you are using the **QuickTune** software, you must run the software and perform the process of identifying the device.

QuickTune							QuickTune Mobile		
						← Co	nfiguration	SLOTS SHARE	
	18					IA OL	IT.B MD1 CG-3DI	Programs Tempo	
	Analog Input Mnemonic	Digital Output Control Tuning Alarms RnS Progra Parameter	ms Timer Value	Protection	General Digital Input	CG-31	DI (1 Slot) - Three Dig	ital Inputs	
Basic	Eh 1F	Function within the process to which the channel has been assigned	Off	Ŷ		Mnemonic	Parameter	Value	
	Ch 1,69P	Channel 1 Type	PNP	Ĵ	Lh ìr ₀FF	Eh 1F v	unction within the process to which the channel was ssigned	OFF	
Features		channer i type	PNP	Č		Ch 1.ESP	Channel 1 type	PNP	
暑出	F2H3	Function within the process to which the channel has been assigned	Off	~	CG-3DI	-			
Cycles	CH2.E9P	Channel 2 Type	PNP	Ŷ		Eh2F v	unction within the process to which the channel was ussigned	OFF	
	C h3F	Function within the process to which the channel has been assigned	27			CH2,EMP	Thannel 2 type	PNP	
Favorite	Crisi	Function within the process to which the channel has been assigned	Off	Č.	SLOTS #		unction within the process to		
•	Сна.Ечр	Channel 3 Type	PNP	v		Ch3F v	which the channel was ssigned	oFF	
						Ch3.EYP	Channel 3 type	PNP	
	E BACK SUPPOR				SAVE TO FILE END TO DEVICE	= 84	_		
						етнека чтем		SAVE CONFIG. SEND TO DEVICE	

Figure 3 – Configuration software

- Function within the process to which the channel 1 has been assigned: Allows you to set the function of channel 1: "Channel off", "Enable controller operation", "Enables automatic control mode", "Enables remote Setpoint", "Pauses the program", "Selects program 1" or "Starts timer".
- Channel Type 1: Allows you to define the type of sensor to be used: PNP or NPN.
- Function within the process to which the channel 2 has been assigned: Allows you to set the function of channel 1: "Channel off", "Enable controller operation", "Enables automatic control mode", "Enables remote Setpoint", "Pauses the program", "Selects program 1" or "Starts timer".
- Channel Type 2: Allows you to define the type of sensor to be used: PNP or NPN.
- Function within the process to which the channel 3 has been assigned: Allows you to set the function of channel 1: "Channel off", "Enable controller operation", "Enables automatic control mode", "Enables remote Setpoint", "Pauses the program", "Selects program 1" or "Starts timer".
- Channel Type 3: Allows you to define the type of sensor to be used: PNP or NPN.

MAINTENANCE

Connection errors and improper programming are the most common errors during controller operation. A final review can avoid wasted time and damage.

If the module is not recognized by the device, you must remove it from the dock, add it to another available slot, and restart the device.

TECHNICAL SPECIFICATION

FEATURES	CG-3DI CLICKNGO MODULE				
Inputs	3 digital inputs (DI) channels, configurable between NPN / PNP types				
Environmental Conditions	Operating Temperature: -20 to 60 °C (-4 to 140 °F) Relative Humidity: 80 % max. @ 30 °C (86 °F) (For temperatures above 30 °C (86 °F), reduce by 3 % for each °C) Internal use; Installation category II, Pollution degree 2; Altitude < 2000 m				
Electrical Compatibility	EN 61326-1:2020				
Security	EN 61010-1:2010 UL 61010-1/A2:2012				
Dimension	53,8 x 10,6 x 22,2 mm Approximated weight: 10 g				
Protection Degree	IP50 when installed in controller				
Plastic material	ABS+PC UL94 V-0				
Software	QuickTune (for PC) QuickTune Mobile (for smartphones)				
Certification	CE, UKCA				
Table 2 – Technical specifications					

CERTIFICATIONS

CE Mark / UKCA

This is a Class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.