



#### REMOVAL AND INSTALLATION GUIDE




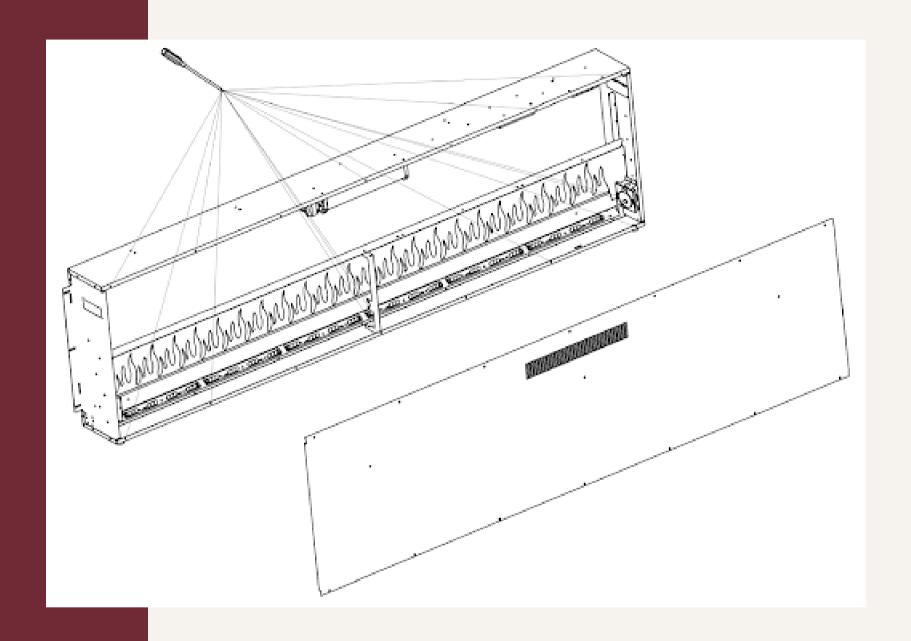


7 - 1 Unscrew the back panel.

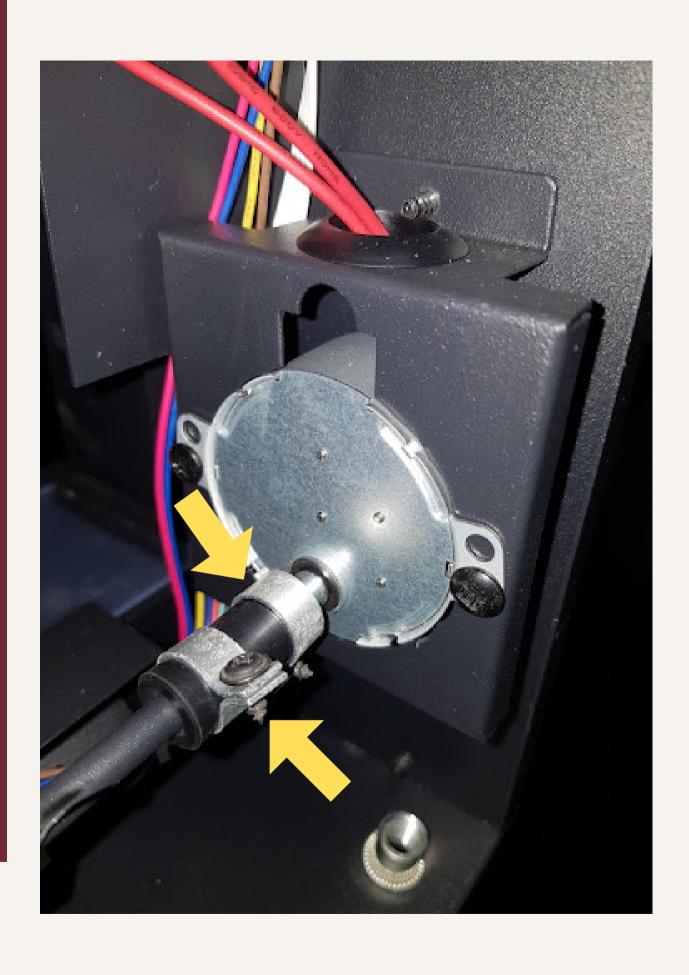


7 - 2 Loosen the screws to release the flicker rod.

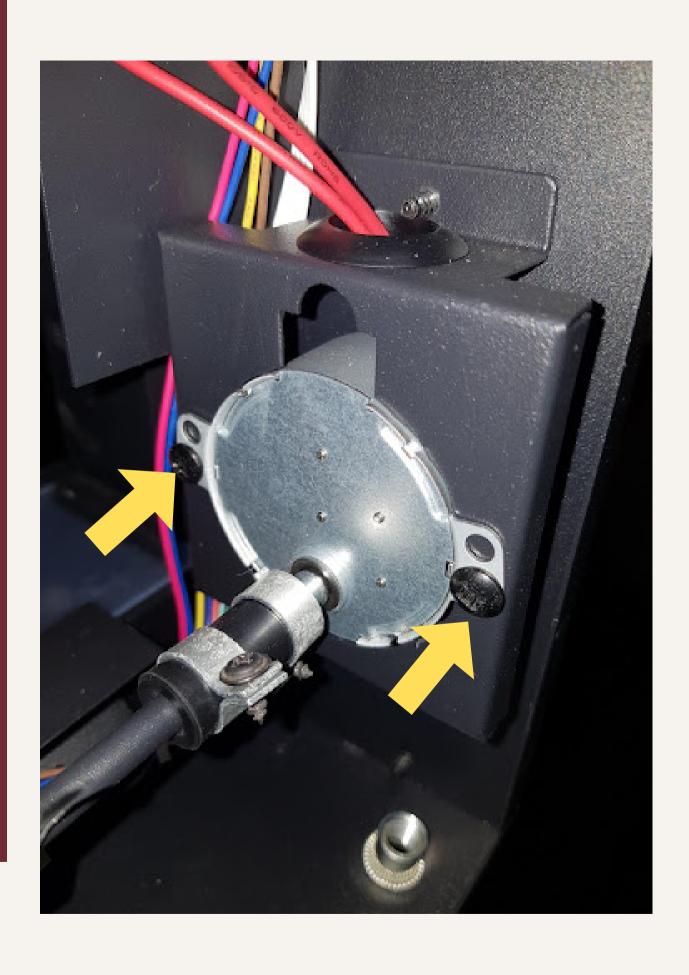


7 - 3 Remove 2 screws on the motor

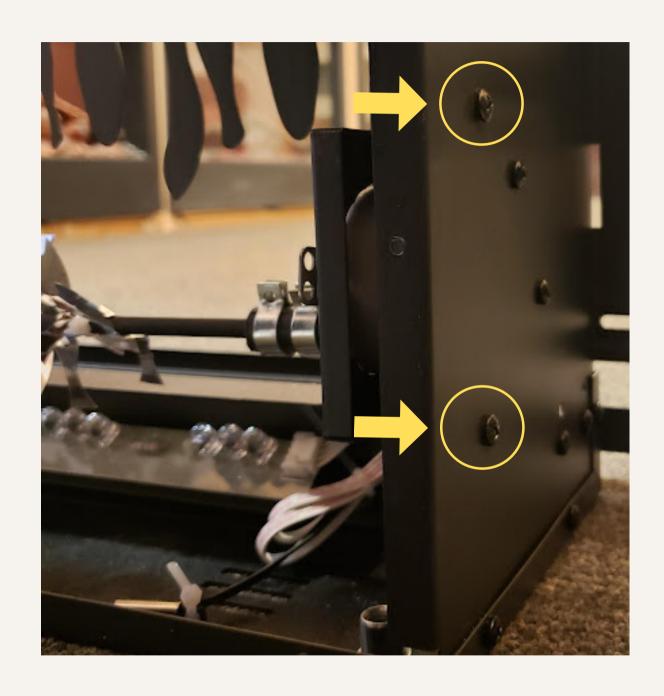

7 - 4 Remove the two screws from the right side of the panel which are connected to the motor.

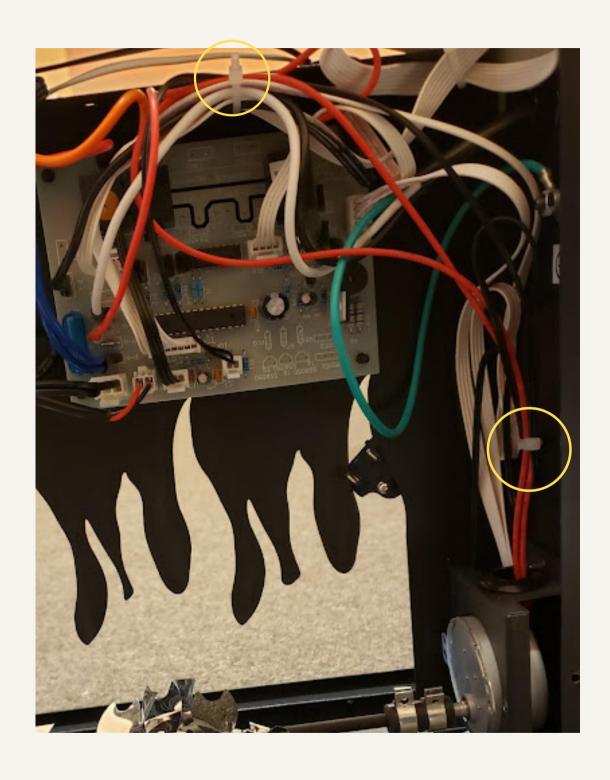


7 - 5 Carefully cut the two white zip ties.

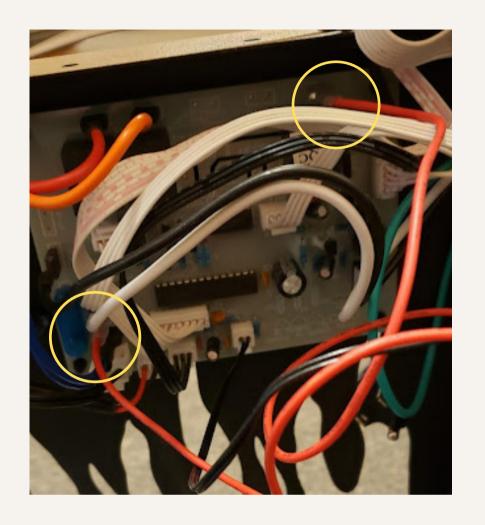

#### N-A N-A


"R-N"

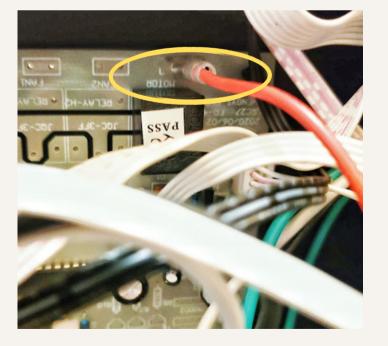

"MOTOR"

### 7. Flame Motor Removal and Installation

7 - 6 Unplug the two red cables which are connected to "R-N" and "Motor" from the control board

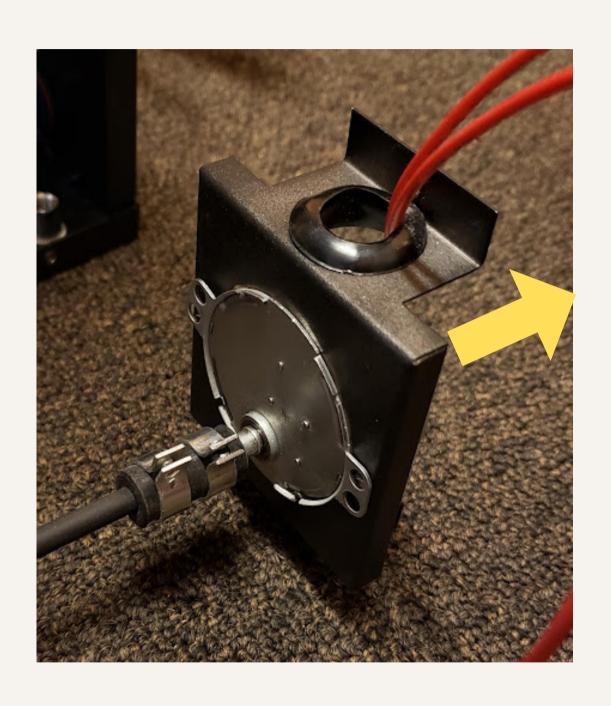

7 - 7 Remove the metal holder from the motor.



7 - 8 Pull out the motor.

This is the end of the removal step

For the installation guide:

1. To put every component back, please follow every signal steps

Installation guide starts from 7 - 8 to 7 - 1

- 7 8 Put the flicker rod and motor together
- 7 7 Put the motor holder back on (make sure the wire go through the hole first)
- 7 6 The cables plug into the control board (make sure one in R-N, other in Motor)
- 7 5 Use zip ties to organize the cables where the two green circle area (Please check on 7 5 Photo)

- 7 4 Put the motor back to the right down corner and screws 2 screws to stabilize (Please look at 7 4 photos)
- 7 3 Screw the motor on the holder (step 7 3 photo gonna sure the exact place)
- 7 2 Screw on the flicker rod
- 7 1 Put the back panel on and screw all the screws.
  - If you still have any questions, please feel free to contact us by phone or email.

# THANK YOU!

VISIT US ON OUR WEBSITE:

WWW.DYNASTYFIREPLACES.COM

