




D Y N A S T Y F I R E P L A C E

REMOVAL AND INSTALLATION GUIDE





8. Flame LED Bar Removal and Installation

8 - 1 Remove the back panel of the fireplace by removing the screws surrounding the backplate.

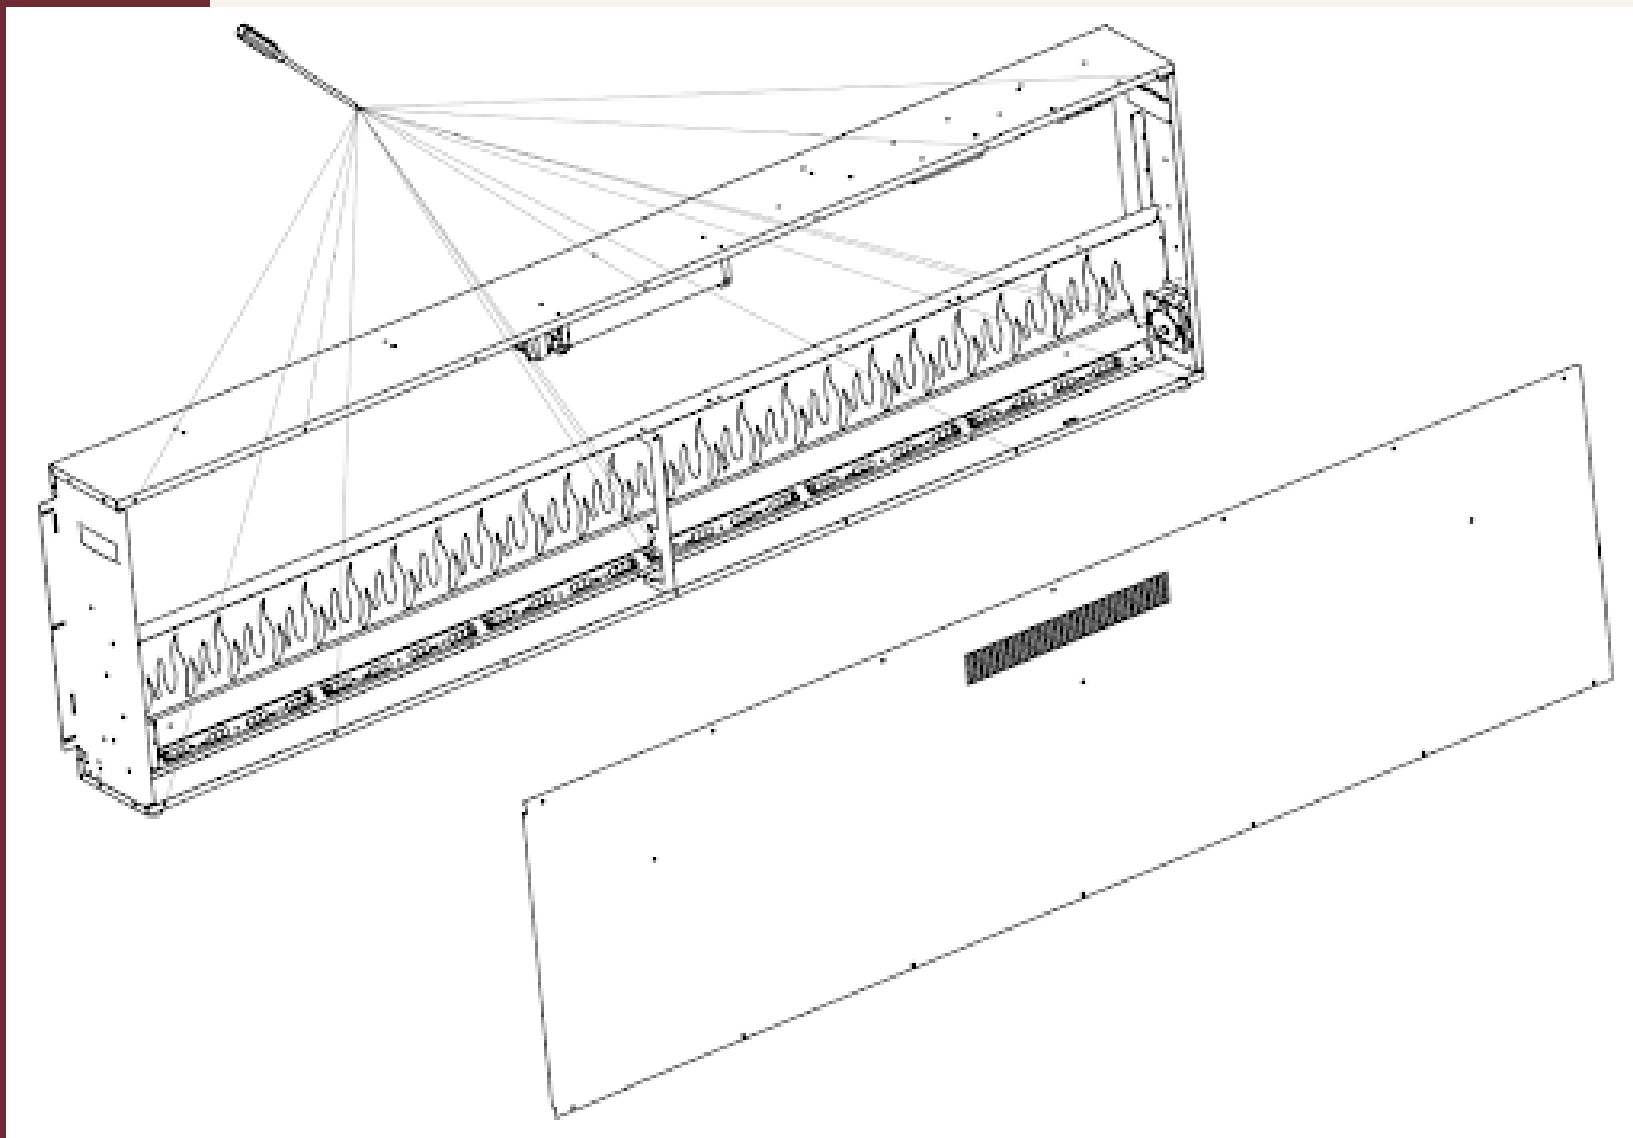


8. Flame LED Bar Removal and Installation

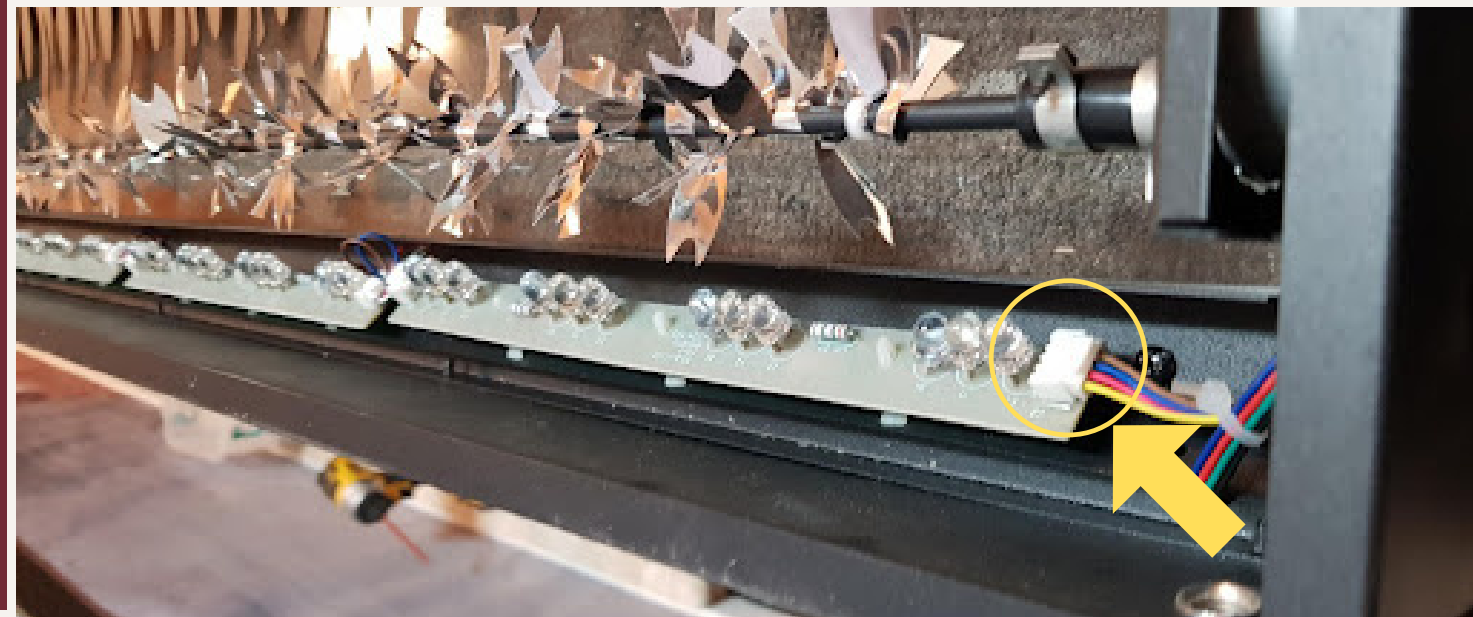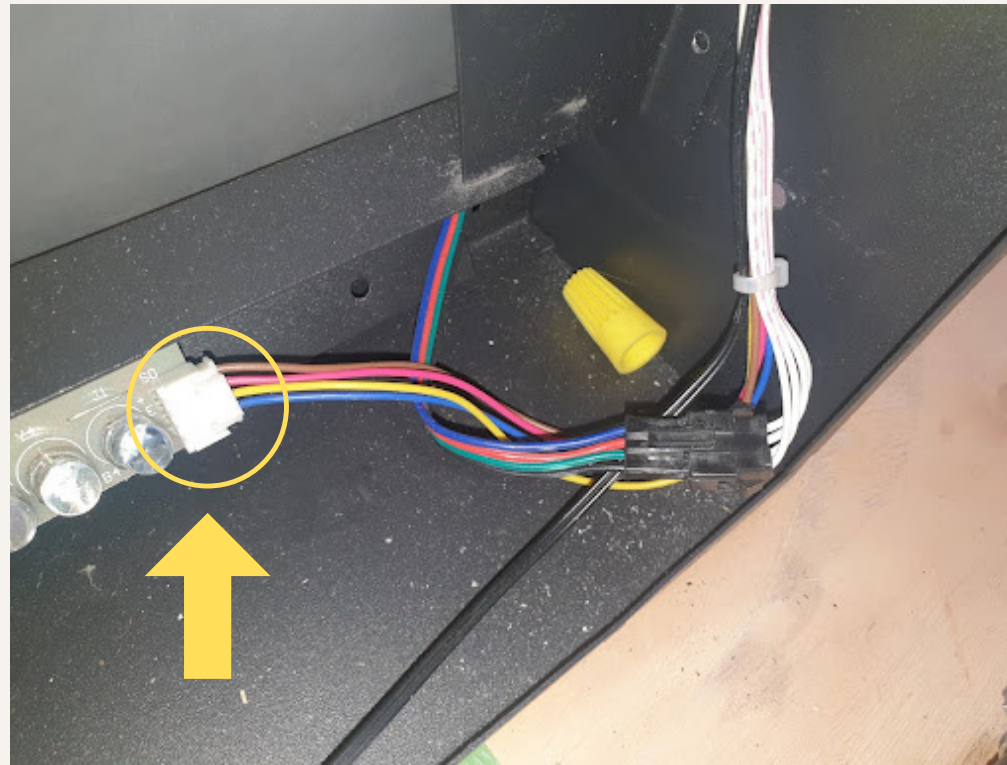

8 - 2 Unplug the white connector along
the LED bar



8. Flame LED Bar Removal and Installation

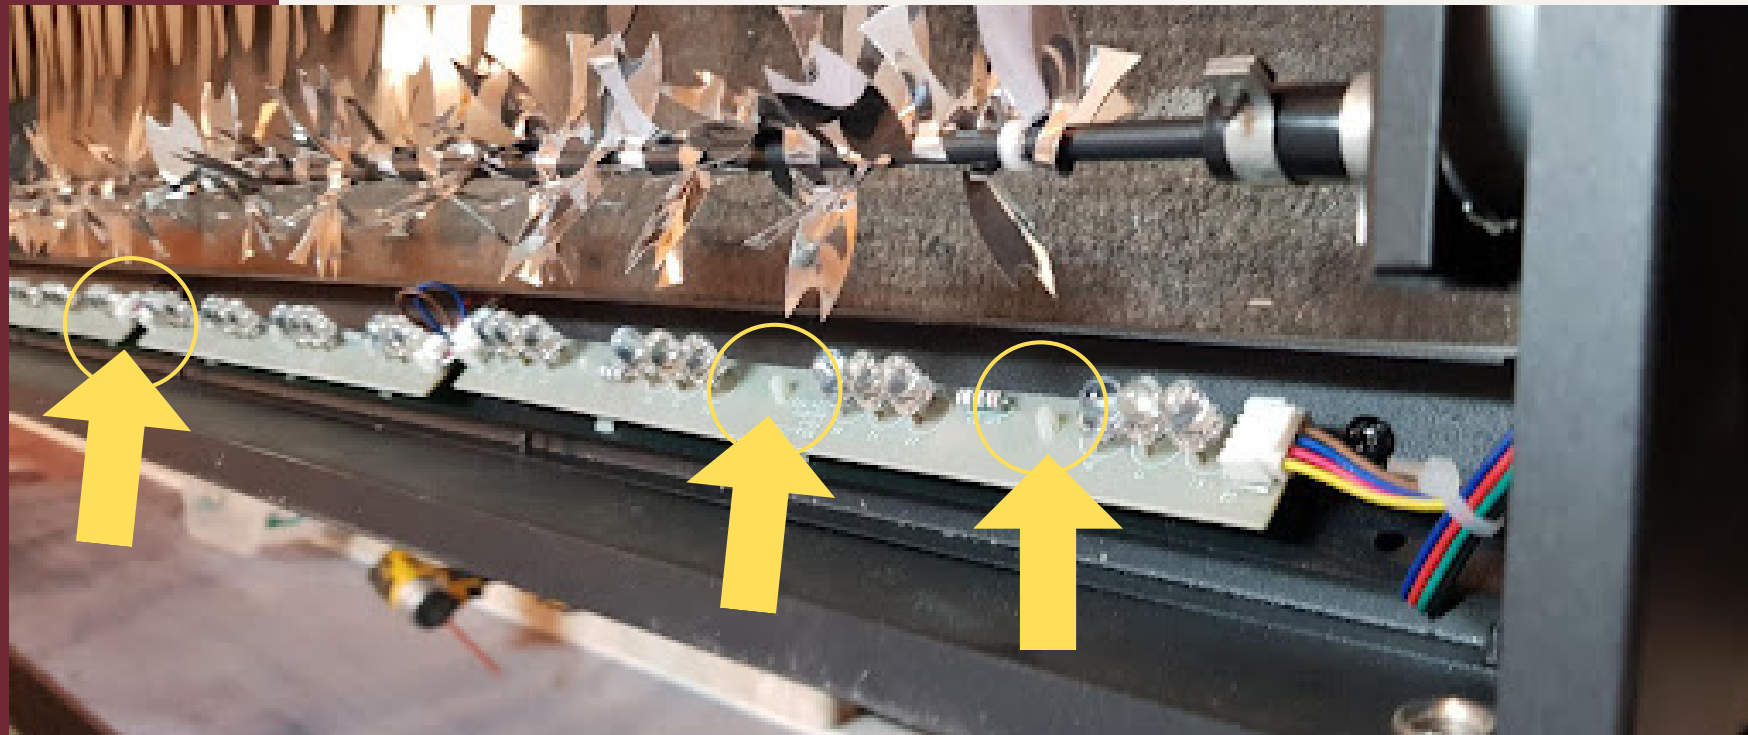

8 - 3 Squeeze the with pin and
carefully pull the light bar up
(Please do it one by one)



8. Flame LED Bar Removal and Installation

Flame LED Bar Installation

1. Attach all the new LED lights together if its not connected
2. Connect the white connector (Please check the 8 - 2 Photo)
3. Make sure every white pin get into the LED bar
(Double-check with the 8-3 photo)

THANK YOU!!!

VISIT US ON OUR WEBSITE:

WWW.DYNASTYFIREPLACES.COM

