

INSTRUCTION GUIDE

Commercial Pillar Light

Model No. SLDPIL0014-WW

PACKAGE CONTENTS

1 x Light Fitting 1 x Pack of Screws



FEATURES

- 1. Day/Night Sensor
- 2. 8-10 hours Operation per day
- 3. Surface Mounted Base

IMPORTANT NOTES

- Please ensure you place your solar panel in a location where it can achieve a minimum of 6HRS DIRECT SUNLIGHT
- Be aware that on overcast/cloudy days, the solar panel will still charge. However, not as efficiently as a sunny day, so the battery may not reach full capacity. Therefore, your light may turn off earlier than specified
- It's best not to install the fitting underneath a street light, porch light etc. because this may stop the automatic daynight sensor triggering and result in your lights not turning on.

INSTALLATION METHOD

- 1. Remove contents from packaging
- Switch your light fitting "ON" by using the supplied hex key (there is a small hole in the top of the fitting where the "ON/OFF" button is situated) (Seen in FIGURE 1)
- 3. Locate a position where your light will receive maximum direct sunlight during the day
- 4. Using the supplied Nuts & Bolts, fix the pillar base in your desired location



TROUBLE SHOOTING

Phenomenon	Cause	Inspection Method	Solution
Light won't turn on	Switch hasn't been turned on	Determine what position the switch is in	Turn the switch on
	Battery has run flat	Period of rainy or cloudy weather or installation site doesn't provide enough direct sunlight	Charge the light in direct sunlight for 1-2 days then check again
The light only stays on for a short amount of time	Low Battery	1. Bad installation site for the solar panel 2. Dust or leaves are covering the panel 3. Long period of overcast weather	1. Charge the battery in direct sunlight for 1-2 days with the switch off, then check again 2. Clean the solar panel
	Battery Failure	Access the light and & replace battery Battery has matured	Contact SLD Customer Service to buy new batteries

Customer Service Number: 1300 135 911 www.solarlightingdirect.com.au