

PACKAGING CONTENTS

- 1 x Light Fitting
- 1 x Mounting Spike
- 2 x Extension Poles



FEATURES

- 1. Day-Night Sensor
- 2. 12 hours Operation per day
- 3. Spike Mounting
- 4. Candle like Flicker Effect

INSTALLATION METHOD

1. Remove contents from packaging
2. Press power button once to turn your light on (Note, your light is packaged & transported with the power button in the "OFF" position)
3. Decide where to install your light & locate and use the following accessories

Please refer to **FIGURE 1 for the following**

Spike Mount – Select your preferred mounting height by connecting either 1 or 2 sections of the extension poles to the bottom of your light fitting (1), once these are attached insert your spike mount and connect this to the bottom of the last extension pole (2).

4. You are now ready to Spike your light into your desired location.



FIGURE 1

IMPORTANT NOTES

- Please ensure you place your Tiki Torch in a location where it can achieve a minimum of 6hrs Direct Sunlight
- Be aware that with overcast/cloudy days, the solar panel will still charge. However, not as efficiently as a sunny day, so the battery may not reach full capacity. Therefore turning off earlier than specified.
- It's best not to install these lights underneath a street light, porch light etc. because this may stop the automatic day-night sensor triggering and result in your lights not turning on

TROUBLE SHOOTING

Phenomenon	Cause	Inspection Method	Solution
Light won't turn on	Switch hasn't been turned on	Determine what position the switch is in	Turn the switch on
	Battery has run flat	1. Prolonged rain or overcast weather 2. Installation location doesn't provide adequate exposure to direct sunlight	Charge the light in direct sunlight for 1-2 days then check again
Short Operating time	Low Battery	1. Bad installation site for the light 2. Dust and leaves are covering the panel 3. Long period of rainy days	1. Charge the battery in direct sunlight for 1-2 days with switch off, then check again 2. Clean the solar panel
	Battery Failure	1. Access the light and check if the battery has moved or if it has been damaged 2. Battery has matured and requires replacing	Contact us to replace your battery