



Wheeky® Pets Laundry Helper Pet Laundry Bag

Instructions: Please read prior to first use

Thank you for your purchase! The Wheeky® Pets Laundry Helper is a great way to keep your washer free of pet hair and clogs. But it does require you to do things a little differently than you may be used to. Follow these simple instructions carefully, and we think you will be very pleased with the results. If you have any questions, please feel free to contact us at hello@wheekypets.com.

1. Shake	Take pet laundry outside, and shake out any loose hair.
2. Wash	<p>Put pet laundry into Wheeky® Pets Laundry Helper. <u>Please make sure the bag is no more than half full.</u> There must be room for the laundry to move around inside the bag and get clean*.</p> <p>Pour <u>no more than a half cap</u> of unscented laundry detergent <u>directly into the bag (on top of the laundry)</u> and zip closed. Be careful not to use too much detergent. Only a small amount is needed. Evenly distribute laundry within the bag to ensure a balanced load. Wash as directed.</p>
3. Shake	<p>When wash cycle is done, take wet bag and laundry outside, <u>remove pet laundry from the bag,</u> and vigorously shake out loose pet hair and debris.</p> <p>Turn wet Wheeky® Pets Laundry Helper inside out and also shake vigorously outside to remove debris. Hang bag to dry. <u>Do not put bag in dryer.</u></p>
4. Dry	After shaking, put wet pet laundry in dryer and dry as directed. Remove any hair/debris from dryer lint trap.

*Not recommended for L or XL dog beds

