

Tribest® citri★star®

Citristar Citrus Juicer

CS-1000

**OPERATION MANUAL / MANUEL DE FONCTIONNEMENT
BEDIENUNGSANLEITUNG / MANUAL DE FUNCIONAMIENTO**



Please read this manual carefully before using.

Veuillez lire attentivement ce manuel avant utilisation.

Bitte lesen Sie diese Anleitung vor der Benutzung sorgfältig durch.

Lea atentamente este manual antes del uso.

Tribest[®]

Tribest Corporation
Anaheim, California
Toll-Free USA: 1-888-254-7336
International: +1 714 879 7150
service@tribest.com
tribest.com

Follow us **@tribestlife**



Model: CS-1000

© 2024 Tribest Corporation

TABLE OF CONTENTS

1. Important Safeguards	4
2. Parts List	5
3. Assembly and Operating Instructions	6
4. Cleaning and Maintenance.....	7

PRODUCT SPECIFICATIONS

Product Name	Tribest® Citristar Citrus Juicer
Model #	CS-1000
Dimensions (W x D x H)	8 x 8 x 9.5 in / 20.3 x 20.3 x 24.1 cm
Rated Power	120V, 50-60Hz, 50 Watts 220V, 50-60Hz, 85 Watts
Weight	5.6 lbs / 2.5 kg
Warranty	1 Year

1. IMPORTANT SAFEGUARDS

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

1. Read all instructions before use.
2. To protect against risk of electrical shock, do not immerse the electric cord, plug, or motor base in water or other liquid.
3. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. Remove the plug by gripping the plug body and pulling out of the outlet. Never yank or twist cord to unplug the unit.
4. Close supervision is necessary when any appliance is used by or near children.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord/plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, electrical, or mechanical adjustment.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
8. Do not use outdoors.
9. Do not let cord hang over the edge of table or counter, or touch hot surfaces.
10. To disconnect juicer, wait until motor stops before removing plug from the electrical outlet.
11. Do not operate unattended. Make sure the motor stops completely before disassembling. Unplug after each use.

SAVE THESE INSTRUCTIONS

2. PARTS



1 TOP LID COVER

Covers your Citristar after each use to keep it clean and free of dust.



2 REAM CAP

Use to juice larger fruits such as oranges and grapefruits. The Ream Cap must go on top of the Small Ream in order to work.



3 SMALL REAM

Use to juice smaller fruits such as limes and lemons.



4 STAINLESS STEEL FILTER

Prevents pulp from entering your juice.



5 JUICE COLLECTOR WITH SPOUT

Collects and pours juice into your cup.



6 MOTOR BASE

3. OPERATING INSTRUCTIONS

ALWAYS CLEAN THE REAM, SCREEN, JUICE COLLECTOR, AND SPOUT BEFORE USING THE APPLIANCE FOR THE FIRST TIME.



fig. 1



fig. 2



fig. 3



fig. 4



fig. 5



fig. 6



fig. 7

1. Place the appliance on a firm and level surface out of reach of children.
2. Put the Juice Collector in place correctly. (fig. 1)
3. Put on the Stainless Steel Filter. (fig. 2)
4. Insert the Small Ream. If using the Ream Cap, place it on top of the Small Ream (fig. 3) Plug in.
5. Switch the appliance on by pressing the halved fruit firmly onto the ream. The juice will be extracted quietly and quickly. (fig. 4) CAUTION: Recommend 15 seconds of operation followed by 15 seconds rest. Do not operate more than 5 minutes at one time and allow a few minutes rest before next use.
6. Put a container under the spout. Flip the spout down towards the container. The instant flow system guides juice directly into the vessel. (fig. 5) After you have finished, flip the spout up to prevent dripping and spilling of juice. (fig. 6) Always clean the appliance immediately after each use.
7. Wrap the cord under the CitriStar base and exit cord through the opening in the back of the appliance. If necessary, wind excess cord around. (fig. 7)

4. CLEANING AND MAINTENANCE

1. Unplug the cord from the electrical outlet. Remove the ream, screen, and juice collector from the appliance.
2. Flip the spout down fully in order to clean it properly. The spout cannot be detached from the appliance.
3. Clean the ream, screen, and juice collector by using warm soapy water. Dry all parts. Do not clean parts in a dishwasher.
4. Clean the motor base by using a moist cloth. Never immerse the motor base in water or rinse it under running water.

CUSTOMER SUPPORT

In the event that you have any questions concerning the use, care, or service for this product, please feel free to call us or send us an email. If you purchased your product outside of the United States, please refer to your warranty card for your nearest service center.

United States

Tribest Corporation
1143 N. Patt St.
Anaheim, CA 92801
Toll-Free: 1-888-254-7336
service@tribest.com

International

Tribest Corporation
1143 N. Patt St.
Anaheim, CA 92801
Telephone: +1 714 879 7150
service@tribest.com



1143 N. Patt St. Anaheim, CA 92801
Toll-Free: 1 (888) 254-7336 / Tel: +1 714 879 7150
tribest.com | service@tribest.com

Follow us @tribestlife

