



WWW.VENTRAY.COM



PROFESSIONAL BLENDER

OWNER'S MANUAL

Please keep this manual for future references.
All pictures in this manual are for illustration
purposes only. The actual product may differ.

Household use only.

Thank you for choosing Ventray professional kitchen appliance!

Following the instructions in this owner's manual, you are about to see how easy and quick it is to prepare delicious meals.

Please read all safety information, warnings and operational guide before getting started. Always set your blender on a level surface and clean your blender before the first use and after each use.

- 4 Important safeguards
- 6 Parts
- 7 Control Panel
- 8 Operating instructions
- 13 Care and cleaning
- 14 Troubleshooting
- 14 Specifications

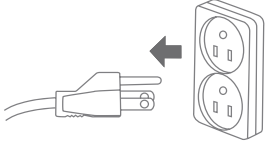

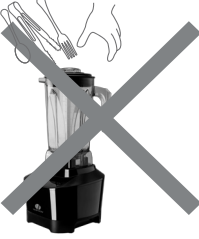



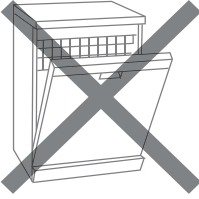





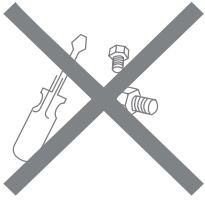



IMPORTANT




To avoid injury, read and understand the entire owner's manual before using this appliance.

IMPORTANT SAFEGUARDS

The following precautions are provided to ensure the safety of the user. Please carefully read through the precautions and exercise care when using the appliance.

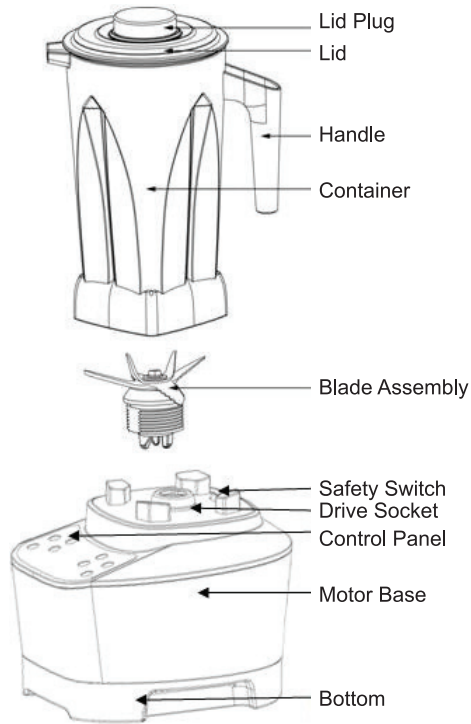
<p>Unplug the power cord when not in use.</p>  	<p>Do not put fingers, utensils or any object other than the included tamper into the blending jar. Severe injury may occur.</p>  
<p>Do not keep or operate the appliance near infants or toddlers; *It may injure them.</p>  	<p>Do not put any part of the blender in dish washer or extremely hot water. This may damage the blender or its parts.</p>  
<p>Do not use the appliance on an uneven surface; * It may cause a malfunction if the appliance tips over.</p>  	<p>Do not use any hazardous chemicals to clean the appliance; * It may change the color of the appliance or result in a fire.</p>  
<p>Do not repair, disassemble the base, or customize the appliance; * The appliance may not operate properly causing fire, electric shock, or injury.</p>  	<p>Do not spray water or flammable sprays near the appliance; * It may cause an explosion or electrical shock.</p>  

IMPORTANT SAFEGUARDS

 To avoid the risk of injury or death, the following basic safety precautions should always be followed when using your Ventray product.

- Read all instructions. Save these instructions for future references.
- To avoid risk of electrical shock, do not put motor or base of unit in water or other liquid.
- This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Close supervision is required when any appliance is used by or near children or incapacitated persons.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact Ventray at support@ventray.com at once for examination, repair, or replacement.
- The use of attachments not recommended or sold by Ventray may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Always operate blender with the lid and lid plug secured in place. The lid plug can only be removed when adding ingredients or using the tamper.
- The tamper provided must be used only when the main part of the lid is in place.
- Be sure to turn switch blender OFF after each use of your juicer. Switch off the appliance and disconnect from supply before disassembly, changing accessories or approaching any moving parts.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury and damage to the blender.
- Do not start an empty blender.
- Never attempt to disassemble the blender or access to the blade assembly. Severe injury may occur.
- Never attempt to start a blender with loose or damaged blades.
- Do not alter the appliance in anyway.
- Do not use the appliance for anything other than its intended purpose as described in the manual.
- The appliance should be used for limited duration each time to prevent overheat.
- Use caution when blending hot content. Spray or steam may cause severe injury.
- Do not fill container to or over the maximum capacity.
- When making oil-based foods, do not process for more than one minute after the mixture circulates.
- Keep away from heat source.
- If this appliance is given as a gift, please include the manual with the product.

PARTS



Lid

Always use the lid and the lid plug when the machine is in operation.

Lid Plug

Insert the plug through the lid and secure before starting the machine. The lid plug should only be removed when tampering or adding ingredients.

Container Jar

Install the container jar onto the base and make sure it sits properly before starting the blender.

Safety Switch

Safety switch is activated when the container is properly attached to the base.

Motor Base

Always make sure the blender base is placed on a level surface before operation.

CONTROL PANEL





- ON/OFF Power On / Standby. Stop / cancel a running program.
- PULSE Press and hold to run at maximum speed. Pulse function works only when no automatic program is selected.
- Manual**
 - 1 - 6 Manual speed selection
 - + Minimum / maximum speed. Decrease / increase speed when a speed is selected previously.
 - +20s Extend the current program by 20 seconds. If no program is running, blender will run at high speed for 20 seconds.
- Automatic**
 - Smoothies Smoothies
 - Frozen desserts Frozen desserts
 - Vegetable and fruits Vegetable and fruits
 - Hot soups Hot soups
 - Dry grind Dry grind (use the optional dry container for the best results. Dry container is not included and can be purchased from Ventray.)
- 1:03 Time remaining

MANUAL OPERATION

- ! Wash all parts except the base before first use.
- ! Always place the blender on a solid level surface before operation.

- 1 Plug the power cord into a grounded wall outlet.







WARNING	
	<p>Electrical Shock Hazard.</p> <ul style="list-style-type: none"> • DO NOT touch the power cord with wet hands. • DO NOT remove ground. • DO NOT use an adapter or extension cord.

- 2 Place ingredients in the container, install the container onto the base and attach the lid and lid plug securely. The Power On / Standby button  will light up to indicate standby mode.






- ! Incorrectly installed container and/or lid may cause severe injury.
- ? The blender will not start if the container is not properly installed.


- 3 Press the On/Off button  once to activate the blender.

4 High Speed Blending

- Press and hold pulse button  to run blender at high speed. Release the pulse button  to stop.
- Press  once to run blender at high speed for 20 seconds. Press  to stop at any time.
- Press  once to run blender at high speed for 1 minute. Press  to stop at any time.

Set Speed Blending

- Press  once to run blender at the lowest speed for 1 minute. Press  to stop at any time.
- Press one of the buttons  -  once to run at the set speed for 1 minute. Press  to stop at any time.

- ? Press  during any program to extend the program for 20 seconds.

? Use of the included tamper

- ! Use only the included tamper to avoid the risk of severe injury or damage to the blender.

- ! The tamper provided must be used only when the main part of the lid is in place.

Use the included tamper through the lid to push the ingredients to the blade when necessary. Replace the lid plug after tampering.

? Adding ingredients

Remove the lid plug and add ingredients as needed during blending. Replace the lid plug immediately after adding.

- 5 Wait until the blender stops completely before removing the container.

- ! Content may be hot after long period of high speed blending. Handle with caution.

- ! Always unplug the blender from power source when not in use.

AUTOMATIC PROGRAMS

- ❗ Wash all parts except the base before first use.
- ❗ Always place the blender on a solid level surface before operation.

- 1 Plug the power cord into a grounded wall outlet.

WARNING

Electrical Shock Hazard.

- DO NOT touch the power cord with wet hands.
- DO NOT remove ground.
- DO NOT use an adapter or extension cord.

- 2 Place ingredients in the container, install the container onto the base and attach the lid and lid plug securely. The On/Off button will light up to indicate standby mode.

- ⚠ Incorrectly installed container and/or lid may cause severe injury.
- ❓ The blender will not start if the container is not properly installed.

- 3 Press the On/Off button once to activate the blender.

- 4 Press one of the automatic program buttons once. The blender will run through the program for the preset time and speed.

	Smoothies	Preset time 45 seconds.
	Frozen Desserts	Preset time 1 minute 35 seconds.
	Vegetables / Fruits	Preset time 1 minute 30 seconds.
	Hot Soup	Preset time 8 minutes.
	Dry Grind Nuts	Preset time 45 seconds. For the best results, use the dry grind container for this program.

- ❓ Press the same program button again during any program to pause/resume the program.
- ❓ Press during any program to extend the program for 20 seconds at its final speed.
- ❓ Press during any program to stop the program.

❓ Use of the included tamper

- ⚠ Use only the included tamper to avoid the risk of severe injury or damage to the blender.

- ⚠ The tamper provided must be used only when the main part of the lid is in place.

Use the included tamper through the lid to push the ingredients to the blade when necessary. Replace the lid plug after tampering.

❓ Adding ingredients

Remove the lid plug and add ingredients as needed during blending. Replace the lid plug immediately after adding.

- 5 Wait until the blender stops completely before removing the container.

- ⚠ Content may be hot after long period of high speed blending. Handle with caution.
- ⚠ Always unplug the blender from power source when not in use.

OPERATING INSTRUCTIONS





Always make sure the blender is switched OFF and unplugged from the power outlet when not in use.

- ❗ Operating the blender without ingredients can cause damage to the blender.
- ❗ The maximum set time for any speed or program is 10 minutes.
- ⚠ Do not put fingers or other objects into the container. Always use provided tamper when needed. Severe injury and/or damage to the blender may occur if other objects are inserted into the container during operation.
- ❗ Do not overfill the container. The container should not be more than two-thirds full when the tamper is used during blending.
- ❗ Do not use the tamper for more than 30 consecutive seconds to prevent overheating.

CARE AND CLEANING

CONTAINER

- ❗ Follow this cleaning procedure before first use.
 - ⚠ Do not put any part of the blender in dish washer.
 - ❗ Always place the blender on a solid level surface before operation.
- 1 Rinse the container jar and lid directly under running water.
 - 2 Fill the container half full with clean water. Add a few drops of liquid dish detergent if necessary. Attach the lid and lid plug.
 - ⚠ Incorrectly installed container and/or lid may cause severe injury.
 - ❓ The blender will not start if the container is not properly installed.
 - 3 Activate the blender by pressing  once. Then press the pulse  button to clean for 30 - 60 seconds.
 - 4 Remove the container, pour content out, rinse and drain.

MOTOR BASE

- ⚠ DO NOT put the motor base in water or other fluid.
- 1 Unplug the motor base from power source before cleaning.
 - 2 Wipe the motor base with clean soft cloth. Do not use water.

LID, PLUG AND TAMPER


- 1 Separate the lid and lid plug
- 2 Wash parts in soapy water, rinse and wipe dry.

TROUBLESHOOTING

? Power on / Standby button does not light up

- Check if the power plug is correctly plugged into a working outlet.
- Check if the container jar is installed correctly onto the motor base.
- Remove the container jar and re-install if needed.

? Blender stops during operation

- Check power source, always connect the blender to a grounded wall outlet.
- Check if the container is installed correctly onto the motor base.
- Blender will pause when the same program button is pressed again.
- Blender program will stop when the power on / standby button  is pressed.
- Do not press two program buttons at the same time.
- Check if container is overloaded. Remove the container from the base and take out some ingredients if necessary.
- The Ventray blender is equipped with overheat protection feature. Prolonged running may cause it to overheat and stop automatically. Let the blender cool down for 30 minutes before restarting.

SPECIFICATIONS

Product	Ventray Professional Blender
Type	High Speed Blender
Model	Ventray Pro 600
Rated Power	1500W
Weight	4.58 kg / 10.1 lbs
Dimension	47.2 x 24.1 x 20.5 cm / 18.6 x 9.5 x 8.1 inches