



[WWW.VENTRAY.COM](http://www.ventray.com)

STAND MIXER ATTACHMENT  
**FRESH PREP SLICER/  
SHREDDER ATTACHMENT**

Instruction Manual



Before operating this unit, please read these instructions completely.

**SAVE THESE INSTRUCTIONS**

This product is designed for household use only.



Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word “**DANGER**” or “**WARNING**.” These words mean:

You can be killed or seriously injured if you don't immediately follow instructions. All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## IMPORTANT SAFEGUARDS



When using electrical appliances and this attachment, basic safety precautions should always be followed, including the following:

- Read all instructions.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## IMPORTANT SAFEGUARDS

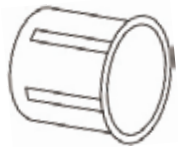
- To avoid electric shocks, do not use this device in the vicinity of water. Do not immerse the stand mixer in water or other liquid.
- Switch off the appliance and always disconnect the plug from the power socket (pull out the plug) after each use of the appliance and the slicer/shredder, before assembling the slicer/shredder attachment and accessories, changing accessories, cleaning or in case of malfunction.
- Do not use stand mixer and the slicer/shredder attachment without supervision. Always turn the appliance off, when you leave the room. Pull the plug out of the socket. Close supervision is necessary when any appliance is used near children.
- Keep the attachment away from children. The device should be used and stored out of the reach of children.
- Never feed food by hand. Always use the provided food pusher.
- Please place the appliance on a stable and flat table. It will cause injury if it is placed on uneven level.
- Keep hands, utensils or other objects away from the attachment with slicing and shredding blades, or moving parts while it is in operation.
- If the food is lodged in any blade or the feed tube, turn the switch off, pull out the plug and disassemble the attachment first, then to remove the remaining food.
- Do not touch any moving parts during the use.
- Do not use the appliance if it is damaged.
- Do not let the power cord fall from the edge of the table, the power cord winding around the object or fuselage will make the product fall and cause damaged.
- Do not use mixer for other than intended use. Do not put hard food such as bones, nuts, hard fiber, etc.
- All of the Blades are sharp. Please handle carefully when inserting or removing blades.
- Do not remove food until the stand mixer is OFF and the blade stops.
- Do not attempt to repair the device yourself, since you will be exposed to hazardous live components or other hazards. Repairs should only be carried out in a qualified workshop.
- No liability is accepted for damage due to improper use or the failure to observe our operating instructions / safety notes.

# READ ALL INSTRUCTIONS

## INTRODUCTION

Easily add freshly sliced or shredded ingredients to all of your favorite salads, entrees, sides, and more. Simply attach the Slicer/Shredder Attachment to the power hub of your Stand Mixer.

## PARTS AND FEATURES



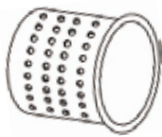 
Slicing blade



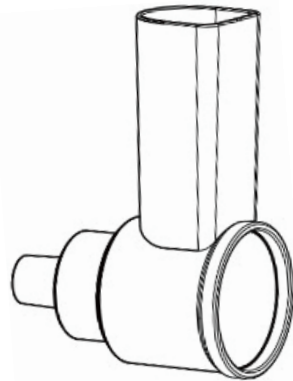 
Coarse shredding blade



Food pusher



Medium shredding blade



Attachment housing

## FUNCTION

Parts	Housing	Suggested Food	Suggested Speed
Slicing blade	Housing and Pusher	Carrots Cucumber Potatoes Zucchini Cabbage(shred)	2
Coarse shredding blade		Potatoes Zucchini	
Medium shredding blade		Carrots Beets Cauliflower	

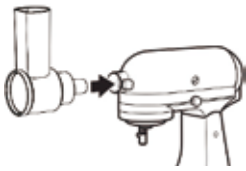 
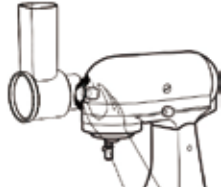 
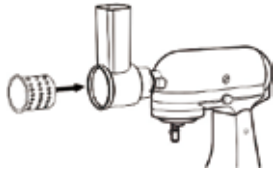 


**NOTE:** Feed only one item at a time into the feed tube (ex. carrot). Do not feed items into the feed tube by hand; always use the food pushers.

# TRIAL USE

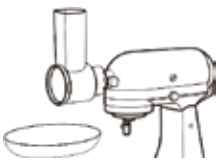


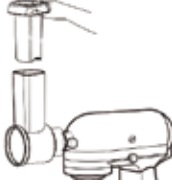
## 1 Assembling

**!** **ATTENTION!** Before assembling, turn the stand mixer off and unplug first.

		
1. Insert the housing into the attachment hub, making certain the power shaft fits into the square of hub socket.	2. Tighten the attachment hub knob until the attachment is completely secured to the mixer.	3. Slide the blade you want to use into the housing.

## 2 Using

**!** **WARNING!** Rotating blade hazard. Always use food pusher. Keep fingers out of openings.

			
1. Assembling ready.	2. Cut food to fit the feed tube.	3. Turn the mixer to speed 2-3 (suggested)	4. Use food pusher to feed the food.

# CLEANING AND MAINTENANCE

## 1 Before cleaning

- Make sure that the switch knob is at the "OFF" position.
- Make sure the motor has stopped completely.
- Disconnect the plug from the power outlet.

**!** **IMPORTANT:** The housing of the Slicer/Shredder attachment is NOT Dishwasher Safe! It must be hand washed using warm, soapy water. The Slicer/Shredder attachment blades and accessories are dishwasher safe, top rack only.

## 2 To clean the Slicer/Shredder attachment

- First completely disassemble the Slicer/Shredder attachment.
- Recommend Hand Wash for all parts.
- Recommend to rinse and dry them thoroughly after washing to prevent discoloration and stay in peak condition.
- For best cleaning, rinse blades immediately after use. If necessary, use a dish washing brush.

**!** **NOTE:** Do not use a wire brush or other abrasive cleaning solutions. Never use sharp or scouring cleaning materials.

**Remark:** This Slicer/Shredder Attachment is designed for KitchenAid Stand Mixers, but not a KitchenAid brand, KitchenAid is registered trademarks of their respective owners and is not endorsing, sponsoring, or associated with us.

*Thank you for your reading and support.*

*We wish you a happy life and good health.*

*Sincerely hope we can continuously provide you with better products and service.*