

Round Glass Guard Assembly Instructions

⚠ WARNING ⚠



HOT GLASS WILL CAUSE
BURNS

DO NOT TOUCH GLASS
UNTIL COOLED

**HOT SURFACE
DO NOT TOUCH**



NEVER ALLOW
CHILDREN TO TOUCH
GLASS

⚠ WARNING ⚠

- Children and adults should be alerted to the hazards of high surface temperatures and open flames and should stay away to avoid burns or clothing ignition.

- Young children should be carefully supervised when they are in the area of the appliance.







- High Temperatures may ignite clothing or other flammable materials.

- Clothing or other flammable materials must not be placed on or near the glass guard

INCLUDED IN THIS KIT

ATTENTION:

Before you begin assembly, inspect all parts for damages.

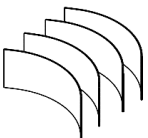
<p>1</p>  <p>4X Top Clip (5X, GG-30)</p>	<p>2</p>  <p>4X Bottom Clip (5X, GG-30)</p>
<p>3</p>  <p>4X Rod (5X, GG-30)</p>	<p>4</p>  <p>4X Pad (5X, GG-30)</p>
<p>5</p>  <p>4X Glass Panels (5X, GG-30)</p>	<p>6</p>  <p>16X Set Screw (20X, GG-30)</p>

ASSEMBLY INSTRUCTIONS


Assemble glass guard upside down, and flip over after assembly.

Required Tools:


- Phillips head screwdriver - for tightening rod
- Flat head screwdriver - for tightening set screws
- Soft leather gloves - for handling glass panel

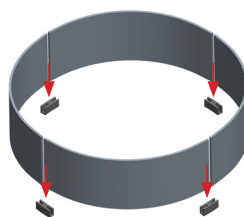


Insert glass panels into top clips (without through holes) as shown above.

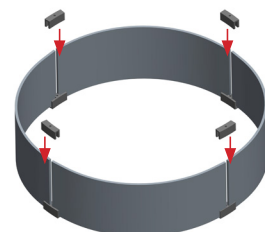


Secure bottom clips to glass panels as shown above.

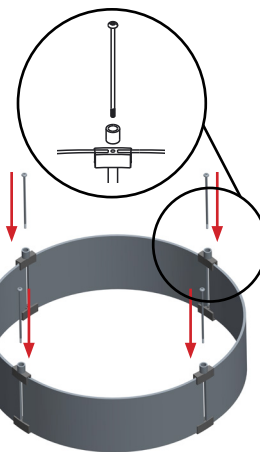

Insert rod through pad, then bottom clip and finally screw into top clip as shown above.

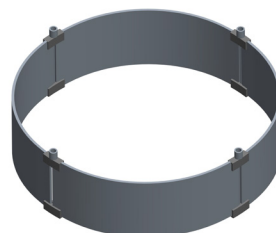

Using a Phillips head screwdriver, tighten rods into top clip so the last thread is not visible. Flip glass guard over once fully assembled.

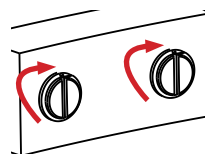

Using a flat head screwdriver, hand tighten set screws on both top and bottom clips. Tighten until silicone pad makes contact with glass surface and then turned 1.5 to 2 turns beyond.

⚠ WARNING ⚠

Allow glass to cool before touching. If picking up the glass guard to move for any reason, grip the middle of two opposite glass panels and apply constant pressure towards the inside of the glass guard.

CARE AND USAGE TIPS

- Clean glass with water, white vinegar, or commercially available streak-free glass cleaner and a soft cloth.
- Never attempt to clean glass while hot.
- **DO NOT** touch glass while in operation or for 10 minutes following use. **IT WILL BE HOT!**
- For a permanent installation, outdoor-rated silicone adhesive can be used to affix Glass Guard to a fire pit surface.
- Check that rods and clips are secured every few months. Tighten rod with screwdriver if loose.

The Outdoor GreatRoom Company Glass Guards Limited Warranty

The Outdoor GreatRoom Company extends the following warranty for Outdoor GreatRoom Glass Guards used in the United States of America or Canada. Dealers and employees of The Outdoor GreatRoom Company have no authority to make any warranty or authorize any remedies in addition to or inconsistent with the terms of this warranty. This warranty gives you specific legal rights. You may also have other rights that vary from state to state.

The Outdoor GreatRoom Company warrants that this Outdoor GreatRoom Glass Guard (the "Product") will be free from defects in material and workmanship for a period of 90 days from its date of purchase. Stainless steel parts and assemblies carry a limited lifetime warranty. This warranty is subject to the conditions, exclusions and limitations described below.

This warranty applies only to the original owner of the Product and is non-transferable. The Outdoor GreatRoom Company obligation under this warranty does not extend to damages resulting from (1) assembly, operation or maintenance of the Product not in accordance with the Installation/Assembly Instructions, Operating Instructions and the Listing Agency Identification Label furnished with the Product; (2) installation or use which does not comply with local building codes and ordinances; (3) shipping, improper handling, improper operation, abuse, misuse, accident or unworkmanlike repairs; (4) use of fuels other than those specified in the Operating Instructions; (5) Installation or use of components not supplied with the Product or any other components not expressly authorized and approved in writing by The Outdoor GreatRoom Company; and/or (6) modification of the Product not expressly authorized and approved in writing by The Outdoor GreatRoom Company. Any of the circumstances described in the previous sentence voids this warranty. This warranty is void if the Product or any component has been removed, repaired, or replaced before The Outdoor GreatRoom Company has been afforded a reasonable opportunity to inspect the Product.

This warranty is limited to the replacement or repair of defective components or workmanship and The Outdoor GreatRoom Company may fully discharge its obligations under this warranty by repairing or replacing, at its discretion, the defective components. The Outdoor GreatRoom Company will provide replacement parts at no charge and will pay reasonable and necessary labor and freight costs related to replacing or repairing defective components under this warranty. The maximum amount recoverable under this warranty is limited to the purchase price of the Product and, if The Outdoor GreatRoom Company is unable to provide replacement or repair in an expedient and cost-effective manner, The Outdoor GreatRoom Company may discharge all obligations under this warranty by refunding the purchase price of the Product.

EXCEPT TO THE EXTENT PROVIDED BY LAW, THE OUTDOOR GREATROOM COMPANY MAKES NO EXPRESS WARRANTIES OTHER THAN THE WARRANTY EXPRESSED HEREIN. THE DURATION OF ANY IMPLIED WARRANTY IS LIMITED TO THE DURATION OF THE WARRANTY SPECIFIED ABOVE. IN NO EVENT SHALL THE OUTDOOR GREATROOM COMPANY BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY DEFECTS IN THE PRODUCT. Some states do not allow limitations on how long an implied warranty lasts, or do not allow exclusion or limitation of incidental or consequential damages, so these limitations may not apply to you.

To obtain service under this warranty, you must:

1. Send written notice of the claimed condition to: The Outdoor GreatRoom Company, 14400 Southcross Drive Suite #100, Burnsville, MN 55306.
2. Affirm that you are the original owner of the Product.
3. Provide The Outdoor GreatRoom Company reasonable opportunity to investigate the claim, including reasonable opportunity to inspect the Product prior to any repair or replacement work and before the Product or any component of the Product has been removed.