
## **Assembly Instructions**

- 1) Put in 4 screws to connect the main body with the dolly.
- 2) Make sure the UV cart is stable and moves smoothly.
- 3) Warning: Please stop using the UV cart when any screws or wheels are loose. Wait until the issues are resolved to re-use the UV cart.

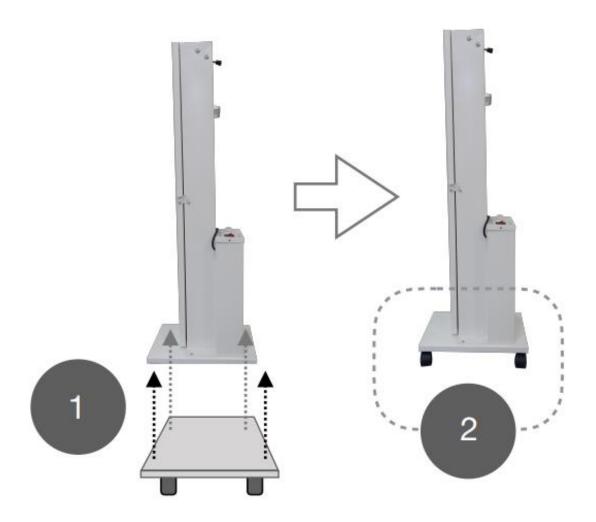

#### **Five levels of Controls**

## 1) ON-OFF button –

Turn off the ON-OFF button will shut off the UV cart immediately. Turn on the button will turn on UV cart after 15 seconds of delay. Leave the button ON for other levels of control.

## 2) Occupancy sensor with automatic shut-off –

UV cart is shut down immediately if occupancy is detected UV cart is turned on after no occupancy is detected for 15 seconds.

## 3) Timer Wheel –

Turn the timer knob to the right to set timer from 1 to 60 minutes. Turn the timer knob to the left to keep the UV cart always on.

## 4) Remote Control -


ON/OFF button to turn on/off the cart remotely Press the buttons of 15', 30', or 60' to set up timer options.

Timer Wheel & Remote-Control functions in parallel. Either one turns on will keep the circuit on.

# 5) Smartphone App control –

Turn on/off the UV Cart by pressing the switch button on screen. Add a timer event to turn on/off after any period of time. Press Work Log button to see the working log for this UV cart



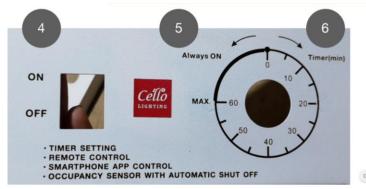

#### **Power-on Instructions:**

- 1) Plug in the power cord into the socket
- 2) Turn on the ON-OFF button, there will be a 15-second delay.
- 3) Set Timer Wheel at the 0 location (OFF)
- 4) If the indicator on gateway is red, the gateway is on and leave it along.
- 5) If the indicator on gateway is blue, press the switch button, the WiFi indicator should turn red. And the gateway is ON.
- 6) Bring the remote control and smartphone with you and leave UV cart.

## **Timer set-up using Timer Wheel**

- 1) If the UV light is off, approach the UV cart
- 2) Turn the Timer Knob to 1-60 minutes to set up timer.

## **Timer set-up using Remote Control**

- 1) If the UV light is off, approach the UV cart
- 2) Set Timer Wheel at the 0 location (OFF)
- 3) Walk away and use Remote Control to set timer

# Timer set-up / Schedule using Smartphone App

- 1) Start the Smartphone App
- 2) Use Timer function to add a ON/OFF timer event
- 3) Use Schedule function to schedule a On/OFF event.