 


WARNING: This fixture must be installed in accordance with the National Electric Code and local code specifications. Failure to follow these codes and installation instructions will void the warranty and may result in serious injury and/or damage to the fixture. DO NOT SUBMERGE IN WATER. This product is designed for above ground installation only.

 
SAVE THESE INSTRUCTIONS: This guide contains important safety and operating instructions for lighting units.

- DO NOT** use with extension cords
- DO NOT** submerge in water
- DO NOT** exceed the rated voltage of the unit
- DO** plug in to a circuit with a dimmer

1. The product's sole use is for low voltage lighting systems.
2. Always disconnect the transformer from the electrical outlet before working on or installing this unit and/or any part of the lighting system.
3. This product may be mounted in an indoor or outdoor location.
4. This product must be connected to a 12-15 VAC transformer.

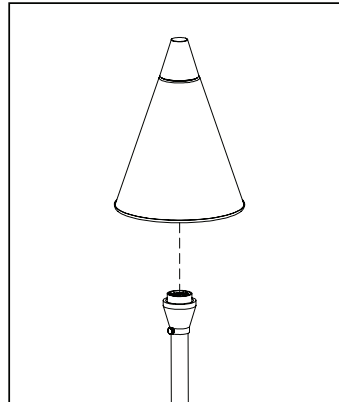

STEP 1: Screw tiki torch onto threaded post

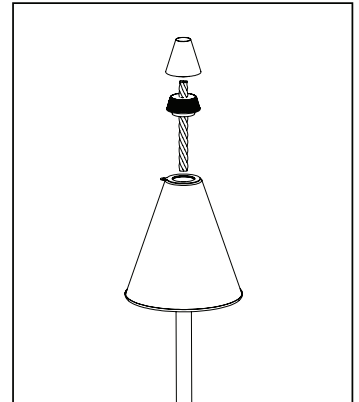


STEP 2: Unscrew wick holder from tiki torch. Fill tank with approved tiki torch fluid. Replace wick holder.

WIRING INSTRUCTIONS

We recommend using 12 AWG low voltage UL rated direct burial landscape wire.

1. Unplug the landscape power transformer.
2. Connect one wire of the Main Trunk Line to the Common terminal and connect the other wire of the Main Trunk Line to the 12, 13, 14, or 15 VAC terminal on the landscape 12VAC transformer.
3. At the light, cut the Trunk Line and connect wire to one wire from the light and the other wire in the light (See Figure 1)
4. Use the Outdoor Rate Waterproof Wire Nut Connectors to connect the wires together. If you would like to add more lights to the trunk line, then include continuation of the trunk line as well.

 FIGURE 1

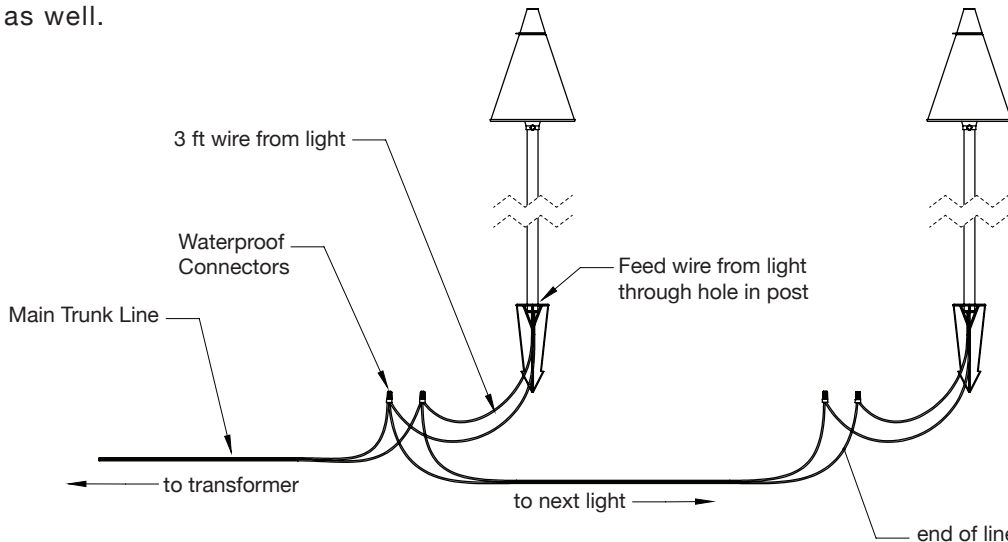

TIP: The lights need at least 11 VAC to work properly. Based on voltage drop due to load on the Main Trunk Line, you may need to move up a voltage terminal to assure there is a minimum of 11 VAC at the light.

Haven Smart Key™

PATENT PENDING

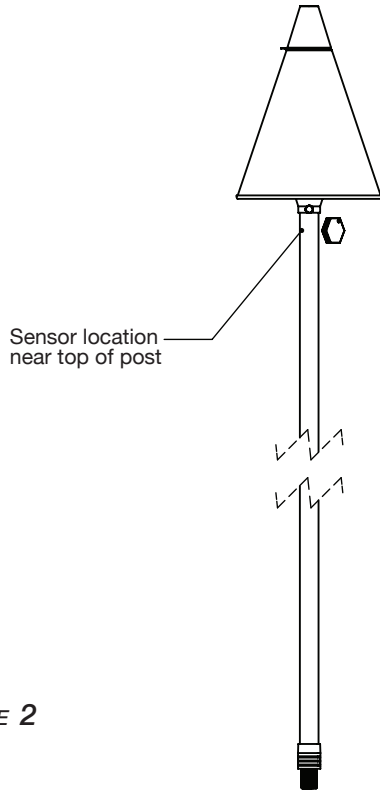 


FIGURE 2

Use the Haven Smart Key™ to select up to 5 Brightness Options

1. With the light powered on, place the BRIGHTNESS side of the Haven Smart Key™ next to the top of the stem with BRIGHTNESS facing the stem.
(See Figure 2)
2. Move the key around the stem until the light starts to flash. Once the light starts to flash, the sensor has detected the Haven Smart Key™ and the light will enter programming mode.
3. Keep the Haven Smart Key™ held in that location. The light will cycle through the brightness options starting with the dimmest value.
4. Once the light gets to the brightest setting it will stop. When you get to the brightness you desire, move the Haven Smart Key™ away from the light.
5. After approximately 3 seconds, the light will flash again, indicating the change has been made. The light will remain this color even after a power cycle.

TIP: If you pass the brightness you want while you are still in programming mode, flip the Haven Smart Key™ around to the other side and the light will cycle through the brightness levels in reverse order. Once you have selected your brightness, move the Haven Smart Key™ away from the light.