

F-C-125-H Water Nozzle with Misting Spray Tip

1. With the trigger handle in off position (straight out) screw the spray nozzle onto the end of your garden hose.
2. Turn on the water faucet to your garden hose.
3. While pointing the nozzle at the ground, pull the trigger handle into the on position; by pulling the trigger handle straight back.

Note: With this product it's important to remember that there is an automatic shut-off when the trigger handle is released.

4. Your spray nozzle comes with the misting spray tip already screwed onto the spray nozzle.
5. For ease of operation, after you started spraying lock the "D" ring up over the bottom end of the trigger handle for a constant flow.
6. The misting spray tip may be removed from the nozzle, to provide you with a full-flow.
7. 250 PSI MAX

1)

2) 3) While pointing the nozzle at the ground, pull the trigger handle into the on position; by pulling the trigger handle straight back.

Note: With this product it's important to remember that there is an automatic shut-off when the trigger handle is released.

4)

5)

6)

7)