

### F-C-125 Reversible Nozzle Water Spray Nozzle

- 1) With the trigger handle in off position (straight out) screw the spray nozzle onto the end of your garden hose
- 2) Turn on the water faucet to your garden hose.
- 3) While pointing the nozzle at the ground, pull the trigger handle into the on position; by pulling the trigger handle straight back.  
**Note:** With this product it's important to remember that there is an automatic shut-off when the trigger handle is released.
- 4) Finding the spray pattern that you want. Your spray nozzle comes with the spray tip already screwed onto the spray nozzle. Depending on which way it is screwed onto the nozzle you will either get a full cone spray or a straight stream spray. Changing the spray pattern is easy simply unscrew the spray tip from the spray nozzle, turn the spray tip around and screw it back onto the spray nozzle. This will give you the spray pattern your looking for.
- 5) For ease of operation, after you found the spray pattern that you want for the job at hand, lock the "D" ring up over the bottom end of the trigger handle.
- 6) Max 250 PSI