

### F-S-125 Adjustable Nozzle Water Spray Nozzle

- 1) With The trigger handle in the off position (straight out) screw the spray nozzle onto the end of your garden hose.
- 2) Turn on the water faucet to your garden hose.
- 3) While pointing the nozzle at the ground, pull the trigger handle into the on position; by pulling the trigger handle straight back.  
**Note:** With this product it's important to remember that there is an automatic shut-off when the trigger handle is released.
- 4) To find the spray pattern that you want, twist the barrel of the adjustable spray tip from right to left and then left to right. The adjustable spray tip can be removed for easy filling of buckets and other jobs that require a full flow of water.
- 5) For ease of operation, after you found the spray pattern that you want for the job at hand, lock the "D" ring up over the bottom end of the trigger handle.
- 6) Max 250 PSI