

Congratulations on your decision to purchase a Freeflow spa. Welcome to the growing family of Freeflow spa owners.

Pre-Delivery Instructions

Please take the time to read this booklet carefully, as it will provide you with the information you will need to ensure the safe, secure, and timely installation of your new spa. The following sections are guidelines on how to prepare for delivery and set-up of your new spa. Specifically covered are site selection, delivery access, ground preparation, and electrical requirements.

Remember to carefully review the Owner's Manual that accompanies your spa, and to register the spa's warranty within 10 days of delivery at freeflowspas.com/owners-corner The Owner's Manual can be found in the Owner's Package which has been attached to the filter ring of your spa.

Watkins Wellness™ reserves the right to change features, specifications and design without notification and without incurring any obligation.

DATE PURCHASED:	 _
DATE INSTALLED:	
DEALER:	
ADDRESS:	
TELEPHONE:	

In most cities and counties, permits will be required for the installation of electrical circuits or the construction of exterior surfaces (decks and gazebos). In addition, some communities have adopted residential barrier codes which may require fencing and/or self-closing gates on the property to prevent unsupervised access to a pool (or spa) by children under 5 years of age. Your spa is equipped with a locking cover that meets the ASTM F1346-91 Standard for Safety Covers and as a result, is usually exempt from most barrier requirements. As a general practice, your local Building Department will inform you of any applicable barrier requirements at the time a permit is obtained for the installation of an electrical circuit. Your dealer can provide information on which permits may be required.

Site Selection and Preparation

IMPORTANT: Site selection and preparation are your responsibility. Carefully read these instructions and consult your authorized dealer if you have any questions.

You probably have a spot picked out for your new spa, whether it's indoors or outdoors, on a patio or on a deck. Just make sure you check the following:

- Always put your spa on a structurally sound, level within ½" per 10' (1 cm per 3 m) surface. A filled spa
 can weigh a great deal. Make certain that the location you choose can support the weight of your filled
 spa.
- Locate your spa away from any reflective surface or glass. The heat generated by some types of doublepane windows and reflective surfaces can cause serious damage to the exterior of the spa, including the siding and cover.
- Locate your equipment compartment, which houses all of the electrical components, in a place
 where water will drain away from it. Allowing water into the equipment compartment can damage the
 electronics, or may result in tripping your house's circuit breaker.
- Leave yourself easy access to the circuit breakers in the subpanel (230 volt converted models), or to the GFCI on the end of the power cord (115 volt models).
- Never let water get into the subpanel (230 volt converted models), or into the GFCI (115 volt models), or into the electrical outlet that your spa is plugged into.
- Leave access to the equipment compartment for periodic spa care and maintenance.

OUTDOOR AND PATIO INSTALLATION

No matter where you install your new spa, it's important that you have a solid foundation to support it. Structural damage to the spa resulting from incorrect installation or placement on an inadequate foundation is not covered under the spa's limited warranty.

If you install the spa outdoors, a reinforced concrete pad at least four inches (10 cm) thick is suggested. The reinforcing rod or mesh in the pad should be attached to a bond wire. All spas may be installed onto a deck, provided that the load capacity of the deck is greater than the dead weight of the spa.

DECK INSTALLATION

To be certain your deck can support your spa, you must know the deck's maximum load capacity. **Consult a qualified building contractor or structural engineer before you place the spa on an elevated deck or indoors.** To find the weight of your spa, its contents and occupants, refer to the Spa Specification chart on back of this guide. This weight per square foot must not exceed the structure's rated capacity, or serious structural damage could result.

INDOOR INSTALLATION

Be aware of some special requirements if you place your spa indoors. Water will accumulate around the spa, so flooring materials must provide a good grip when wet. Proper drainage is essential to prevent a build-up of water around the spa. When building a new room for the spa, it is recommended that a floor drain be installed. The humidity will naturally increase with the spa installed. Water may get into woodwork and produce dry rot, mildew, or other problems. Check for airborne moisture's effects on exposed wood, paper, etc. in the room. To minimize these effects, it is best to provide plenty of ventilation to the spa area. An architect can help to determine if more ventilation must be installed.

Your dealer can help you with local information such as zoning regulations and building codes.


DELIVERY ACCESS

First, locate the dimensions of your spa on the following chart. The dimensions shown are the measurements of the spa in the vertical position, laid on its side.

Next, contact your dealer to find the height and width added by the delivery cart which the dealer will use to deliver your new spa. Use the height of the cart plus the dimension shown as H to determine the vertical clearance required to pass the spa and cart. Use the width of the cart, or dimension W, whichever is greater, to determine the maximum width of clearance necessary.

NOTE: It may be necessary to allow for additional over-head clearance if the spa will be rolled up or down an incline or moved up or down a short flight of stairs.

Use the information below to determine the requirements for access to your desired location. Use the length dimension L when making any sharp turns to determine the maximum clearance required.

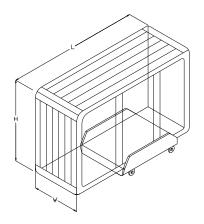

Model	Width W	Length L	Height H
Monterey™ / Premier	34" (86 cm)	7'3" (221 cm)	6'5" (196 cm)
Excursion® / Premier	33" (84 cm)	7'2" (218 cm)	6'5" (196 cm)
Azure™ / Premier	33" (84 cm)	6'8" (203 cm)	5'3" (160 cm)
Aptos®	34" (86 cm)	6'6" (198 cm)	6'6" (198 cm)
Cascina®	32" (81 cm)	5'8" (173 cm)	5'3" (160 cm)
Tristar™	31" (79 cm)	5'10" (178 cm)	5'10" (178 cm)
Mini™	28" (71 cm)	6' (183 cm)	3'11" (119 cm)

Use Chart with Cart illustration above How is your width clearance? **BACK YARD** Check all gates Protruding electric meters Gas meters A/C units Do you have sufficient overhead clearance? Check low roof eaves, overhanging branches, rain gutters **HOUSE** Is the path clear? Move away branches, dog houses, firewood, etc. If there is a 90° turn, can we clear it? (The spa will not bend) No more than 6 consecutive stairs without a landing STREET It may be necessary to remove a gate, part of a fence, or other movable obstructions in order to roll the spa to its installation site. About ten percent of the time, a crane is the only way to install the spa by lifting it to its final destination.

If the spa has to be taken off of the cart to go over a wall (either because the entry area is too narrow, the eaves are too low, the corner is too tight, or the stairway is too steep), a crane will be required. Don't be alarmed!

The crane has a truck-mounted boom which can fit right in your driveway. It is run by a licensed and insured operator. For a charge, the crane operator will lift your spa over walls, buildings, or any other obstruction and place it as close to the installation site as possible.

NOTE: If your spa delivery requires the use of a crane, you may be required to pay for its services at the completion of the delivery.

GROUND PREPARATION

Your spa has been engineered to perform on all kinds of common yard surfaces. While a concrete slab is best for long-term use*, other foundations are acceptable so long as a level base is prepared prior to delivery. Three foundation base pictures, shown at right, represent examples of alternatives to a concrete slab for spas installed without gazebos or other accessories.

NOTE: A reinforced concrete pad at least four inches (10 cm) thick is recommended.


INSTALLATION NOTES:

As a homeowner, it is your responsibility to provide a suitable, level foundation for your spa. Keep in mind that most delivery crews are not equipped to level and prepare spa sites.

If you are interested in having a concrete slab, brick surface, or wood deck installed, your dealer should be able to suggest a qualified, licensed contractor


Remember, placing the spa around grass or dirt may increase the amount of debris which is inadvertently brought into the spa water on the user's feet.

NOTE: In order for the spa to operate properly and the internal plumbing to drain completely, you must ensure that the spa is leveled within $\frac{1}{2}$ " per 10' (1 cm per 3 m) after it has been installed. Do not shim you spa in any manner, as this could cause the cabinet to warp, thereby voiding the warranty.

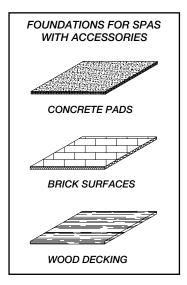

MONTEREY/PREMIER


Dimensions

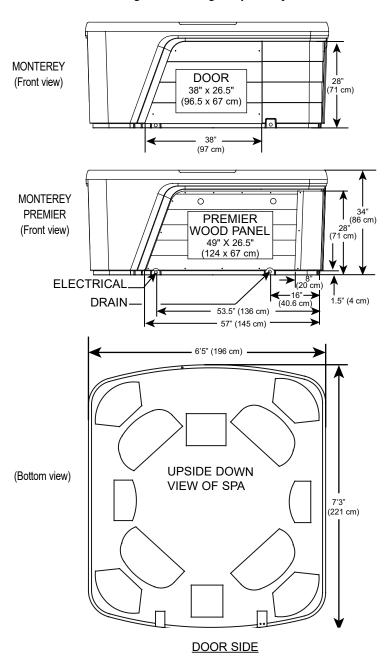

EXCURSION/PREMIER

Dimensions


NOTE: All dimensions are approximate; measure your spa before making critical design or pathway decisions.

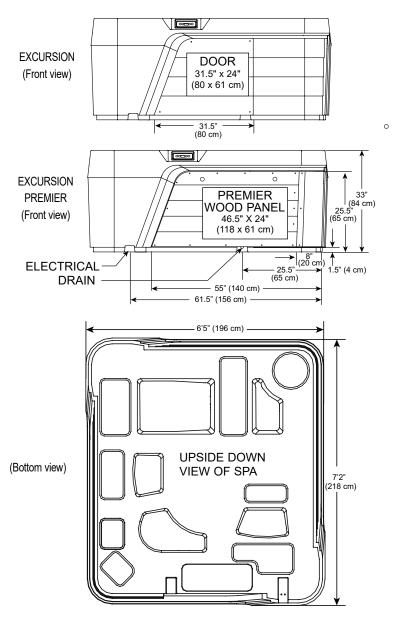

DOOR SIDE

AZURE/PREMIER


Dimensions

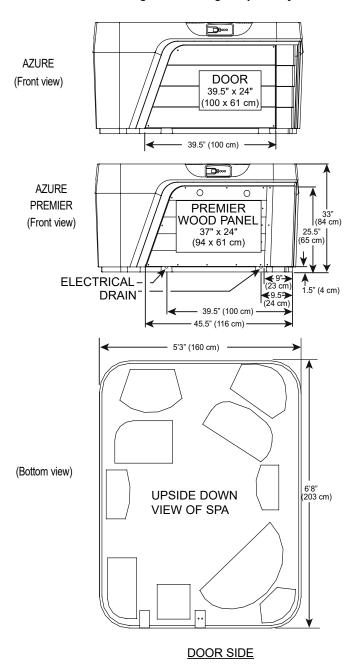


APTOS

Dimensions

NOTE: All dimensions are approximate; measure your spa before making critical design or pathway decisions.

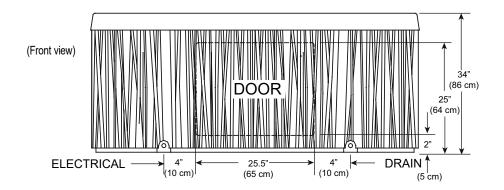


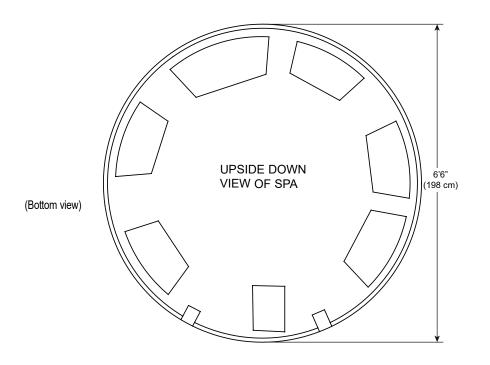

DOOR SIDE


CASCINA


Dimensions

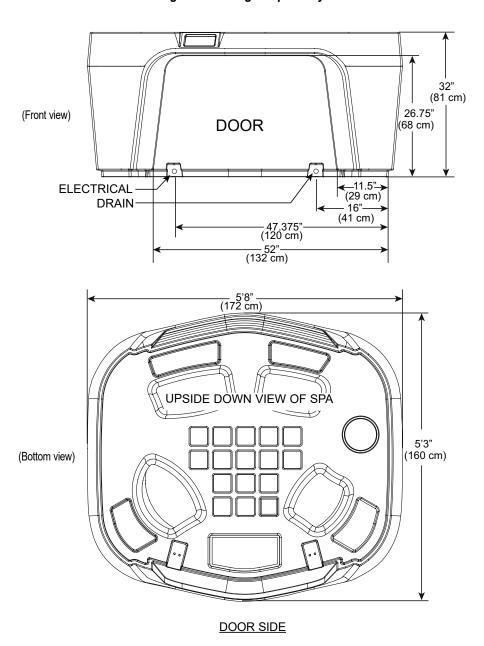

TRISTAR


Dimensions

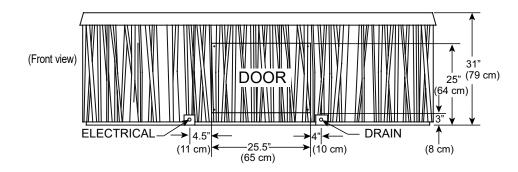


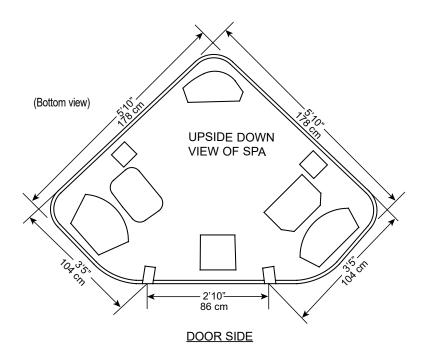

MINI

Dimensions

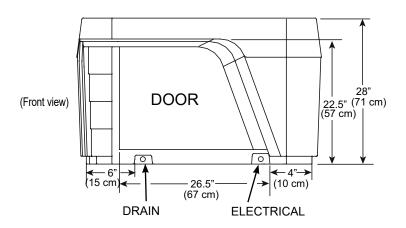

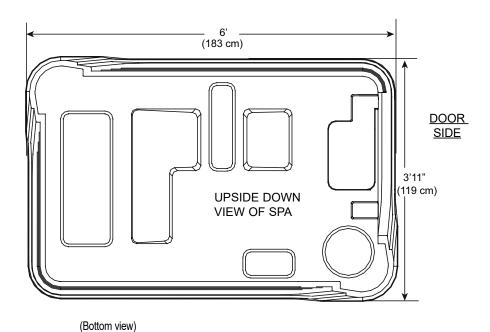

ELECTRICAL REQUIREMENTS

To ensure you will have an opportunity to use your spa soon after delivery, it is very important that the required electrical service has been installed. Unless otherwise stipulated by your dealer, THIS IS YOUR RESPONSIBILITY.

IMPORTANT: All electrical circuits must be installed by a qualified, licensed electrician.

Freeflow spas are available as 115 volt or 230 volt convertible heating systems. These models come standard from the factory with 115 volt heating systems; however, with the addition of a subpanel and a control box wiring change, they can be converted to 230 volt operation. See the following sections for the electrical requirements for 115 volt operation, and 230 volt converted operation.

115 VOLT 15 AMP OPERATION REQUIREMENTS

Cord Connected: The heater will provide approximately 1000 watts of heat only when the pump is operating in LOW speed and the thermostat is calling for heat. **NOTE:** The heater does not operate when the pump is on high speed.

It is highly recommended that the 115 volt spa be on a dedicated 15 amp, 115 volt circuit.

Each 115 volt model comes equipped with approximately 13 feet (4 m) of usable power cord. (This is the maximum length allowed by ETL.) When the spa is installed, the power cord will come out of the bottom of the equipment compartment.


In addition to the dedicated 15 amp, 115 volt GFCI protected circuit, your spa requires a 15 amp single receptacle. This receptacle should contain an outdoor-rated, weather-resistant receptacle cover plate. The single receptacle and cover plate should be installed by your electrician prior to the delivery of your spa.

For your safety, when your electrician is installing the electrical outlet, it should be no closer than five feet (1.5 m) and no farther than ten feet (3 m) from the spa. (Reference National Electric Code 680-6a(1) and 680-41a.)

WARNING: Do not connect your spa to an extension cord!

The 115 volt GFCI switch and the receptacle must be protected from weather and landscape sprinklers—they should never get wet.

Your spa has been carefully engineered to provide maximum safety against electric shock. Remember, connecting the spa to an improperly wired circuit will negate many of its safety features.

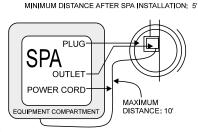

115 VOLT 30 AMP CONVERSION REQUIREMENTS

When converting to a 30 amp system: The heater will provide approximately 1000 watts of heat when the pump is operating in LOW or HIGH speed and the thermostat is calling for heat.

All converted models require a 30 amp, single phase, 115 volt circuit breaker in the main electrical service panel.

All converted spas must be wired in accordance with applicable local and national electrical codes, all electrical work must be done by a licensed electrician.

NOTE: WATKINS WELLNESS REQUIRES THE USE OF A SUBPANEL TO SUPPLY POWER AND PROTECT THE SPA. The subpanel containing a GFCI breaker must be purchased separately and can be purchased from your dealer.

230 VOLT 50 AMP CONVERSION REQUIREMENTS

Benifit when converting to a 230V 50 amp system: The heater will provide approximately 4000 watts of heat when the pump is operating in LOW or HIGH speed and the thermostat is calling for heat.

All converted models require a 50 amp, single phase, 230 volt circuit breaker in the main electrical service panel.

All 230 volt spas must be wired in accordance with applicable local and national electrical codes, all electrical work must be done by a licensed electrician.

NOTE: WATKINS WELLNESS REQUIRES THE USE OF A SUBPANEL TO SUPPLY POWER AND PROTECT THE SPA. The subpanel containing a GFCI breaker must be purchased separately.

A licensed electrician should install a four-wire electrical service (two line voltages, one neutral, one ground) from the main electrical service panel to the subpanel, and from the sub-panel to the spa per the appropriate wiring diagram as illustrated below.

Your electrician should mount the subpanel in the vicinity of the spa but it should not be closer than five (5) feet from the spa water edge (NEC 680-38 to 41-A-3).


INSTALLATION NOTE: After the spa has been installed by the dealer's delivery crew, your electrician can connect the conduit from the subpanel to the spa's control box and then complete the wiring connections in the control box.

NOTE: Complete step-by-step Installation and Wiring Instructions for 230 volt configuration are included in the Owner's Manual and with each sub-panel, which can be obtained from your dealer.

WARNING: Removing or bypassing the GFCI breakers in the subpanel at any time will result in an unsafe spa and will void the warranty.

WIRE SPECIFICATION NOTE: Long electrical runs may require a larger gauge feed wire than stated. All wiring must be copper to ensure adequate connections. Do not use aluminum wire.

Refer to the Wiring Diagrams below for the electrical requirements of the 230 volt models.

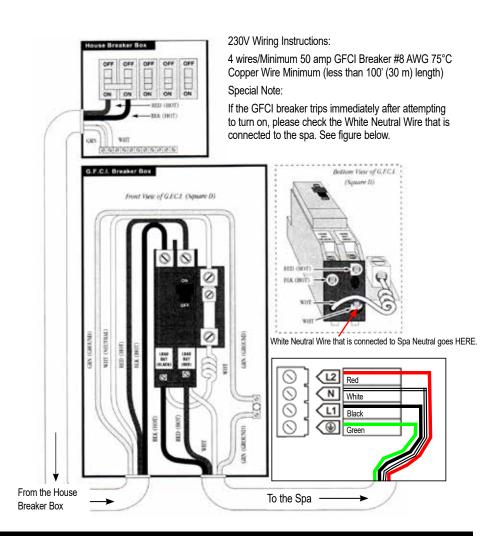

	AILABLE FROM YO	OUR SPA DEALI	_
Service			Cost
Pre-Delivery site inspection			
Deliver spa to installation sit Unwrap spa and haul away			
Set up	раскаўніў піаценаі		
Fill the spa with water			
Connect the spa to its powe	r source (115 volt models)		
Explain and test the spa's or	peration		
Jet system	Set temperature control	Control panel functions	
Explain the safety features			
• GFCI	 Heater high limit 	 Heater thermal cut-off 	
General spa operation & ma	intenance orientation		
Water quality and maintenar			
Adjust the water's Total Alka	linity, Calcium Hardness and pH		
Sanitize the water			
Inspect the spa cover, place			
Review winterizing instruction Review Owner's Manual	ns		
Follow-up call			
In-store spa water analysis			
TOTAL COST			
ADDITIONAL I	PRODUCTS AVAIL	ABLE FROM YO	UR
SPA DEALER			
Ozone System			
Cover Lifter			
 Spa Step 			
 Filter 			
CONTRACTO	R SUGGESTIONS		
CONTRACTO	N 0000L0110110		
Name:			
Telephone:			
Name:			
Telephone:			

Spa Specifications

Spa Model	Footprint	Height	Effective	Heater	Water	Dry	Filled	Dead	Electrical
	Dimension		Filter	(Watts)	Capacity	Weight	Weight*	Weight*	Requirements**
			Area						
	7'3" x 6'5"		E0 #2	1,000	2001	070 11	4 070 11-	400 lb = /62	115 volt, 15 amp
MONTEREY	221 cm	34"	50 ft²	or	320 gal	376 lbs	4,270 lbs	100 lbs/ft²	or 30 amp
	196 cm	87 cm	4.6 m²	4,000	1,200 liters	170 kg	1,930 kg	490 kg/m ²	GFCI protected circuit
	7'3" x 6'5"								115 volt, 15 amp
MONTEREY	221 cm	34"	50 ft²	1,000	320 gal	416 lbs	4,310 lbs	100 lbs/ft²	or 30 amp
PREMIER	х	86 cm	4.6 m ²	or 4,000	1,200 liters	190 kg	1,950 kg	495 kg/m²	GFCI protected
	196 cm			4,000	-,====		1,000 119		circuit
	7'2" x 6'5"	33"	50 ft²	1,000	290 gal	414 lbs	3,708 lbs	90 lbs/ft²	115 volt, 15 amp
EXCURSION	218 cm			or			'		or 30 amp
	196 cm	84 cm	4.6 m²	4,000	1,100 liters	190 kg	1,690 kg	435 kg/m ²	circuit
	7'2" x 6'5"			4.000					115 volt, 15 amp
EXCURSION	218 cm	33"	50 ft ²	1,000 or	290 gal	454 lbs	3,748 lbs	90 lbs/ft²	or 30 amp
PREMIER	X 100	84 cm	4.6 m²	4,000	1,100 liters	205 kg	1,705 kg	440 kg/m²	GFCI protected
	196 cm			4,000			_	,	circuit
	6'8" x 5'3"	33"	50 ft²	1,000	225 gal	326 lbs	2,903 lbs	90 lbs/ft²	115 volt, 15 amp or 30 amp
AZURE	203 cm x	84 cm		or			'	440 kg/m²	GFCI protected
	160 cm	04 (111	4.6 m²	4,000	850 liters	150 kg	1,320 kg	440 kg/m	circuit
	6'8" x 5'3"	00"		1,000					115 volt, 15 amp
AZURE	203 cm	33"	50 ft ²	or	225 gal	366 lbs	2,943 lbs	90 lbs/ft²	or 30 amp
PREMIER	160 cm	84 cm	4.6 m ²	4,000	850 liters	165 kg	1,335 kg	445 kg/m ²	GFCI protected
	100 6111			,,,,,					circuit
APTOS	6'6" x 6'6"	34"	50 ft²	1,000	265 gal	359 lbs	3,445 lbs	115 lbs/ft²	115 volt, 15 amp or 30 amp
AFIOS	198 cm X	86 cm	4.6 m ²	or	1,000 liters		'		GFCI protected
	198 cm	oo an	4.0 111	4,000	1,000 liters	165 kg	1,565 kg	560 kg/m ²	circuit
									115 volt, 15 amp
	5'8" x 5'3" 173 cm	32"	50 ft²	1,000	185 gal	284 lbs	2,527 lbs	95 lbs/ft²	or 30 amp
CASCINA	173 CM	81 cm	4.6 m ²	or	700 liters	130 kg	1,150 kg	460 kg/m²	GFCI protected
	160 cm	OT GIT	4.0 111	4,000		130 kg	1,150 Kg	400 kg//11	circuit
	FIAOII - FIACII								115 volt, 15 amp
	5'10" x 5'10" 178 cm	31"	50 ft ²	1,000	185 gal	302 lbs	2,370 lbs	155 lbs/ft²	or 30 amp
TRISTAR	x	79 cm	4.6 m²	or	700 liters	135 kg	1,075 kg	750 kg/m²	GFCI protected
	178 cm			4,000	7.00 11.013	.co kg	1,070 kg	. 55 kg/m	circuit
	6' x 3'11"	0011	OF #2	1,000	400	050 lb -	4 004 11-	75 lb = 152	115 volt, 15 amp
MINI	183 cm	28"	25 ft²	or	120 gal	250 lbs	1,601 lbs	75 lbs/ft²	or 30 amp
	119 cm	71 cm	2.3 m ²	4,000	450 liters	115 kg	725 kg	365 kg/m ²	GFCI protected
	110 0111						<u> </u>		circuit

CAUTION: WATKINS WELLNESS suggests a structural engineer or contractor be consulted before the spa is placed on an elevated deck.

^{*} **NOTE:** The "Filled Weight" and "Dead Weight" of the spa includes the weight of the occupants (assuming an average occupant weight of 175 lbs).

^{**} All spas above may be converted to 230 Volts requiring a 50 amp service



Watkins Wellness[®]

Feel good. Live well.

1280 Park Center Drive Vista, California 92081 (888) 961-7727

©2021 WATKINS WELLNESS.