

Quick Reference Installation Guide NEXEO | HDXTM IB7000 INTERFACE BOX

The IB7000 is an interface box used to connect the DM5 microphone, SS7000 speaker, or SP10 speaker to a NEX-EO Base Station.

TOOLS/EQUIPMENT REQUIRED

- Screwdriver/Wrench for opening speaker post.
- Wire Strippers, cutters, and other standard tools used for terminating cables/wires.
- Audio Cable (not included)

INSTALLATION AND SETUP

Fig. 3 shows how the IB7000 is typically connected. Adhesive strips on the housing allow the IB7000 to be affixed to a clean, dry surface inside the speaker post.

Note: The IB7000 must be mounted vertically, inside the speaker post, close to the speaker/microphone. This will help minimize audio hum and noise (thus, **do not** mount the IB7000 too far away, such as inside the store).


- The two-pin Loop connector connects to the ground loop.
- The three-pin PLC/BASE connector connects to J4500 on the base station. This connection requires the shield/drain to be grounded; see Table 1.
- The seven-pin DM5 MIC | SPKR connector connects to the Microphone and Speaker; see Table 2.
- The five-pin RELAY | BCKP SPKR connector (optional) connects to an intercom system like the IC300 if a backup is needed in the event of a system failure.

| NEXEO Base Station J4500/J4501 (Spkr/Mic Intrfc) | | |
|--|---|--|
| Label | to IB7000 PLC/BASE | |
| Spkr/Mic PL + | IN1/PL+ (Red wire) | |
| Spkr/Mic PL - | IN2/PC- (Black wire) | |
| Shield | GND - (Shield/drain) | |
| Spkr/Mic PL + | | |
| Spkr/Mic PL - | | |
| Shield | | |
| | Label Spkr/Mic PL + Spkr/Mic PL - Shield Spkr/Mic PL + Spkr/Mic PL - | |

Table 1



Fig. 1

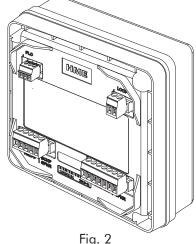

Connector Side

| IB7000 DM5 MIC SPKR connector | | |
|---------------------------------|--------|----------------------------------|
| Pin # | Label | Description/wire color |
| 1 | Mic + | Ext. Microphone positive (Red) |
| 2 | Mic - | Ext. Microphone negative (Black) |
| 3 | GND | Mic Shield (must be terminated) |
| 4 | I.D. | 1-WIRE I/F (Red) for SS7000 only |
| 5 | GND | Ground (Black) for SS7000 only |
| 6 | Spkr - | Speaker negative (White) |
| 7 | Spkr + | Speaker positive (Green) |
| Table 2 | | |

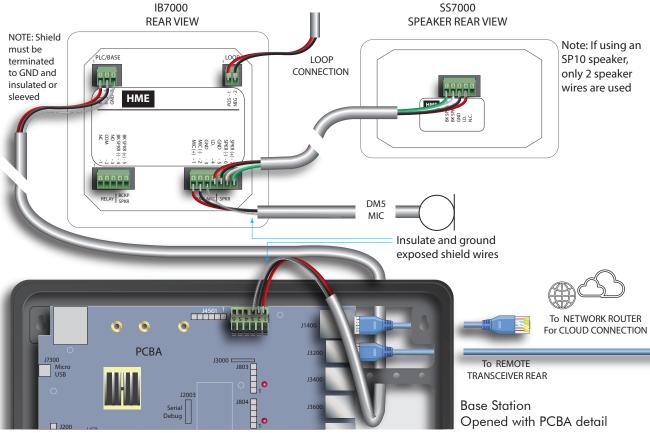


Fig. 3

TECHNICAL SPECIFICATIONS

| IB7000 | |
|-----------------|--|
| Dimensions | 5.68" H x 5.68" W x 2.05" D (144.27 x 144.27 x 52.07 mm) |
| Weight | 14.4 oz (408.23 g) |
| Power Supply | Voltage: 48 VDC (powered from BS7000) |
| | Current: 0.331 A (max start up) |
| Frequency Range | Audio: 100 Hz to 7.4 kHz |
| | Powerline network over 48 VDC: 2 MHz – 67.5 MHz |
| Power | Nominal power with no audio: 5.2 W |
| | Maximum power at maximum volume: 22 W |
| Front Panel | Two adhesive strips for mounting to a vertical surface |
| Rear Panel | Phoenix connector type headers (includes speaker output and analog DM5 microphone input) |
| Wireless | N/A |
| Temperature | Operating Temperature range: -25°C (-13°F) to +60°C (+140°F) |
| Compliance | See NEXEO HDX - Regulatory, Compliance, and Safety Guide online |



A copy of this guide and additional information can be found under NEXEO | HDX by scanning this QR code or going to: https://www.hme.com/qsr/drive-thru-user-manuals/

The HME logo and product names are registered trademarks or trademarks of HM Electronics, Inc.