

# Luminous Wheels Guide



*Your order of Luminous wheels  
includes 8 of the following:*

**1 WHEEL**

**2 GENERATOR/  
MAGNET/SPACER**

*\*bearings are sold separately*


# INSTALLATION

1 WHEEL

2 GENERATOR/  
MAGNET/SPACER



*Make a "bearing sandwich"*

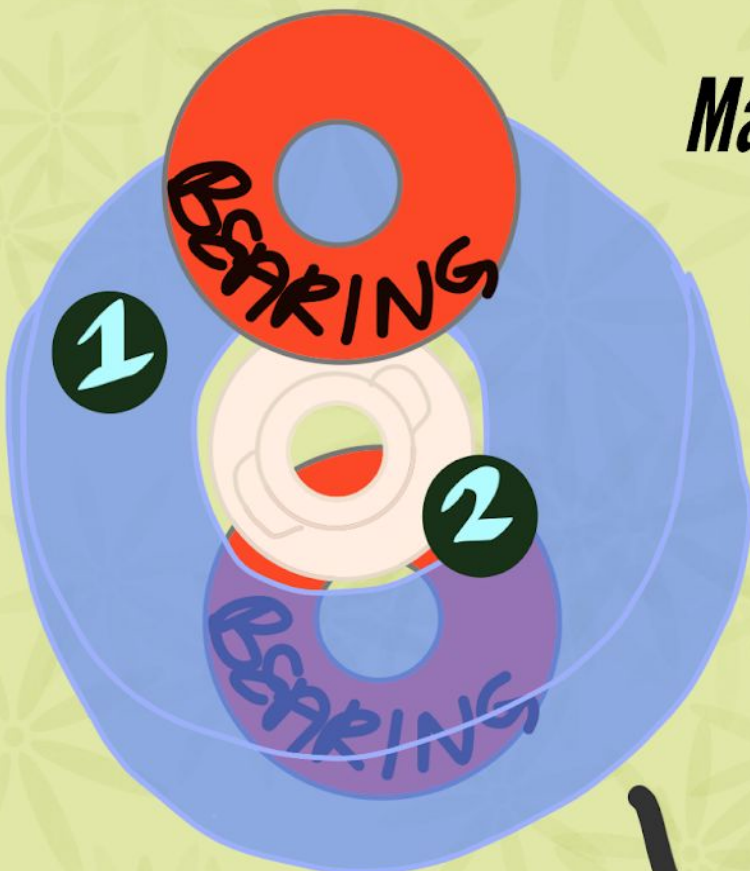

*Bearing*

2

*Bearing*

*Press your bearings really hard! We promise they fit, it's just a little hard to get them in*



# TROUBLESHOOT

*Help! My wheel won't light up!*

**1 WHEEL**

**2 GENERATOR/  
MAGNET/SPACER**



*I. Clean the space in between 1 and 2  
with a dry microfiber cloth*

*II. Assemble the bearings into the wheels  
making a “bearing sandwich”*

*III. Make sure to flip the axle nut as  
displayed in the video :)*

IF YOUR WHEEL IS STILL NOT LIGHTING UP EMAIL US AT [CUSTOMERSERVICE@PIGEONSKATES.COM](mailto:CUSTOMERSERVICE@PIGEONSKATES.COM)