



- NOTES**
- ① Actuator wire goes from Black to Yellow
 - ② Electric clutch wire goes from Brown to Red
 - ③ Ignition wire goes from Yellow to Blue
 - ④ Jumper from Green to Black
 - ⑤ Raised rib on connector indicates ground wire
- XXXX 4350 Rpm for 4000
5100 Rpm for 5000 & 6000

I am not responsible for loss or damage due to the use or misinterpretation of this diagram!!!

LEGEND

GRN • GREEN	—————
YEL • YELLOW	—————
BRN • BROWN	—————
BLU • BLUE	—————
BLK • BLACK	—————
WHT • WHITE	—————
RED • RED	—————
ORG • ORANGE	—————
GRY • GRAY	—————

IMPORTANT: Schematic is for reference only MB with carb kit & rev limiter M.B. 4000, 5000 and 6000		DATE REV. N/A
Wiring Diagram		
FOR REFERENCE ONLY!		
DATE TIKITIKI	SCALE N.T.S.	DATE 9/16/08
REVISION		DATE REVISED