

# INSTRUCTIONS FOR USE V 41 CC DT



## CHRONOGRAPH AUTOMATIC DATE

#### WARNING

Do not set the date when the time is between 9 pm and 12 am.

This is to avoid any damage to the movement. For an efficient use of the chronograph, avoid setting the time while it is working.

## Setting the watch

IMPORTANT: Unwind the winding crown 1 before making any adjustments

#### 1) Winding the watch:

Wind your watch by turning the crown 1 in position 2.

#### 2) Setting the date:

Wind the crown 1 to position 3 by turning the crown until the date displayed is one day prior to the date wanted. Pull the crown 1 to position 4 and make the date jump by turning the hands in a clock-wise direction. Now set the time wanted and wind the crown 1 to position 2.

### 3) Setting the time:

With help of crown 1 in position 3, turn the hands to the time wanted and push the crown 1 in position 2 once the adjustement is done.

## Functions of the chronograph

#### Pusher 4:

Starts and stops the large second-hand and the minute counter.

#### Pusher 5:

Reset to zero the large second-hand and the minute counter.

Very important: To avoid damage to the mechanism please make sure that the chronograph is stopped before resetting.