

INSTRUCTIONS FOR USE V 41 SC DT YACHTING



SECOND CENTRAL DATE

WARNING

Do not set the date when the time is between 9 pm and 12 am. This is to avoid damaging the movement.

Setting the watch

IMPORTANT: Unwind the winding crown 1 before making any adjustments

1) Winding the watch:

Wind your watch by turning the crown 1 in position 2.

2) Setting the date:

Wind the crown 1 to position 3 by turning the crown until the date displayed is one day prior to the date wanted. Pull the crown 1 to position 4 and make the date jump by turning the hands in a clock-wise direction. Now set the time wanted and wind the crown 1 to position 2.

3) Setting the time:

With help of crown 1 in position 4, turn the hands to the time wanted and push the crown 1 in position 2 once the adjustement is done.

IMPORTANT: Wind the crown 1 after the adjustements are finished.