

INSTRUCTIONS FOR USE V 45 CC DT



CHRONOGRAPH AUTOMATIC DATE

WARNING

Do not set the date when the time is between 9 pm and 12 am. This is to avoid any damage to the movement. For an efficient use of the chronograph, avoid setting the time while it is working.

Setting the watch

IMPORTANT: Unwind the winding crown 1 before making any adjustments

1) Winding the watch:

Wind your watch by turning the crown 1 in position 2.

2) Setting the date:

With the corrector stylus, repeatedly press on corrector **6**, until the date previous to the one required is displayed. Pull the crown **1** in position **3** and make the date jump by turning the hands in a clock-wise direction. Now set the time wanted, and push the winding crown **1** in position **2** after adjustments.

3) Setting the time:

With help of crown 1 in position 3, turn the hands to the time wanted and push the crown 1 in position 2 once the adjustement is done.

Functions of the chronograph

Pusher 4:

Starts and stops the large second-hand and the minute counter.

Pusher 5:

Reset to zero the large second-hand and the minute counter.

Very important: To avoid damage to the mechanism please make sure that the chronograph is stopped before resetting.