




TFO BVK FLY REEL SPOOL REMOVAL

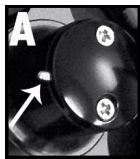

To remove the spool, slide spool release latch 'A' (located on side of spool centre hub*) to side, this will disengage the clip holding the spool onto the spindle of the reel cage. Continue to hold the latch to the side and slide the spool off the spindle, separating the spool from the reel cage.

REEL DIRECTION CHANGE: HOW TO CHANGE FROM LEFT HAND RETRIEVE TO RIGHT HAND RETRIEVE

- Remove spool from reel cage.
- Locate C-clip/bearing assembly on backside of spool. With needle nose pliers remove C-clip that is holding in the bearing, knock out bearing, turn bearing over (this will engage the disc brake in the opposite direction) and re-assemble reel.



TFO BVK FLY REEL

Note: If your reel is already loaded with backing and line take the line and backing off spool (don't pull off into a pile as the line and backing will coil up), remove spool from frame change retrieve direction of reel and rewind the backing and line onto the spool.


NO
SCREWDRIVER
REQUIRED



*Removing screws of spool release latch hub will VOID warranty.



TFO NV 1, NV 2, & NV 3 FLY REEL SPOOL REMOVAL

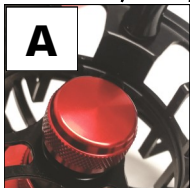


A

To remove the spool: on the frame loosen drag knob all of the way.


A—Unscrew cap on handle side of the spool. Slide spool off of center hub of reel frame.

REEL DIRECTION CHANGE: TO CHANGE FROM LEFT HAND RETRIEVE TO RIGHT HAND RETRIEVE

- **B**—Unscrew cap on inside of spool.
- **C**—Remove the direction clutch, turn over and place back into the housing.
- Replace the cap, re-assemble spool onto reel.

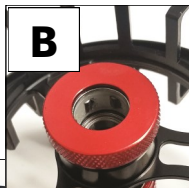

B

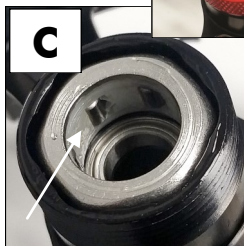

C



TFO NV FLY REEL


***NO TOOLS
REQUIRED**



*Removing drag knob will VOID warranty.



TFO HSR FLY REEL SPOOL REMOVAL

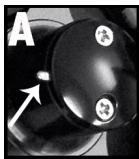

To remove the spool, slide spool release latch 'A' (located on side of spool centre hub*) to side, this will disengage the clip holding the spool onto the spindle of the reel cage. Continue to hold the latch to the side and slide the spool off the spindle, separating the spool from the reel cage.

REEL DIRECTION CHANGE: HOW TO CHANGE FROM LEFT HAND RETRIEVE TO RIGHT HAND RETRIEVE

- Remove spool from reel cage.
- Locate C-clip/bearing assembly on backside of spool. With needle nose pliers remove C-clip that is holding in the bearing, knock out bearing, turn bearing over (this will engage the disc brake in the opposite direction) and re-assemble reel.



TFO HSR

Note: If your reel is already loaded with backing and line take the line and backing off spool (go for a long walk, don't pull off into a pile as the line and backing will coil up), remove spool from frame change retrieve direction of reel and rewind the backing and line onto the spool.


NO
SCREWDRIVER
REQUIRED



*Removing screws of spool release latch hub will VOID warranty.



TFO NXT FLY REEL SPOOL REMOVAL

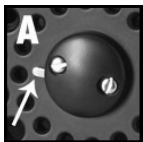

To remove the spool, slide spool release latch 'A' (located on side of spool centre hub*) to side, this will disengage the clip holding the spool onto the spindle of the reel cage. Continue to hold the latch to the side and slide the spool off the spindle, separating the spool from the reel cage.

REEL DIRECTION CHANGE: HOW TO CHANGE FROM LEFT HAND RETRIEVE TO RIGHT HAND RETRIEVE

- Remove spool from reel cage.
- No tools required. Pull centre disc off center spindle, turn disc over and place back onto spindle (this will engage the disc brake in the opposite direction) and re-assemble reel.



TFO NXT

Note: If your reel is already loaded with backing and line take the line and backing off spool (go for a long walk, don't pull off into a pile as the line and backing will coil up), remove spool from frame change retrieve direction of reel and rewind the backing and line onto the spool.

NO
SCREWDRIVER
REQUIRED



*Removing screws of spool release latch hub will VOID warranty.



TFO NXT LA I & II FLY REEL SPOOL REMOVAL

To remove the spool, turn the reel with the back of the frame facing you (as pictured). Using both hands place your fore-finger and index finger on the sides of the reel frame and using both thumbs push the spool out and away from the frame, this will release the spool from the frame post and hub.

REEL DIRECTION CHANGE: HOW TO CHANGE FROM LEFT-HAND RETRIEVE TO RIGHT-HAND RETRIEVE

- Loosen off the drag and remove spool from reel frame.
- *No tools required.* Unscrew the geared hub on the frame center post. Take out the disc/bearing set and turn over.
- Re-assemble, be sure to seat the disc/bearing set correctly onto the tongue and groove in the hub post and on the disc/bearing.



Note: If your reel is already loaded with backing and line take the line and backing off spool (go for a long walk, don't pull off into a pile as the line and backing will coil up), remove spool from frame change retrieve direction of reel and rewind the backing and line onto the spool.

NO
SCREWDRIVER
REQUIRED




TFO NXT LA I & II

For assistance call 1-800-667-6895 Monday-Friday 8-4 Mtn.





TFO NXT GL I & NXT GL II FLY REEL SPOOL REMOVAL

- On the frame side loosen drag adjustment knob all of the way. Note: Removing the drag knob will VOID warranty.
- **A**—Unscrew retaining cap on the spool handle side of the spool.
- Slide spool off of center hub of reel frame.

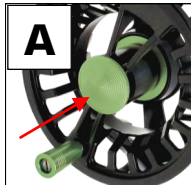

CHANGE FROM LEFT HAND RETRIEVE TO RIGHT HAND RETRIEVE


- **B**—Remove retainer spring clip.
- **C**—Remove the direction clutch, turn over and place back into the housing.
- Replace the retaining clip, re-assemble spool onto reel frame.

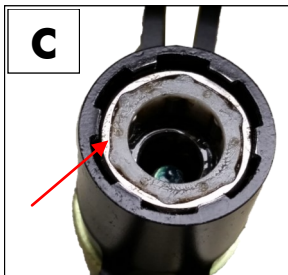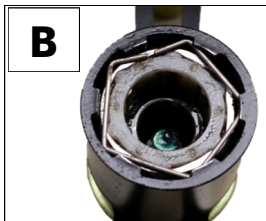

TFO NXT GL FLY REEL



TFO PRISM II FLY REEL SPOOL REMOVAL

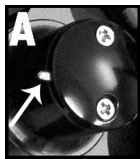

To remove the spool, slide spool release latch 'A' (located on side of spool centre hub*) to side, this will disengage the clip holding the spool onto the spindle of the reel cage. Continue to hold the latch to the side and slide the spool off the spindle, separating the spool from the reel cage.

REEL DIRECTION CHANGE: HOW TO CHANGE FROM LEFT HAND RETRIEVE TO RIGHT HAND RETRIEVE

- Remove spool from reel cage.
- Locate C-clip/bearing assembly in reel cage frame at base of spindle. With needle nose pliers remove C-clip that is holding in the bearing, knock out bearing, turn bearing over (this will engage the disc brake in the opposite direction) and re-assemble reel.



TFO PRISM II

Note: If your reel is already loaded with backing and line take the line and backing off spool (go for a long walk, don't pull off into a pile as the line and backing will coil up), remove spool from frame change retrieve direction of reel and rewind the backing and line onto the spool.

NO
SCREWDRIVER
REQUIRED



*Removing screws of spool release latch hub will VOID warranty.



TFO REEL WARRANTY

Two Year Limited Warranty

Temple Fork Outfitters warrants the following reels:

- TFO BVK SD; TFO BVK; TFO HSR; TFO LA (LARGE ARBOR); TFO NXT; TFO NXT LA; TFO NXT GL; TFO PRISM II; TFO NV; TFO ATOLL, TFO POWER REELS & MIRAMICHI

against any defects in material and workmanship for a period of two years, provided it has been given reasonable care and use, from the date of purchase. In the event the product is found to be defective within the warranty period, Temple Fork Outfitters will repair or replace the product at our option within a reasonable time. This warranty extends to the original owner only, not applicable to commercial use.

To obtain warranty service, please send your reel postage-paid and insured to:

Temple Fork Outfitters
6041—4th Street SE,
Calgary, Alberta, Canada
T2H 2A5.

Please include (1) copy of sales receipt or proof of purchase and (2) your name, address, phone number and (3) description of defect. A minimum charge may be made for return postage.

www.tforods.ca