

Always wear a properly fitted helmet that complies with CPSC or CE safety standards when you ride your scooter.





**Correct Fitting:**  
Make sure your helmet covers your forehead.

### What's In The Box?

Hover-1 Drive • Wall Charger • Operation Manual/Quick Start Guide


### Riding Your Drive

Stay relaxed and step on quickly, confidently and evenly. Imagine climbing stairs, one foot, then the other. Look up once your feet are even. The Drive may vibrate or spin in one direction, if weight and pressure are applied to only one foot mat. THIS IS NORMAL.

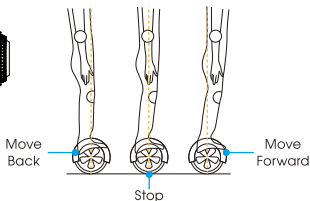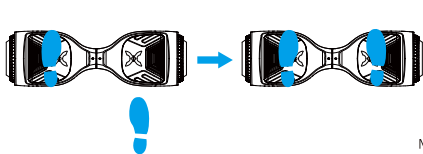

### Charging Your Drive

Turn Off Your Hover-1 Drive

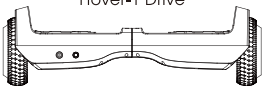

Plug the charger into the charge port



(Located In The Back)

NOT FULLY CHARGED

FULLY CHARGED

### Calibration

1. Place the Drive on a flat surface.
2. Press and hold the ON/OFF button for a total of 15 seconds.
3. The Drive will turn on, lighting the battery indicator on the board.
4. After the light flashes 5 times, release the ON/OFF button
5. Turn the board off and then back on. The calibration will now be complete.



**\*\* IMPORTANT \*\***

**Retain this card, a copy of your receipt  
and your 23 digit serial number  
for your records**



**NEED HELP?**

**For UK Customer Service,  
please contact  
+44 (0) 1355 241222  
escoters@letmerepair.co.uk  
For other countries, please  
scan QR code**

