




OPERATION MANUAL H1-FI FT

HELMETS SAVE LIVES!

Always wear a properly fitted helmet that complies with CPSC or CE safety standards when you ride.

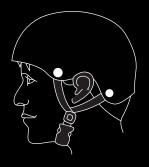

Correct Fit:

Make sure your helmet covers your forehead.



Incorrect Fit:

Forehead is exposed and vulnerable to serious injury.

INTRODUCTION

This manual is designed to give you the information you need for the safe operation and maintenance of your Hover-1 My First Forklift. Please read it thoroughly before operating your My First Forklift.


TABLE OF CONTENTS	PAGES
My First Forklift Diagram	4
Parts List	5 - 6
Assembly	7-13
Controls	14
Riding Your My First Forklift	15
Care & Maintenance	16-17
Pre-Ride Checklist	18
Warnings	19
Saftey Precautions	20-21
FCC Statement	22
Warranty	23

MARNING

Make sure you read this complete manual before operating your My First Forklift. Failure to follow its guidelines could lead to serious injury or death.

MY FIRST FORKLIFT DIAGRAM

- 1. Front Fork
- 2. Fork Frame
- 3. Front Fork Link
- 4. Front Fork Lift
- 5. Lever
- 6. Headlight
- 7. Roof
- 8. Seat
- 9. Door Frame
- 10. Trunk Lid
- 11. Door
- 12. Rear Wheel
- 13. Steering Wheel
- 14. Front Wheel

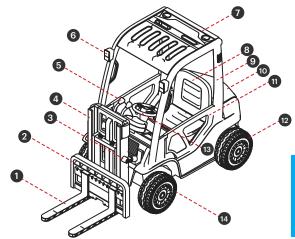

Please visit

www.hover-1.com/troubleshoot

to request replacements for missing or defective parts

SPECIFICATIONS

Battery	12V/10Ah
Brushless Motor	80W (dual 40W motors)
Rider Age Range	3+
Max Rider Weight	66 lbs (30 kg)
Max Lifting Weight	25 lbs (11 kg)


Dimensions	57.5" x 24.8" x 39.8" (146 x 63 x 101 cm)	
Speed	3 mph (4.8 km/h)	
Usage Time	Up to 2 hours	
Charge	Input AC: 110V - 220V Output DC: 12V-1000m	
Range	3 miles	


PARTS LIST


(2) Front Fork Links		(2) Front Wheels
(4) Wheel Covers	Drive Gear	(2) Rear Wheels
(2) Door Frames		(1) Charging Cable
(1) Screwdriver	Ø	(1) Remote Control
(2) Spanners		(2) Levers


PARTS LIST


(1) Body	(1) Front Fork Lifter
(1) Roof	(1) Fork Frame
(1) Trunk Lid	(1) Toy Pallet
(1) Trunk	(1) Seat
(2) Front Forks	(4) Wheel Covers

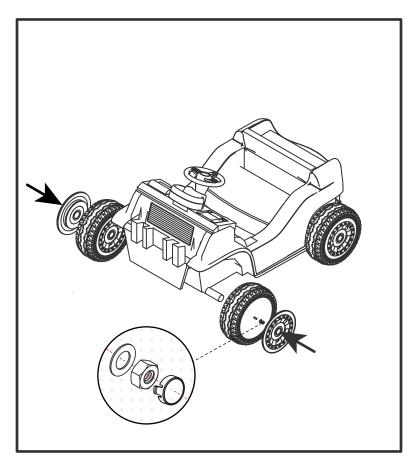


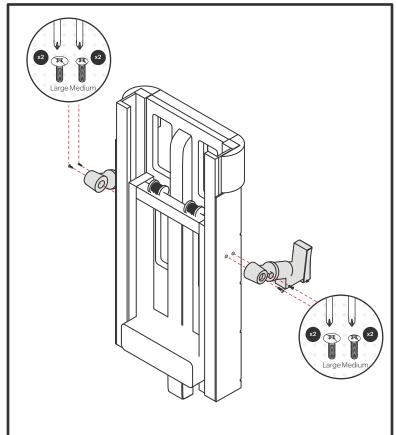


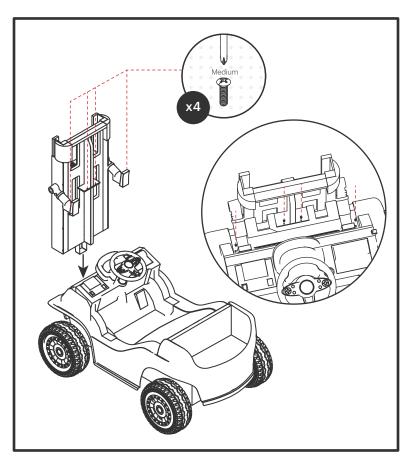


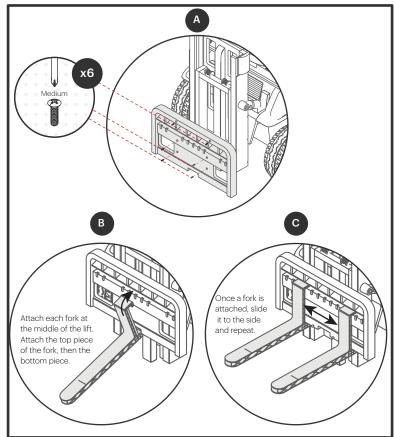


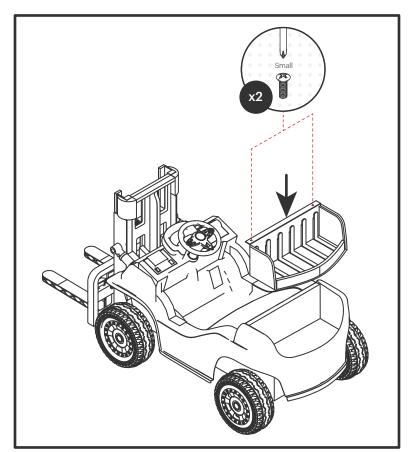


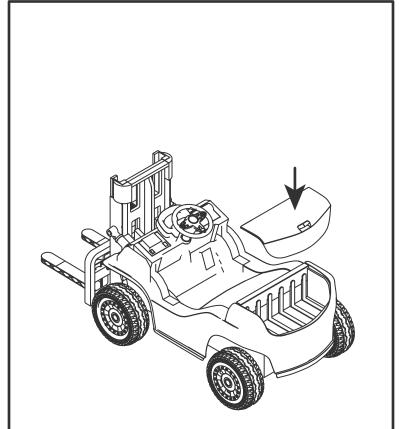


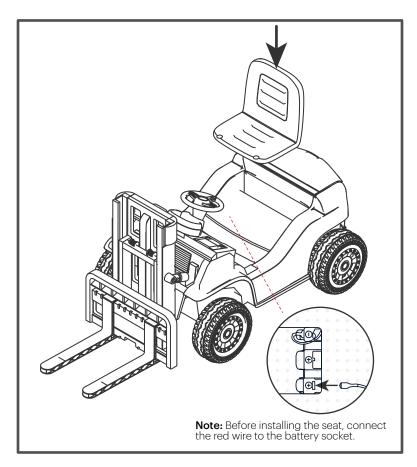


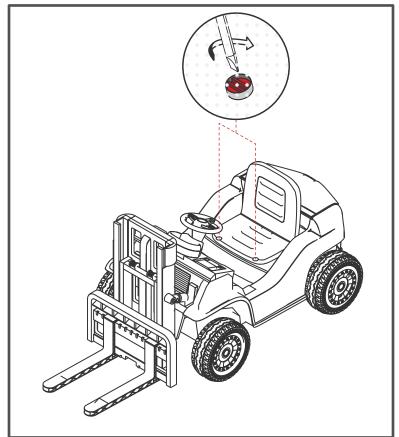


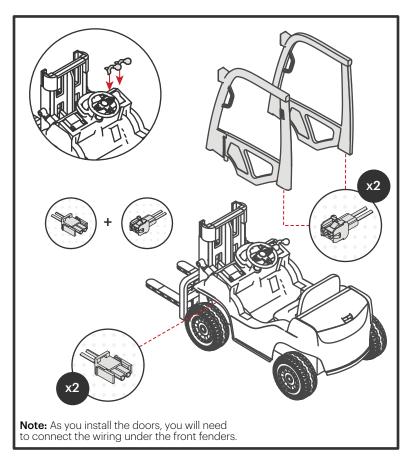

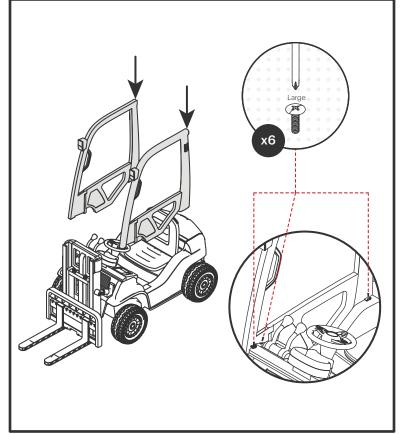

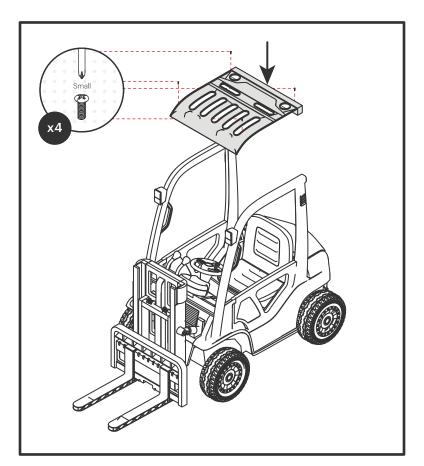

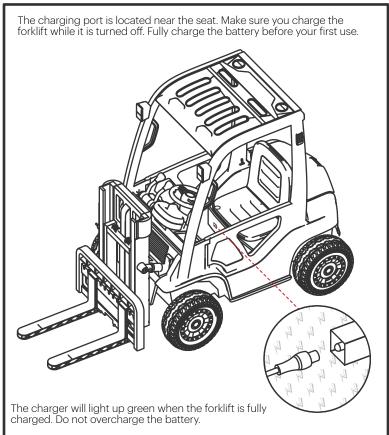

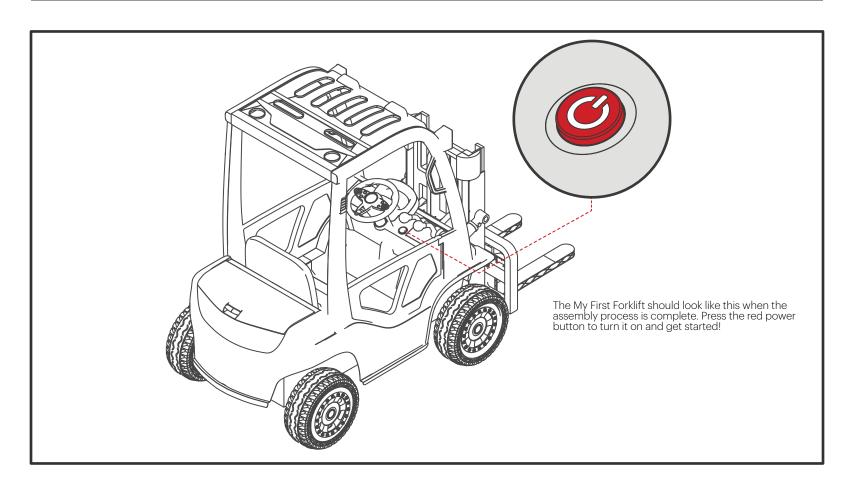

CONTROLS



PAIR REMOTE TO FORKLIFT

If the remote is not pairing to the forklift, follow these instructions:

- 1. Turn off the forklift and remove the batteries from the remote, then put the batteries back in.
- 2. Press and hold the code button on the remote while turning on the forklift.
- 3. When the remote begins to flash, release the code button. The remote should now be paired.
- * If the remote's lights flash when pressing any button, replace the batteries.

1. HORN

Press for the horn sound. Hold to decrease the volume of the horn and music

2. MUSIC

Press for music tracks. Hold to increase the volume of the horn and music.

3. SPEED

Press to change speed modes: 1 Light = Slow 2 Lights = Medium 3 Lights = Fast

4. BRAKE

Stops the vehicle

5. FORWARD

Moves the vehicle forward

6. BACKWARD

Moves the vehicle backward

7. UP

Lifts the fork load

8. RIGHT

Turns the vehicle right

9. LEFT

Turns the vehicle left

10. DOWN

Lowers the fork load



1. LIGHTS

Turns the lights on/off

2. MUSIC PLAYER

Plays sounds, music, mp3, and displays battery life

3.HORN

Press to sound the horn. Hold to decrease the volume of the horn and music

4. STEERING WHEEL

Rotate the wheel to turn the vehicle left and right

5. MUSIC

Press to play music tracks. Hold to increase the volume of the horn and music

6. POWER ON/OFF

Press to power the vehicle on/off

7. THROTTLE/REVERSE

Push up to move forward Pull down to reverse

8. FORK LOAD UP/DOWN

Push up to lift load Pull down to lower load

9. GAS PEDAL

Press to accelerate the vehicle

RIDING YOUR MY FIRST FORKLIFT

Ensure your Hover-1 My First Forklift is fully assembled and correctly installed with screws secured tightly in place. Failure to do so may result in damage to the vehicle and serious bodily harm or death.

After reviewing the pre-ride checklist, follow the steps below to begin riding your Hover-1 My First Forklift.

- 1 Sit in the vehicle and buckle the seatbelt
- 2. Press the power button to turn the vehicle on.
- 3. Firmly grip the steering wheel. Apply your foot to the gas pedal or push up on the throttle/reverse lever to accelerate.
- 4. To reverse, pull the throttle/reverse lever down.
- 5. Push the fork load lever up to lift the fork up.
- 6. Pull the fork load lever down to lower the fork.
- 7. Press the leftmost button on the steering wheel to sound the horn. Press the rightmost button on the steering wheel to play music.
- 8. Hold the horn button to decrease the volume of the horn and music. Hold the music button to increase the volume of the horn and music.
- 9. Turn the headlights on or off with the headlight button on the left side of the dashboard.

CARE & MAINTENANCE

- Only use the charger and battery specified by the manufacturer. The charging port is located under the seat.
- Before charging, check the charger, battery, and plug for any damage. If anything is damaged, stop using the vehicle until it is repaired.
- Do not turn the vehicle on while charging and don't turn the battery upside down.
- While charging, the charger will warm up. If the charger does not warm up, the charger, battery, or circuit may have failed.
- 1. Before use, check to ensure the My First Forklift is in good condition. Check for damage to the battery, wires, and other parts of the forklift. Check to ensure all screws are tight and that there are no potential safety hazards in the operation area. If any damage is found, stop using the vehicle until all damage is repaired.
- 2. If the remote control is not used for an extended period of time, it is recommended that you remove the batteries to avoid battery leakage, corrosion of the circuit board, and/or damage to the remote control.
- 3. The vehicle should be parked indoors or covered with waterproof tarp to avoid water damage.

CARE & MAINTENANCE

- 4. Keep the forklift away from furnaces, heaters, and direct sunlight. Plastic parts may melt. When charging, keep the forklift and battery away from flammable materials to prevent fires.
- 5. Charge the battery immediately after use to maintain battery capacity. Charging should always be performed by an adult. Fully charge the battery before storing the forklift away for extended periods of time. Pull out the red main line and charge the battery once a month to prolong the battery life.
- 6. Use a dry, soft cloth to wipe the vehicle, or use a non-wax furniture polish to wipe the plastic parts to achieve a smooth surface effect. Do not use chemical solvents to wipe the plastic parts of the vehicle. Do not clean the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, circuit system, and battery.
- 7. When the vehicle is not in use, be sure to turn off the power and turn all switches to the "stop" or "off" position.
- 8. All repairs should be performed by a professional.

PRE-RIDE CHECKLIST

Ensure that your My First Forklift is in proper working order each time you ride. If a part of the My First Forklift does not function correctly, please contact our Customer Support Center.

- Ensure the battery is fully charged before riding your My First Forklift.
- Ensure that the screws on the My First Forklift wheels are secured before each ride.

HOVER-1 MY FIRST FORKLIFT OPERATION

It is important that you fully understand all the functions of your My First Forklift. If these functions are not used correctly, you will not have full control of your My First Forklift.

WARNINGS

- 1. When operating the vehicle remotely, the distance between children and adults should not exceed 33 feet.
- 2. The remote control is meant to be used by adults only. Keep out of reach of children.
- 3. Before operating the vehicle via remote control, read the manual carefully. Practice using the remote control with the vehicle empty. Only after you are familiar with the controls should a child ride in the vehicle.
- 4. Keep off of public roads. This remote controlled vehicle is prohibited to share roads with motor vehicles.
- 5. Keep the remote control away from moisture and rain to avoid water damage.
- 6. Batteries should only be charged under adult supervision.
- 7. Dead batteries should be removed and properly recycled.
- 8. Replace the remote control batteries if the vehicle fails to operate at a distance of less than 9 feet between the operator and the vehicle.

CAUTION: RIDING IN WET WEATHER

Do not ride your My First Forklift in wet weather, as there are electronic components in the vehicle that may be damaged if exposed to water or moisture.

SAFETY PRECAUTIONS

⚠ WARNING

Any vehicle that does not work properly can cause you to lose control. Inspect the entire forklift thoroughly before every ride, and do not ride it until any problems have been corrected.

⚠ WARNING

Do not ride a My First Forklift with a part that is damaged. Replace the damaged part before riding.

SAFETY PRECAUTIONS

- 1. It is strictly forbidden to use this product on roads and highways, unless your local laws state otherwise. You must wear a safety helmet and other necessary protective gear when riding your My First Forklift.
- 2. Due to the nature of the product, the assembly pieces should be checked before every ride to avoid an accident while riding.
- 3. Do not make sharp turns, as you may drift and overturn the My First Forklift, which can result in injury to yourself and/or damage the unit.

↑ WARNING

To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, near swimming pools, or other bodies of water. Always wear shoes, and never allow more than one rider at a time.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2AANZFLFT

WARRANTY

For warranty information, please visit us at www.hover-1.com		
Manufacturer: DGL Group, Ltd. 2045 Lincoln Highway, Edison NJ 08817		
TEL: 732-692-5000		





