

BROTHER 2340CV (COVERSTITCH) – Knit Settings

Here are some photos of the settings I keep my Brother coverstitch machine at when sewing knits. These settings seem to be pretty universal for most everything I sew. Every machine has it's own personality so you may need to adjust yours a little. But this should serve as a great starting point. Make sure to pay attention to your presser foot pressure (the big silver screw located on the top of the machine). If this isn't loose enough it can give you all sorts of frustration.

If you are a beginner I find it helpful to take a sharpie and label all the dials as I have on mine. Here is a link to a great video on threading your machine. Note that I have also labeled the threading sequence below the tension dials. Be sure to tighten the needle screw all the way for any slots you do not have a needle in. Also set the tension on that one to zero.

LINK HOW TO THREAD YOUR 2340CV (Copy/Paste):

https://www.youtube.com/watch?v=H1jvhxec_yI&list=PLAX_PsO7fSd6ONsu_SFncMjUhkTET7QGJ&index=3

NOTE: One thing that video does not cover is that, per the manual, you are supposed to thread the left needle before the others.



