 


PowerPoint

Ceramic Hob

P154CZMA

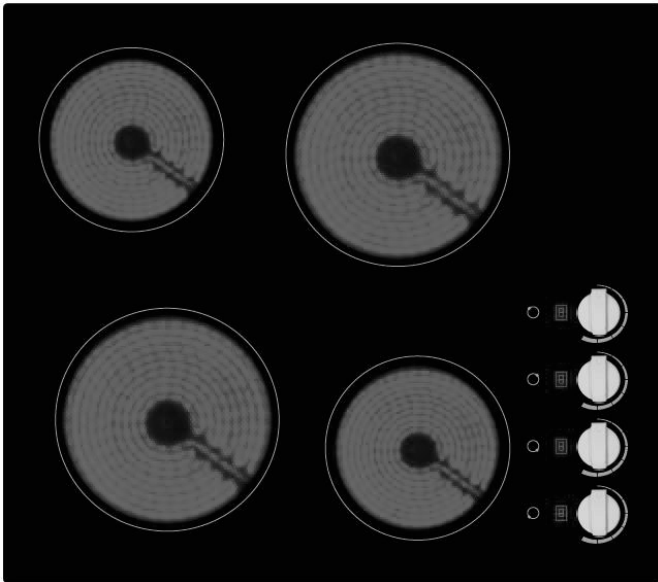

INSTRUCTIONS:


Please read and keep safe for future use.

Table of Contents

Features	3
Safety Instructions.....	4
Installation	5
Electrical Requirements	8
Using your Hob	9
Cleaning and Care	10
Top Tips	11
Disposal/Technical Specifications	12
Problem Solving	13
Health & Safety	14
Warranty Information.....	16
Customer Care	17


Features

 Ceramic Top

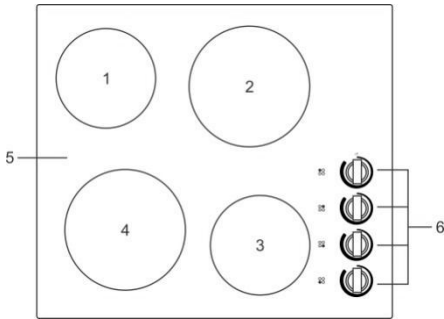

1. 1200 W zone
2. 1800 W zone
3. 1200 W zone
4. 1800 W zone
5. Glass plate
6. Control panel

 Control Panel

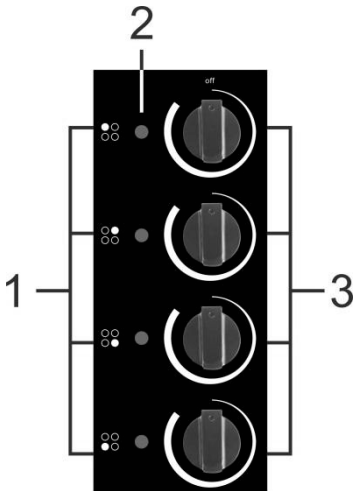

1. Cooking burner indicator
2. Power level display
3. Power regulating control

Safety Instructions

The use of any electrical appliance requires the following common sense safety rules. There is danger of injury or death to the person and damage to the appliance.

Note: *If the following instructions are not adhered to the warranty will not Be applicable*

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities unless there is a person responsible for their safety present
- This appliance must be installed by a registered electrician
- Never attempt to repair the appliance yourself
- This appliance is intended to be used in a household only, it is not suitable for commercial use
- Keep the electrical cable away from any heat source and do not let the cable touch the appliance
- Ensure that the electric supply cable is not trapped or damaged during Installation
- Prior to installation ensure that the electricity voltage and frequency are compatible with your appliance
- If the cable becomes damaged, it must be replaced by an electrician
- The materials surrounding the appliance (cabinets) must be able to withstand a minimum temperature of 100°C
- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching hot parts
- Cooking on a hob with fat or oil can be dangerous and should not be left unattended
- NEVER try to extinguish a cooking fire with water. Instead switch off the appliance and cover the flame with a lid or a fire blanket
- Do not allow children in the kitchen when cooking or while hob parts may still be hot
- Before starting to use your appliance ensure that curtains, paper or flammable items are kept away from your appliance. Do not keep flammable materials around your hob

- Position pans over the centre of the burners and turn handles to a safe position where they cannot be knocked or grabbed
- Make sure the control knobs are all in the off position when not in use
- If you do not intend to use your hob for a long period of time turn off the electric supply
- Do not operate the appliance using an external timer or remote control system
- Do not cook on a broken or cracked surface
- A temperature sensor monitors the temperature inside the ceramic hob. When an excessive temperature is monitored, the ceramic hob will stop operation automatically
- When the hob has been operating for some time, there will be some residual heat. The letter “ H ” appears on the display to warn you that the area is hot

 
Choosing Your Cookware

- Do not use cookware with jagged edges or a curved base
- Make sure that the base of your pan is smooth, sits flat against the glass, and is the same size as the cooking zone. Always centre your pan on the cooking zone
- Always lift pans off the ceramic hob, do not slide as they may scratch the glass.


Installation Instructions

- This hob must be installed according to local regulations by a suitably qualified electrician
- Carefully unpack the hob and check for any external visible damage. Do not install or use if it is damaged
- Remove any protective film that may still be on your ceramic hob
- Packaging materials should be collected together and disposed of immediately as they may be harmful to children
- If fitted, an extractor fan must be at least 65cm above the hob

- The wall behind the hob and 450 mm above and across hob should be made from an incombustible material, preferably an easy clean surface, such as ceramic tiles
- Cut out the work surface according to the sizes shown below
- For the purpose of installation and use, a minimum of 50mm space shall be preserved around the hole.
- The thickness of the work surface must be at least 30mm and must be heat-resistant

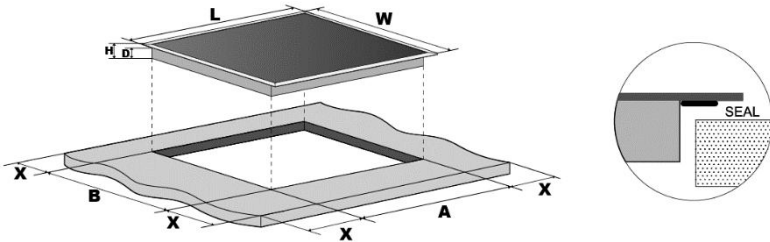


L(mm)	W(mm)	H(mm)	D(mm)	A(mm)	B(mm)	X(mm)
590	520	52	48	560	490	50 mini

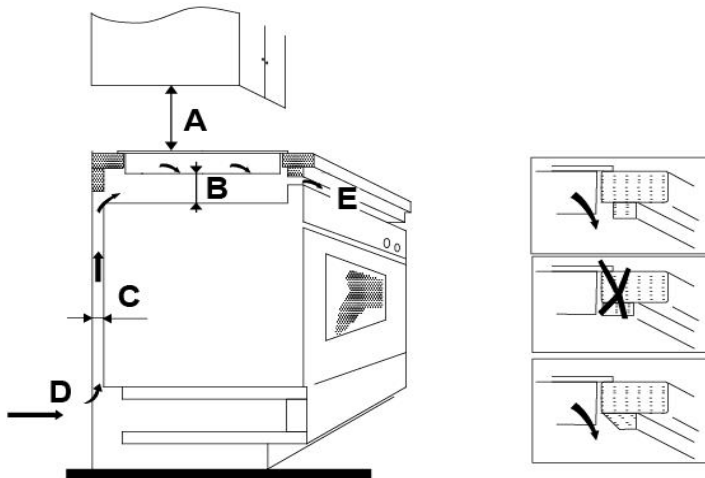 


A(mm)	B(mm)	C(mm)	D	E
760	50 mini	20 mini	Air intake	Air exit 5mm

The ceramic hob should be placed horizontally as shown below:

 - Ensure that the ceramic hob is well ventilated and that the air inlet and outlet are not blocked
- Before locating the fixing brackets the unit should be placed on a stable, smooth surface ensuring that no pressure is put onto the controls protruding from the hob
- Fix the hob to the work surface by screwing four brackets on the bottom of the hob (see below) after installation.

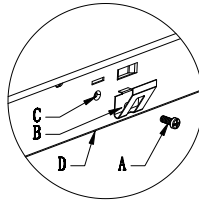

A	B	C	D
screw	bracket	Screw hole	base

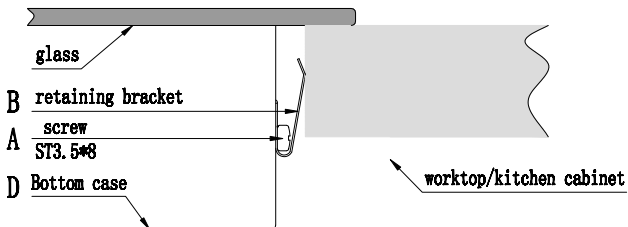 


Electrical Requirements

Warning: This appliance must be earthed

Warning: There is risk of electric shock

 - The appliance must be directly connected to the mains using an omnipolar circuit-breaker with a minimum contact opening of 3 mm installed between the appliance and the mains. The circuit-breaker must be suitable for the charge indicated and must comply with current electrical regulations (the earthing wire must not be interrupted by the circuit-breaker)
- All electrical connections should be made by a qualified Electrician
- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current)

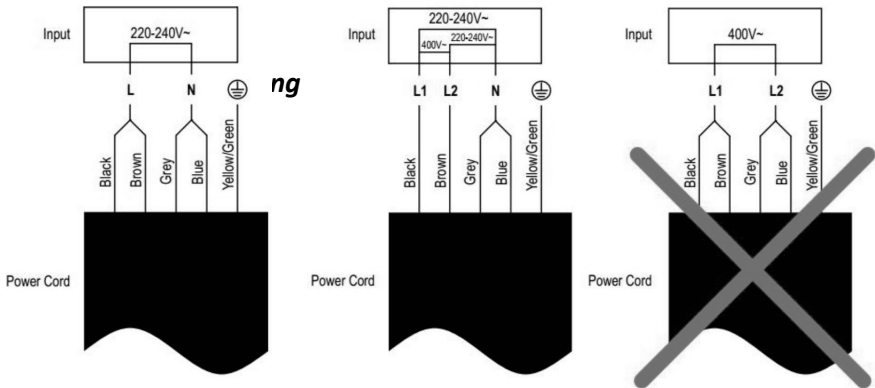

The wires in the mains lead are coloured as follows:

GREEN AND YELLOW: EARTH
BLUE AND GREY: NEUTRAL
BROWN AND BRACK: LIVE

 
- Release the cover plate by removing the cover screw
- Loosen the cable clamp
- Connect the mains supply cable to the terminal block on the hob using the colour code
- Secure the cable clamp
- Check the cable terminals for tightness and ensure that the terminal links are in place, then replace the cover plate and cover screw

Using Your Hob Top

Before first use, clean the hob surface (see “Cleaning and Care” section). Switch on one cooking zone at a time for 5 minutes at the maximum setting to eliminate any smell. Place a saucepan half filled with cold water on each zone as you burn it off.

To start cooking

1. Place pan on cooking zone that you wish to use
2. Select the control knob for the relevant zone and adjust to the required power level
3. When you have finished cooking turn the cooking zone off by turning the control to the “OFF” position.

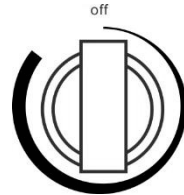

WARNING! *There is a risk of burns from residual heat*

Warning! Do not allow any object to drop on the hob. Never use a hob which is cracked as water may leak through to the electrics. If the hob cracks switch off the appliance immediately as there is a risk of electric shock

IMPORTANT:

The hob surface is tough; however it is not unbreakable and can be damaged. Do not use the hob if the surface becomes broken or cracked.

Cleaning and Care

- Always turn the appliance off before cleaning and disconnect from your mains supply
- Do not clean using caustic creams, abrasive cleaning powders, wire wool or hard tools on any parts of this hob. Use warm soapy water or apply a ceramic cleaner
- The hob can be damaged if excess cleaning liquids are not immediately removed
- Remove any residues of cleaning agents with warm soapy water
- Do not clean your hob with a steam cleaner
- Clean spillages immediately
- Any damage that is caused to the appliance by a cleaning product will not be rectified even if the appliance is within the guarantee period
- When the power is switched off, there will be no 'hot surface' indication but the cooking zone may still be hot! Take extreme care
- It is easier to clean some deposits whilst the hob surface is still warm, but be careful of burns
- Wipe the ceramic surface using a damp cloth
- Wipe dry with a soft and dry cloth
- Do not scrape dried residues from the glass ceramic surface
- Remove yellow stains with vinegar or lemon juice
- Sugar-based foods must be cleaned before the surface cools down
- The colour of the ceramic top may fade over time, this is not a defect
- Fruit juices cause stains that can be permanent

Top Tips

- Avoid using pans on the hob that are unstable as they may be easily tipped over
- Use pans that have sufficient capacity for the amount of food being cooked so that they don't boil over
- Use dark coloured enamelled cookware to maximise heat transmission
- Always position pans centrally over each hob zone
- Select the burner which is suitable for the size of the bottom of the pot to be used
- Thick based pots will conduct heat more effectively
- When moving a pan from one zone to another, lift the pan and do not slide it
- Ensure that the base of the pan is dry before placing it on the burner
- Keep children and animals out of reach of the hob during and after cooking
- After use the hob remains very hot for a prolonged period of time, do not touch or place any object on top of the hob
- Never place cutlery or lids on the hob as they will get hot and could cause serious burns
- When deep fat frying never fill the pan more than one third full of and do not use a lid; Never leave oil unattended
- Fry small quantities of frozen food at a time as the temperature lowers causing the food to be greasy if too large a quantity is cooked
- Dry food before lowering into hot oil
- Keep the outside of your pans free from streaks of oil
- Do not store chemicals, food stuffs, pressurised containers in or on the cooker or in cabinets immediately above or next to the cooker
- Do not heat unopened food containers as pressure can build up which may cause the container to burst
- Do not place flammable or plastic items on or near the hob zones
- Do not allow fat or oil to build up in the oven trays, grill pan or on the oven base

- Do not allow electrical fittings or cables to come into contact with areas on the appliance that get hot
- Be careful if using alcohol as a cooking ingredient, there is a danger of ignition

Disposal of Electrical Appliances

Dispose of used electrical appliances in an environmentally friendly manner. This cooker bears the symbol for waste electrical and electronic equipment (WEEE). This means that this equipment must be handled in accordance with European Directive 2012/19/EU for recycling to minimise damage to the environment. Before disposing of the appliance, cut off the power cable plug and remove the door to avoid accidents.

Technical Specifications

Cooking Zones	4 Zones
Supply Voltage	220-240V~/380-415V~,50-60Hz
Installed Electric Power	5490-6533W
Product Size L×W×H(mm)	590X520X52
Building-in Dimensions A×B (mm)	560X490

Note: Weight and Dimensions are approximate

Problem Solving

Problem	Possible causes	What to do
The hob cannot be turned on	No power.	<p>Make sure the ceramic hob is connected to the power supply and that it is switched on.</p> <p>Check whether there is a power outage in your home or area. If you've checked everything and the problem persists, call a qualified Technician.</p>
The glass is being scratched.	Rough-edged cookware, unsuitable, abrasive scourer or cleaning products being used.	<p>Use cookware with flat and smooth bases. See 'Choosing the right cookware'.</p> <p>See 'Care and cleaning'.</p>
Some pans make crackling or clicking noises.	<p>This may be caused by the construction of your cookware</p> <p>(Layers of different metals ,vibrating differently).</p>	This is normal for cookware and does not indicate a fault.

Health & Safety

Location

- This appliance is intended to be used in a household only. It is not suitable for use in shops, offices or other working environments
- Do not use outdoors
- Do not place appliance on a highly polished wooden surface as damage may occur to the surface
- This appliance should not be used in a garage, conservatory, annex, shed or out-house

Mains Cable

- Do not let the lead run across an open space
- Do not let the cable run across the hob area which may damage the cable
- The mains cable should reach from the socket to the base unit without straining the connections
- The power cord cannot be replaced

Personal Safety

- To protect against the risk of electric shock ensure the electrical connections are kept dry
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities
- The sharp blade of a hob scraper is exposed when the safety cover is retracted. Use with extreme care and always store safely and out of reach of children

Children

- Children should be supervised to ensure that they do not play with this appliance
- Teach children to be aware of dangers in the kitchen
- Do not allow children to play with the appliance or tamper with the controls

Other Safety Considerations

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner
- Do not use the appliance for anything other than its intended purpose
- If the appliance is dropped or damaged in any manner, return the appliance to the nearest authorized dealer or after-sales service centre for examination, repair, electrical or mechanical adjustment

How to Extinguish a Fire

1. Turn off the power.
2. Cover the pan with a fire blanket, lid or damp cloth. This will smother the flames and extinguish the fire.
3. Leave the pan to cool for at least an hour before attempting to move it. Injuries are often caused by picking up a hot pan.

WARNING: **Never Use Water to Extinguish Oil or Fat Pan Fires.**

Warning: **Risk of Burns! Never touch hot burners. always use heat resistant gloves**

Warranty Information

Registering Your 2 Year Guarantee

Your standard one year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with the supplier Shomar Ltd. If you do not register the product with Shomar Ltd within 28 days, your product is guaranteed for 1 year. To validate your 2 year guarantee register with us by completing the form attached and posting it to Shomar Ltd.

Please note that the 2 year guarantee is only available in Ireland and the UK only.

Please refer to the one year guarantee for more information.

One Year Guarantee

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the product.

Model no.

Serial no.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced. If for any reason, this item is replaced during the guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 1 year guarantee, the appliance must have been used according to the instructions supplied.

Exclusions

Shomar Ltd shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff.
4. The appliance has been used for hire purposes or non-domestic use.
5. The appliance is second hand.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. This guarantee is valid in Ireland and the UK only.

PowerPoint products are intended for household use only. See usage limitations in "safety instructions". Shomar Ltd has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

Customer Care

The After Sales Division for PowerPoint Appliances is located at the offices of the Brand owner and Distributor –

Shomar Ltd, Unit 9 Western Industrial Estate, Dublin 12, Republic Of Ireland.

Helplines (office hours) & Spare Parts contact number is 01-4509150 or email service@shomar.ie

To validate your 2 year guarantee register with us by completing the form attached and posting it to Shomar Ltd.

PowerPoint