

# ***PowerPoint***

## **Freezer**


### **P1245TTFMDW**

## **Instruction Manual**

*This product was supplied by Shomar Ltd Dublin. If you have any problems with the operation of this appliance please contact us on Dublin 01 - 4505327 or visit our web site [www.powerpointappliances.ie](http://www.powerpointappliances.ie).*

## WARNING

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Do not store explosive substances such as aerosol cans with a flammable propellant in the appliance.
- This appliance is intended to be used in household only.

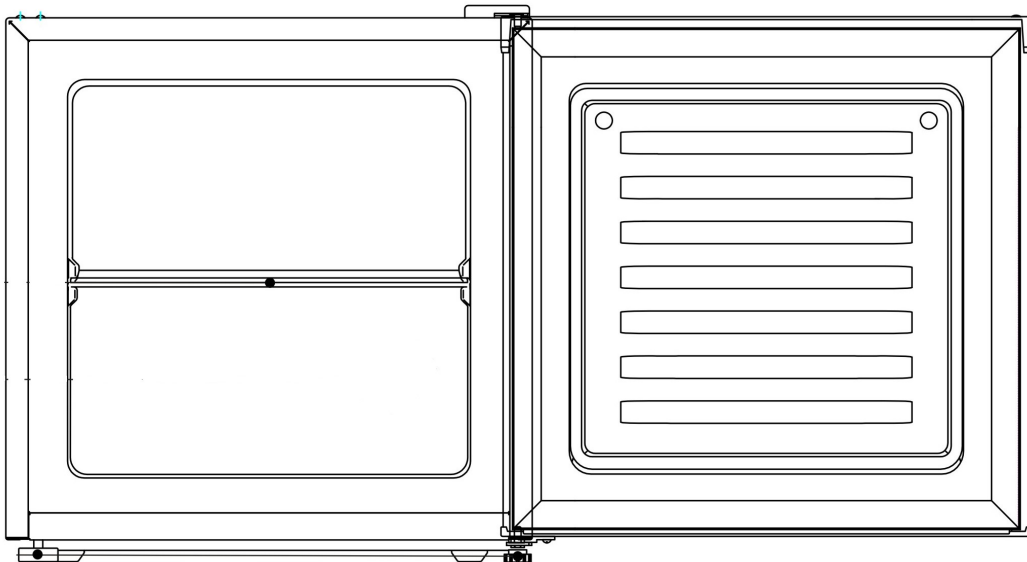

## Transportation and Handling

When moving the unit, always hold the base, and lift carefully while keeping the unit upright. The unit should never be tilted beyond 45 degrees, placed upside down, or laid on its side, back, or front. Never hold onto the door for support while moving the unit. It may damage the hinges.

## Installation

- Place the freezer on a flat, firm surface. This will help eliminate noise caused by vibration.

- Choose a well ventilated area. There should be at least 10 cm of open space along the sides, top, and back of the freezer.
- Select a location which is away from heating sources, direct sunlight, ovens, etc. Also, the area should be dry, and free of damp, stale air.

**WARNING! This appliance must be placed in a dry location.**

### **Testing**

- Clean the freezer with lukewarm water and detergent, and wipe dry.
- **Note:** Electrical components should be cleaned with a dry cloth.
- Turn the thermostat knob to the “NOR” position, and plug the freezer into the wall outlet. The compressor will begin to run.
- Check, after 30 minutes of operation, to ensure that the freezer is cold.

### **Temperature Control**

- The temperature control is located inside the unit.
- Turning the thermostat knob adjusts the temperature of the freezer.
- The marks on the knob represent different settings. Setting “MIN” is the warmest and setting “MAX” is the coolest.
- The factory recommended setting is “NOR” for normal operating conditions.

### **Tips and Hints**

- Fresh foods such as fish and meat can be frozen to maintain freshness, and keep the nutrients in the food.
- Food should be wrapped in aluminum foil, or some other type of airtight packing.
- Do not allow frozen food in freezer to touch foods just placed into freezer. It can damage the food.
- Frozen foods from the store should be placed in the freezer promptly, so they do not thaw.
- Never place fresh vegetables and fruits into the freezer as they can get freezer burn.

### **Defrosting**

When the freezer operates for a long period of time, the surface of the evaporator and the drawers may become covered with a layer of white frost. This frost will reduce the energy efficiency of the unit, and make the freezer less effective. When this frost forms, it should

be promptly removed. When defrosting, unplug the freezer, and remove all items from the freezer. Either allow the frost to melt naturally from the warm air in the room. Finally, wipe away any remaining ice and water, plug the freezer in, and return the food to the freezer.

**CAUTION:** Never use sharp tools to chip ice away.

## **Precautions:**

- The freezer should be located in a place that allows easy access to the plug.
- Do not sit on freezer, or place heavy objects on top of freezer.
- Do not connect your freezer to an independent power outlet. Always make sure to use a safe ground wire. The voltage should be limited within the ranges from 220V to 240V, or the main motor will be damaged.
- After a power outage, wait 5 minutes before turning freezer on. Otherwise, the compressor may become damaged.
- Always allow for proper air circulation to the back, sides, and top of unit. Also, make sure the packing base is removed from the bottom of the unit prior to operation.
- Keep the power cord away from the compressor and condenser to prevent damage to the cord due to high temperatures.
- For best energy efficiency, open the freezer infrequently. Frequent opening of the door requires extended compressor run time, which increases the energy consumption.
- Clean freezer after each defrosts.
- Do not touch frozen food with wet hands, as you can suffer frostbite.
- Do not use the extended power cords.
- Warning-Do not damage the sealed system.
- Warning-Do not use electrical appliances inside the freezer.
- Before disposing of this freezer at the end of its useful life, capture the refrigerant accordingly.
- The appliance must be positioned so that the plug is accessible.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Please dispose the appliance according to the local rule for the blowing gases.

## **General Instructions for Care and**

### **Maintenance**

Once a month, clean the freezer. See below for cleaning instructions. If you wish to stop using the freezer for a long period of time, make sure you unplug the freezer from the outlet, remove all food, clean and dry the freezer, and leave the freezer door open, to

eliminate any unpleasant odors.

## Cleaning

- Unplug the freezer.
- Use water and a non-abrasive detergent.
- Clean with a soft cloth soaked in this solution and always dry prior to resuming operation.

## Trouble shooting

**Symptom:** Appliance will not work at all.

**Cause:** The unit is not plugged into the outlet, or the plug is loose. Power is not being supplied to the outlet in the home.

**Symptom:** Noisy operation.

**Cause:** The freezer is not on a flat surface. The freezer is in contact with a wall or other object.

**NOTE:** The following are normal operation. These are Not indications of improper operation.

- Refrigerant may make a gentle sound similar to running water.
- In humid areas, some moisture may gather on the outside of the freezer. Just wipe away.
- The compressor becomes very hot. Do not touch the compressor.
- Heat around the door frame is normal.

## Disposal

Old appliances still have some residual value. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again.


The refrigerant used in your appliance and insulation materials require special disposal procedures. Ensure that none of the pipes on the back of the appliance are damaged prior to disposal. Up to date information concerning options for disposing of your old appliance and packaging from the new one can be obtained from your local council office.

## **WARNING! This appliance must be placed in a dry location.**

### **PROTECTION OF THE ENVIRONMENT– DIRECTIVE 2002/96/EC**

In order to preserve our environment and protect human health, the waste electrical and electronic equipment should be disposed of in accordance with specific rules with the implication of both suppliers and users. For this reason, as indicated by the




symbol  on the rating label or on the packaging, your appliance should not be disposed of as unsorted municipal waste. The user has the right to bring it to a municipal collection point performing waste recovery by means of reuse, recycling or use for other applications in accordance with the directive.

Due to product's changing and improving, the exact product for the consumer may not correspond with some details in the instruction.

Remarks:

This appliance is intended for DOMESTIC use ONLY.

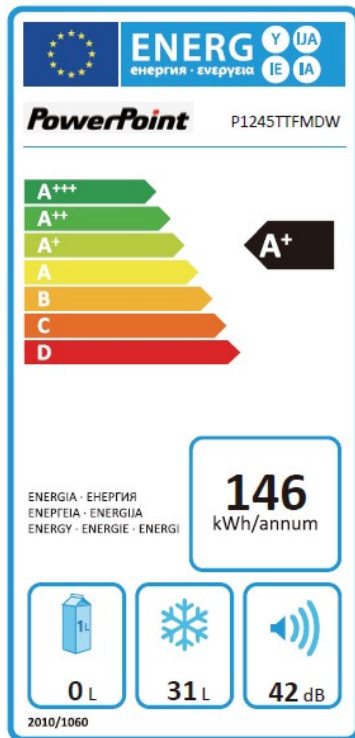

Supplier's trademark	PowerPoint
Supplier's model	P1245TTFMDW
Category of refrigerating appliance	Household refrigerating appliances categories
Energy efficiency class	A+
Annual energy consumption(kWh)	146
Freezing storage volume & star rating	31
Refrigerator storage volume	/
Identification of frost free compartments	/
Temperature rise time (power-cut safe time)	16h
Freezing capacity	2kg/24h
Climate class	ST This appliance is intended to be used at an ambient temperature between 16 °C and 38 °C.
Airborne noise emissions	42dB

\*Energy consumption 146 kWh per year, based on standard test results for 24 hours. Actual energy consumption will depend on how the appliance is used and where it is located.

### Registering Your 2 Year Guarantee

Your standard one year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with the supplier Shomar Ltd. If you do not register the product with Shomar Ltd within 28 days, your product is guaranteed for 1 year. To validate your 2 year guarantee register with us visit [www.powerpointappliances.ie](http://www.powerpointappliances.ie)

Please note that the 2 year guarantee is only available in Ireland.

Please refer to the one year guarantee for more information.

## **One Year Guarantee**

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the product.

Model no.

Serial no.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced. If for any reason, this item is replaced during the guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 1 year guarantee, the appliance must have been used according to the instructions supplied.

## **Exclusions**

Shomar Ltd shall not be liable to replace or repair the goods under the terms of the guarantee where:

- The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
- The appliance has been used on a voltage supply other than that stamped on the products.
- Repairs have been attempted by persons other than our service staff.
- The appliance has been used for hire purposes or non-domestic use.
- The appliance is second hand.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. This guarantee is valid in Ireland and the UK only.

PowerPoint products are intended for household use only. See usage limitations in "safety instructions". Shomar Ltd has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

The After Sales Division for PowerPoint Appliances is located at the offices of the Brand owner and Distributor –

Shomar Ltd, Unit 9 Western Industrial Estate, Dublin 12, Republic Of Ireland.

Helplines (office hours) & Spare Parts contact number is 01-4505327 or email [service@shomar.ie](mailto:service@shomar.ie)