




借(通)件登记
旧底图总号
底图总号
签名
日期

技术要求：  
 1、说明书采用70g白色双胶纸；  
 2、尺寸140x210m。  
 3、符合RoHS环保要求。

标记	处数	分区	更改文件号	签名	年、月、日
设计			会签		
审核			会签		
审核			标准化		
审核			批准		

P125514KW  
说明书  
(出口爱尔兰)



阶段标识			重量	比例
				1:1
共5张			第1张	
安徽康佳同创电器有限公司				

# PowerPoint

Please read this user's manual thoroughly before using

## UPRIGHT FREEZER INSTRUCTION

### USER'S MANUAL

MODEL: P125514KW

**Thank you for choosing this PowerPoint refrigerator.  
If cared for correctly you will get many years of use  
from your new appliances.**

**Please log on to [www.powerpointappliances.ie](http://www.powerpointappliances.ie) to  
register your 2 year Free Parts & Labour Warranty,  
order a spare part or contact our after sales service  
department.**

Dear customer:

Thank you for buying this refrigerator. To ensure that you get the best results from your new refrigerator, please take time to read through the simple instructions in this booklet.

Please ensure that the packing material is disposed of in accordance with the current environmental requirements.

When disposing of any refrigerator equipment please contact your local waste disposal department for advice on safe disposal.

This appliance must be only used for its intended purpose.

#### **CAUTION :**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

### TECHNICAL DATA

MODEL	P125514KW
Climate Type	N ST
Protection Class	I
Rated Voltage/Frequency	220-240V~ /50Hz
Rated Current	0.7A
Energy consumption E <sub>32</sub>	0.785kWh/24h
Annual Energy Consumption AE	235kWh/a
Energy Efficiency Class	F
Total Volume	168L
Freezer Compartment Volume	168L
Refrigerant, Mass	R600a , 60g
Freezing Capacity	10kg/24h
Temperature Rise Time	11h
Foaming Agent	Cyclopentane
Net Weight	45kg
Overall Dimension (WxDxH) (mm)	544x560x1445

## WARNING

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- The appliance must be unplugged after use and before carrying out user maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or given instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- Please dispose of the refrigerator according to local regulations due to its use of flammable blowing gas and refrigerant.

propellant in this appliance. This appliance is intended to be used in household and similar applications.

**WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.

**WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance

The foaming agent used in Refrigerator-freezer is flammable. Scrapping and recycling of the Refrigerator-freezer shall be handled by specialized companies to prevent hazards to the environment or other dangers from being caused.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

- this appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of

experience and knowledge if they have been given supervision or in struction concerning use of the appliance in a safe way and understand the hazards involved.

- children shall not play with the appliance.
- cleaning and user maintenance shall not be made by children without supervision.
- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

For compression-type appliances which use flammable refrigerants, instructions shall include information pertaining to the installation, handling, servicing (IEC 60335-2-24)

- this appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved

- children shall not play with the appliance
- cleaning and user maintenance shall not be made by children without supervision



Warning; Risk of fire / flammable materials

### Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## SPACE REQUIREMENTS

**WARNING: Keep flammable materials and vapors, such as gasoline, away from fridge.**

**Failure to do so can result in death, explosion, fire or burns.**

- ◇ To ensure proper ventilation for your fridge, allow for 200mm space on each side
- ◇ between walls, 100mm space between back of your fridge and the wall, and 300mm space between counter top and the roof or ceiling.
- ◇ If you are installing your fridge next to a fixed wall, leave sufficient space on the hinge side to allow for the door to swing open.
- ◇ Never install your fridge near heat source and direct sun shins.

## ELECTRICAL REQUIREMENT

**WARNING: DO NOT REMOVE GROUND PRONG.**

**DO NOT USE AN ADAPTOR.**

**DO NOT USE EXTENSION CORD.**

- ◇ Failure to follow these instructions can result in death, fire or electrical shock.
- ◇ Before you move your refrigerator into its final location, it is important to make sure you have the proper electrical connection.

### Recommended Earthing Method

AC 220-240V /50 Hz only 10 ampere fused and properly earthed electrical supply is required. It is recommended that a separate circuit serving only this appliance be provided. Use a receptacle which cannot be turned off with a switch or pull chain. Do not use an extension cord.

**NOTE:** Before performing any type of installation, disconnect the fridge from the electrical source. When you are finished, connect the fridge to the electrical source and reset the control to the desired setting.

## LEVELING

If the fridge is not leveled during installation. The doors may not close or seal properly, causing cooling, frost, or moisture problems. It is very important of the fridge to be level in order to function properly. To level your fridge you may either turn the level leg clockwise to raise that side to the fridge or turn counter – clockwise to lower that side.

**NOTE:** Having someone push against the top of the fridge take some weight off the leveling leg. This makes it easier to adjust the leveling leg.

## USE OF THE APPLIANCE

- ◇ To obtain the best possible results from your refrigerator, it is important that you operate it properly
- ◇ before using, here is the brief instruction: red light: operation of compressor; green light: power; yellow light: warning of temp. exceeding.

### Temperature Control

◇ The temperature in the freezer is controlled by the thermostat control knob in front of the top cover. Turn the thermostat control knob up or down to regulate the temperature inside the freezer. The markings on control knob indicated the “MIN, MAX” for the different temperature grades.

The temperature decreases with position MIN being the warmest and position MAX being the coldest.

◇ Set the control to position between “MIN” and “MAX” for normal use, the exact position is beyond the temperature in the freezer, generally, it is in the middle.

### Store Frozen Food

◇ When using the freezer for the first time or after defrosting, turn the temperature control to set MAX for at least two hours before introducing the food to be stored.

◇All frozen food products you purchase should be placed in the freezer as soon as possible to avoid the frozen food from defrosting.

Storage recommendation printed on the packaging of frozen food by the manufacturers should be always be followed.

◇Be careful that the drawer mustn't mangle the refrigeration pipeline.

### **Freezing Fresh Food**

Ensure that your freezing operations are carried out under the most hygienic conditions as freezing alone does not sterilize the food. It is advisable to freeze the food by packing it into separate meal portions and not in bulk form. Never put hot or even warm foodstuffs into the freezer. Prior to storing the frozen food, pack it in plastic bags, aluminum sheets or freezing containers and place into the freezer. See the data sheet at the rear of this booklet for the maximum permissible amount in kilograms of fresh food that can be frozen in any 24 hour period with a room temperature of 25°C. Never freeze more than the maximum permissible.

**NOTE:** Never put bottled food or drinks in the freezer compartment. For best performance, leave enough space in the fridge compartment for air to circulate around the packages.

### **Defrosting**

◇Remove the mains plug from the wall socket, open the door and remove all the food to a cool place. Defrost using a plastic scraper, or let the temperature rise naturally until the frost melts. Then wipe away the remaining ice and water, after this plug the freezer back into the mains supply.

**NOTE:** To avoid damaging the freezing compartment wall, do not use any sharp objects to remove the frost or separate the frozen food.

### **Cleaning your freezer**

◇Before you start to clean your freezer remove the mains plug from the power supply.

◇Use a clean sponge or soft and a mild detergent in warm water. Do not use abrasive or harsh cleaners. Hand wash, rinse and dry all surfaces thoroughly.

◇Do not use cleaning waxes, concentrated detergents, bleaches or cleaners containing petroleum on plastics and rubber parts.

◇Never use paper towels, window sprays, scouring cleansers or flammable fluids on plastic parts as these can scratch or damage material.

◇Clean with a cloth soaked in this solution and then dry with a soft cloth.

## **PROLONGED OFF PERIODS**

If the freezer is not in use for a long period of time, proceed as follows:

◇Disconnect the freezer from the main supply by removing the plug from the wall socket.

◇Clean and dry the inside as instructed under the heading of cleaning the fridge.

◇Leave the door open to prevent any unpleasant smells from building up while the freezer is not in use.

## **TROUBLESHOOTING**

In case of malfunction, you can solve many common problems easily.

**Your refrigerator will not operate...** Check if

--The power supply cord is unplugged.

**The doors will not close completely...** Check if

--The drawers are out of position.

--The gaskets are dirty.

--The refrigerator is not level.

**The freezer is noisy when running...** Check if

--Check the freezer is level and it is not in contact with another appliance or kitchen furniture.

### **The freezer does not cool sufficiently...** Check if

--If the door has been opened too often, or it has been left open for a while it will take time for the freezer to reach its set temperature.

--Check the airflow the rear of the freezer has not been reduced due to insufficient clearance.

### **The following characteristics should not be looked upon as a problem.**

-- A gentle tricking sound caused by coolant flowing the pipe.

Compressor operating at high temperature.

### **WARNING**

--the appliance is not intended for use by young children or infirm persons without supervision.

-- young children should be supervised to ensure that they do not play with the appliance

--This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

-- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

-- Do not damage the refrigerant circuit.

-- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

-- The instructions shall state that the appliance has to be unplugged after use and before carrying out user maintenance on the appliance.

-- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

### **For household refrigerating appliances**

◇ Try not to open the door too often, especially when the weather is wet and hot. Once you open the door, mind to close it as soon as possible.

◇ Every now and then check if the appliance is sufficiently ventilated (adequate air circulation behind the appliance).

◇ For household refrigerating appliances, in normal temperature conditions , please arrange the thermostat at the middle setting.

◇ Before loading the appliance with packages of freshfoods, make sure they are cooled to ambient temperature.

◇ Ice and frost layer increase energy consumption, so do clean the appliance as soon as the layer is 3-5 mm thick.

◇ If it is the outer condenser, the rear wall should be always clean free of dust or any impurities.

◇ Always consider instructions stated in sections Positioning and Energy Saving Tips, otherwise the energy consumption is substantially higher.

## **REQUESTING ASSISTANCE OR SERVICE**

**If the problem is not due to one of the items listed in Troubleshooting,**  
Contact the dealer or authorized Service Company.