 


PowerPoint

Built In Electric Oven

P24EFSBL / P24EFSSS

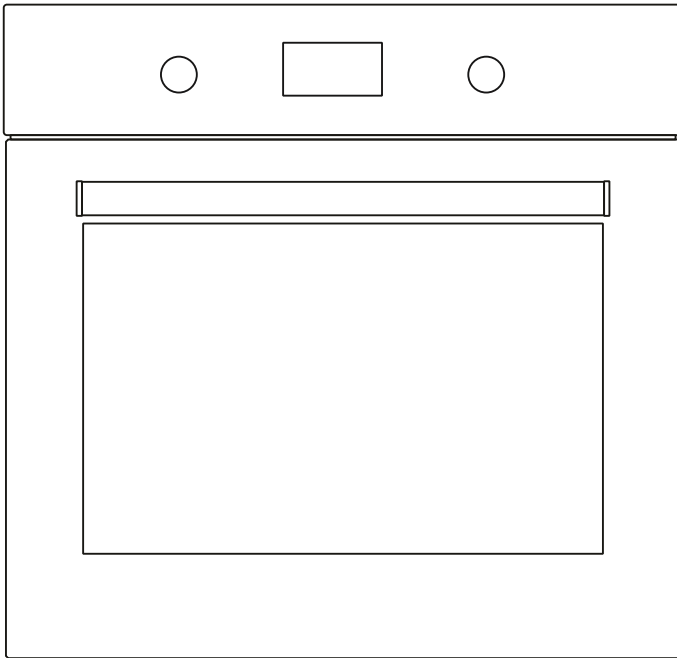

INSTRUCTIONS:

Please read and keep safe for future use.

Table of Contents

Safety Instructions.....	3
Electrical Requirements	4
Installation	5
Using your Oven	8
Cleaning and Care	9
Replacing the Bulb/Top Tips	11
Disposal/ Problem Solving	12
Health and Safety	13
Warranty Information.....	14
Customer Care	16



Safety Instructions

The use of any electrical appliance requires the following common sense safety rules. There is danger of injury or death to the person and damage to the appliance.

Note: *If the following instructions are not adhered to the warranty will not be applicable*

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities unless there is a person responsible for their safety present
- Never attempt to repair the appliance yourself
- This appliance is intended to be used in household only, it is not suitable for commercial use
- Keep the electrical cable of your oven away from any heat source and do not let the cable touch the appliance
- Ensure that the electric supply cable is not trapped or damaged during Installation
- Prior to Installation ensure that the electricity voltage and frequency are compatible with your oven
- In the event that the cable becomes damaged, it must be replaced by an electrician
- The materials surrounding the appliance (cabinets) must be able to withstand a minimum temperature of 100°C
- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching hot parts
- Do not allow children in the kitchen when cooking or while oven parts may still be hot. Many parts of the oven will become hot and present a considerable hazard to children
- When the oven is hot never touch the door
- Before starting to use your appliance ensure that paper or flammable items are kept away from your appliance. Do not keep flammable materials inside of or around your oven
- Take care when closing the oven door that there is nothing obstructing as this may break the glass door
- Always grill with the door closed

- Make sure the cooker control knobs are all in the off position when not in use
- If you do not intend to use your oven for a long period of time turn off the electric supply
- Do not try to lift or move this oven by pulling on the door handle
- Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock
- Your appliance is produced in accordance with all applicable local and International standards and regulations and must only be installed by an authorized service technician
- Do not lean anything on the door while it's open as you may unbalance your appliance or damage the door or its hinges
- Do not hang towels, dishcloths or clothes from the oven or its handles
- Do not operate the appliance using an external timer or remote control system

Electrical Requirements

Warning: This appliance must be earthed

 
Warning: There is risk of electric shock

- All electrical connections should be made by a qualified Electrician
- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current)

Installation Instructions

- This oven must be installed according to local regulations by a suitably qualified technician
- Carefully unpack the oven and check for any external visible damage. Do not install or use if it is damaged
- Packaging materials should be collected together and disposed of immediately as they may be harmful to children
- This oven should not be installed next to a refrigerator or freezer
- Keep all ventilation slots clear of obstruction

Fitting the Oven into the Kitchen Unit

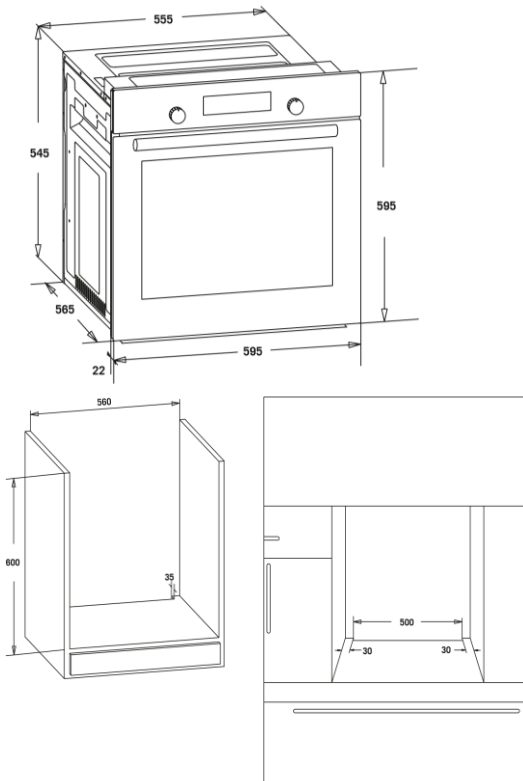


Fit the oven into the space provided in the kitchen unit. The oven may be fitted underneath a work top or in an upright cupboard. Fix the oven in


position by screwing into place, using the two fixing holes in the frame. To locate the fixing holes, open the oven door and look inside. To allow adequate ventilation the measurements and distances indicated must be adhered to.

The panels of the kitchen unit that are next to the oven must be heat resistant. Remove the back of the kitchen unit to ensure an adequate current of air circulates around the oven. The hob must have a rear gap of at least 45 mm.

 Securing your oven to the cabinet

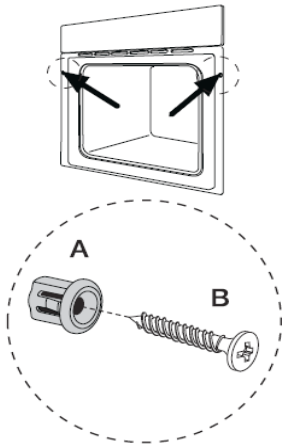

 - Fit oven into the cabinet recess
- Open the oven door
- Secure the oven to the kitchen cabinet with two distance Holders "A" which fit the holes in the oven frame and fit the two screws "B".

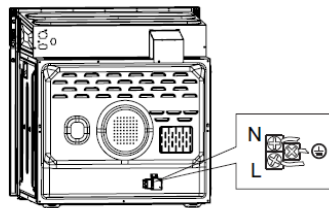

Connection the Oven


The wires in the mains lead are coloured as follows:

GREEN AND YELLOW:	EARTH
BLUE:	NEUTRAL
BROWN:	LIVE


- Release the cover plate by removing the cover screw

- Loosen the cable clamp
- Connect the mains supply cable to the terminal block on the cooker using the colour code
- Secure the cable clamp
- Check the cable terminals for tightness and ensure that the terminal links are in place, then replace the cover plate and cover screw

 
Correct Shelf Placement:

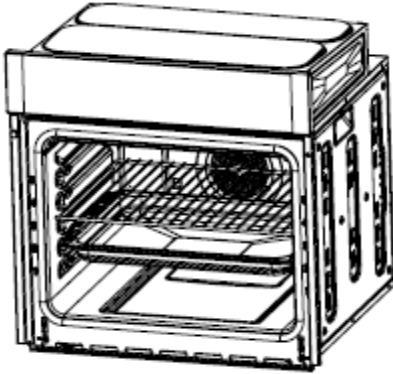

Accessories:

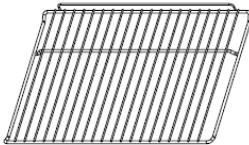 


Wire Shelf

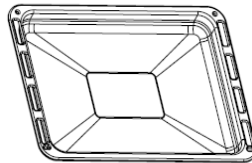 

Universal Pan

Using Your Oven

 When using your oven for the first time your oven may give off an unusual smell from the heating elements and insulation materials. This is normal for new cookers. To eliminate this smell run the oven at 250 degrees for 40-60 minutes with the oven empty. When cool clean with warm soapy water.

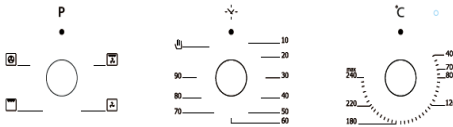

The following cooking functions available on your appliance:



Fan



Turbo Heater with Fan: Combination of the fan and both heating elements provides more even heat penetration, saving up 30-40% of energy. Dishes are lightly browned on the outside and still moist on the inside. This function is suitable for grilling or roasting big pieces of meat at a higher temperature. If the oven temperature is over 75 °C the fan will continue to operate for 15 minutes after cooking completion time or until the oven temperature has reduced to 75 °C.



Radiant Grilling: The inner grill element switches on and off to maintain temperature. Best results can be obtained from using the top shelf for small items and lower shelves for large items.



Grilling with Fan: The inside radiant element and top element work with fan

Setting the Functions

 
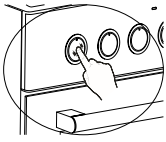 


Figure 7*

Turn the knob to function required. Turn the temperature knob to the required temperature. The oven will automatically operate once function, time and temperature are set. If the oven is not in use, always set all the knobs to "0".

Setting the Timer

To set the cooking time, turn the timer knob clockwise to the time required. When the setting cooking time is reached, the timer will return to "0" automatically, you will hear a bleep and the oven will power off.

Cleaning and Care

Cleaning the Oven

- Do not clean oven using caustic creams, abrasive cleaning powders, wire wool or hard tools to clean any parts of this cooker
- Enamelled parts of the oven can be damaged if excess cleaning liquids are not immediately removed
- Always turn the appliance off before cleaning and disconnect from your mains supply
- Clean the interior parts of the oven with a soapy cloth, rinse and dry thoroughly with a soft cloth
- Clean the glass surfaces with glass cleaning agents
- Never use flammable agents when cleaning your oven
- Do not clean your oven with a steam cleaner
- Do not wash any part of your oven in a dishwasher
- Clean spillages immediately

- Remove the glass front door by unscrewing the fixings using a screwdriver, remove the inside glass, clean and rinse it. After drying replace the seal properly and re-install the glass
- Cleaning of the oven should be carried out on a regular basis, clean the interior after each use. Fat accumulation or other food remains may result in a fire
- Care must be taken when cleaning between the door glass and inside the inner frame as the edges may be sharp
- Cleaning must only be carried out when the oven is cool
- The oven should be thoroughly cleaned before it is operated for the first time and after each use. This will avoid residual food stuffs becoming baked onto the oven cavity. After residues have been baked on several times, they are far more difficult to remove
- Outer parts of the oven should only be cleaned with warm soapy water using either a sponge or soft cloth
- Any damage that is caused to the appliance by a cleaning product will not be rectified even if the appliance is within the guarantee period
- Do not use abrasive cleaners or sharp metal scrapers to clean the oven door glass as it may shatter

Removing the Oven Door for Cleaning:

To facilitate the cleaning of the inside of the cooker and the outer frame of the oven, the door can be removed as follows:-

- The hinges have two movable bolts on them, if you raise both of the movable bolts then the hinges are released from the oven housing
- Grip the sides of the door at the centre and then incline it slightly towards the cooker cavity and then pull it gently away from the cooker cavity
- Ensure that the door is supported at all times and place the door on some padded material whilst cleaning
- The oven door and door glass should only be cleaned using a damp cloth and a small amount of detergent. The cloth must not have come into contact with any form of cleaning product or chemical previously
- To refit the door, slide the hinges back into their slots and open the door fully
- Movable bolts must be closed back into their original positions before closing the door

- Take care not to dislodge the hinge locking system when removing the door as the hinge mechanism has a strong spring
- Do not immerse the door in water

Replacing the Oven Bulb

IMPORTANT: Disconnect oven from mains supply before removing or replacing the oven bulb.

- Remove all oven shelves and the drip tray
- Unscrew the lamp cover
- Unscrew the bulb and remove it from its holder
- Replace the bulb with a 25-40W/220V-240V , T300°C halogen lamp
- Do not use any other type of bulb
- Screw the lamp cover back into its original position

Top Tips

- Do not open oven door too frequently
- Do not store chemicals, food stuffs, pressurised containers in cabinets immediately above or next to the oven
- Do not heat unopened food containers as pressure can build up which may cause the container to burst
- Do not allow fat or oil to build up in the oven trays, grill pan or on the oven base
- Do not place pans or baking trays directly on the base of the oven cavity, or line it with aluminium foil
- Do not grill food containing fat without using the grill trivet. The grill trivet should never be covered with aluminium foil
- Do not place hot enamel parts in water, leave them to cool first
- Do not allow electrical fittings or cables to come into contact with areas on the appliance that get hot
- Extend baking times by 10 – 15 minutes if you are baking on more than one level
- Food should not be placed inside the cavity until the correct cooking temperature has been reached

- Refer to the conventional oven section on food packaging for guidance on cooking temperatures and times. Once familiar with the performance of your appliance, temperatures and times can be varied to suit personal preference
- Check that any unused accessories are removed from the oven
- Place cooking trays in the centre of the oven and leave gaps between the trays to allow air to circulate
- Keep oven door closed for all cooking functions
- Don't place cookware on bottom of oven, use shelves

Disposal of Electrical Appliances

Dispose of used electrical appliances in an environmentally friendly manner. This oven bears the symbol for waste electrical and electronic equipment (WEEE). This means that this equipment must be handled in accordance with European Directive 2002/96/EC for recycling to minimise damage to the environment. Before disposing of the appliance, cut off the power cable and remove the door to avoid accidents.

Problem Solving

Fault Oven doesn't heat

Cause fuse may be blown, check that you have selected a cooking function and temperature.

Fault Lamp doesn't function

Cause No electricity supply or bulb is faulty

Fault There is condensation in the oven

Cause Steam and condensation are a result of cooking food with high water

content. Do not leave food in the oven to cool after it has been cooked. Use a covered container, where practical, when cooking to reduce the amount of condensation that forms

Health & Safety

Location

- This appliance is intended to be used in household only. It is not suitable for use in shops, offices or other working environments
- Do not use outdoors
- This appliance should not be used in a garage, conservatory, annex, shed or out-house

Mains Cable

- Do not let the lead run across an open space
- Do not let the cable run across the hob area which may damage the cable
- The mains cable should reach from the socket to the base unit without straining the connections
- The power cord cannot be replaced

Personal Safety

- To protect against the risk of electric shock ensure that electrical connections are kept dry
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities
- Use heat resistant gloves to remove hot dishes from the oven
- Stand back when opening oven door to allow the heat to disperse
- Do not place heavy objects on the oven door or lean on the oven door when it is open, as this can cause damage to the hinges

Children

- Children should be supervised to ensure that they do not play with this appliance
- Teach children to be aware of dangers in the kitchen
- Do not allow children to play with the appliance or tamper with the controls

Other Safety Considerations

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner
- Do not use the appliance for anything other than its intended purpose
- When the door of the oven is open do not leave anything on it, you may unbalance your appliance or break the door
- If the appliance is dropped or damaged in any manner, return the appliance to the nearest authorized dealer or after-sales service centre for examination, repair, electrical or mechanical adjustment

Warning: **Risk of Burns! Never touch hot burners or the inside of the oven. Always use heat resistant gloves**

Warranty Information

Registering Your 2 Year Guarantee

Your standard one year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with the supplier Shomar Ltd. If you do not register the product with Shomar Ltd within 28 days, your product is guaranteed for 1 year. To validate your 2 year guarantee register with us by completing the form attached and posting it to Shomar Ltd.

Please refer to the one year guarantee for more information.

One Year Guarantee

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the product.

Model no.

Serial no.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced. If for any reason, this item is replaced during the guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 1 year guarantee, the appliance must have been used according to the instructions supplied.

Exclusions

Shomar Ltd shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff.
4. The appliance has been used for hire purposes or non-domestic use.
5. The appliance is second hand.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage.

This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. This guarantee is valid in Ireland and the UK only.

Servis products are intended for household use only. See usage limitations in “safety instructions”. Shomar Ltd has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

Customer Care

The After Sales Division for PowerPoint Appliances is located at the offices of the Brand owner and Distributor –

Shomar Ltd, Unit 9 Western Industrial Estate, Dublin 12, Republic Of Ireland.

Helplines (office hours) & Spare Parts contact number is 01-450 5327 or email service@shomar.ie