



***PowerPoint***

**6 kg Washing Machine**

P35106SKW

**7 kg Washing Machine**

P35127SKW

**8 kg Washing Machine**

P35128SKW

**INSTRUCTIONS:**


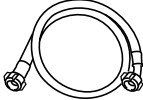

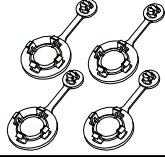
Please read and keep safe for future use.




## ***Installation and User Instructions***

Features.....	3
Safety Instructions.....	4
Electrical Requirements .....	5
Installation.....	6
Connecting to Water Supply .....	7
Before First Use .....	8
Control Panel .....	9
Detergent and Softener .....	12
Using your Washing Machine .....	15
Cleaning and Care.....	16
Moving your Washing Machine / Top Tips .....	17
Problem solving .....	18
Technical data .....	19
Health and Safety .....	22
Warranty Information.....	24
Customer Care .....	25

## Features

instruction	water supply hose	wrench	transportation bolt caps
			

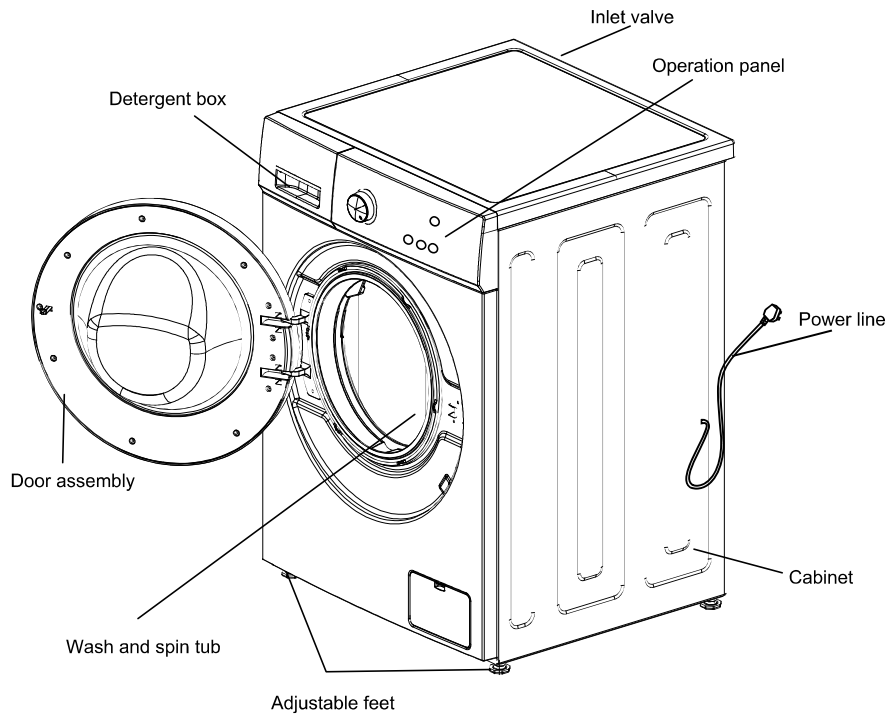

The above picture is just for reference, the detailed information should be based on the real product!

## **Safety Instructions**

The use of any electrical appliance requires the following common sense safety rules. There is danger of injury or death to the person and damage to the appliance.

**Note: If the following instructions are not adhered to the warranty will not be applicable**

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities unless there is a person responsible for their safety present
- This appliance is only intended to wash items which are specified by the manufacturer to be machine washable on the label
- In the event of a power outage, the programme will resume when power is restored
- Have an electrician connect the appliance to a grounded outlet protected by a fuse
- Ensure that the water supply and draining hoses are securely fastened to avoid any water leakage
- Never open the loading door or remove the filter while there is still water in the drum
- Never force the loading door open, it will automatically release at the end of its cycle
- To protect against the risk of electric shock **Never** immerse the appliance body in water or any other liquid and ensure the electrical connections are kept dry. Never hose the appliance down
- Use washing machine detergents and softeners only
- Ensure that appliance is unplugged during installation, maintenance, cleaning and repairs
- This appliance is intended to be used in household and residential type environments, it is not suitable for commercial use
- Keep children away from the appliance while in use and store detergent and softener out of reach

## Electrical Requirements


- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current)
- If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted
- Should the fuse in the 13 amp plug require changing, a 5 amp BS1362 must be fitted
- Do not connect your Washing Machine to the mains electricity supply using an extension lead.

**Warning:**

**The plug removed from the mains lead, if severed, must be destroyed as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet**

**Warning:**


**This appliance must be earthed**

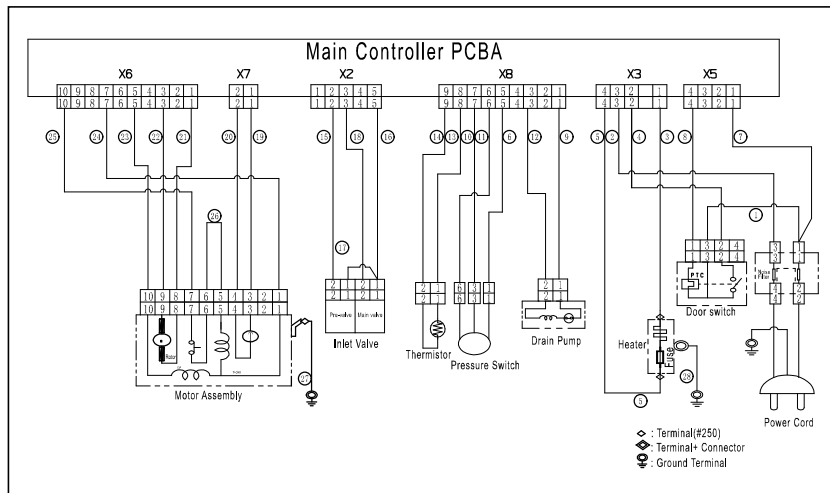

## Installation and User Instructions

- Use an authorised agent to install this appliance ensuring water and electricity source are in place prior to installation
- Remove all the packing including the foam base
- Dispose all the packaging safely and keep out of the reach of children
- It is normal that water drops may appear on the plastic and the door glass as a result of the manufacturers testing process
- Before installing your washing machine, check for any external visible damage. Do not install or use your washing machine if it is damaged
- Ensure that the water inlet, hoses or power cable are not damaged while pushing the product into its place after installation or cleaning
- This appliance must be installed on a flat surface
- Never place your washing machine on carpet
- Don't install washing machine in an area that may be damp
- Don't install washing machine in direct sunlight
- Ensure that the surrounding temperature of the appliance will not drop below 0 °C
- Tilt the appliance gently backwards to remove packaging
- Remove the four transit bolts and the rubber washers from the back of the machine by turning anti-clockwise with a suitable spanner. Pull out the remaining plastic section of each transit bolt and insert the blanking caps
- The distance between the machine and the wall should be 10cm
- To level the machine, use a spanner to turn the locknuts in a clockwise direction. Then turn the locknuts together and adjust feet to unscrew. Use a spirit level to check that the machine is level.


Hold the Adjustable feet securely with a pipe wrench. Turn the locknut Again Using the spanner until it sits firmly up against the housing

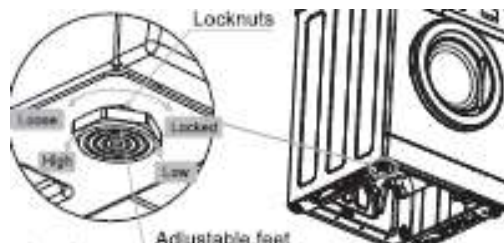

## Connecting the Water Supply


### **Drain Hose Connection Directly to a Sink**

- If the outlet spigot has not been used before, remove any blanking plug that may be in place
- Push the drain hose onto the spigot and secure with a clip if required, Ensure that a loop is formed in the drain hose to prevent waste from the sink entering the washing machine. If required, the drain hose can be extended to a length of 4 m

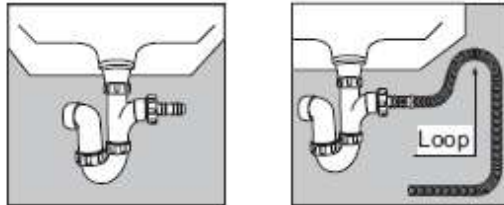

### **Connecting Directly to a Standpipe**

- Firstly form a hook in the end of the drain hose using the “U” piece” Supplied
- Place the drain hose into your standpipe, which should have an internal diameter of approximately 38mm ensuring there is an air break between the drain hose and the standpipe
- When discharging into a standpipe ensure that the top of the standpipe is no more than 90cm and no less than 60cm above floor level

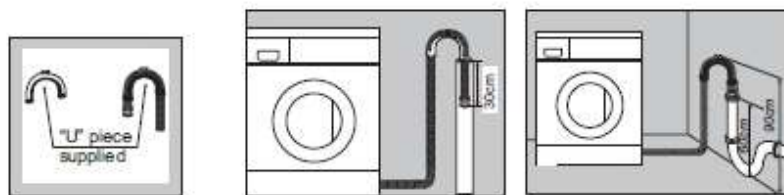


### **Water Inlet Connection**



- Connect the inlet hose supplied with the machine to a tap with a 3/4" thread. Installation should comply with local water authority and building regulations' requirements.



- Connect a water supply to the inlet valve at the back of the machine. Follow the indication of the picture that follows to complete the connection

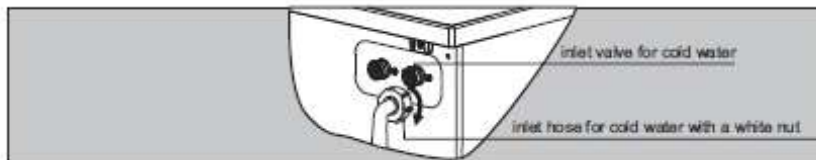

**Warning:**


Your house will be flooded if the hose comes out of its housing during water discharge. There is a risk of scalding due to high washing temperatures. Ensure that you fix the end of the discharge hose tightly so that it cannot come out.

***Before First Use***

***Do NOT connect your appliance to the electricity supply until all packing and transit protectors have been removed.***

Before laundering clothes, perform a cotton cycle using detergent in main wash section of drawer.

## Control Panel

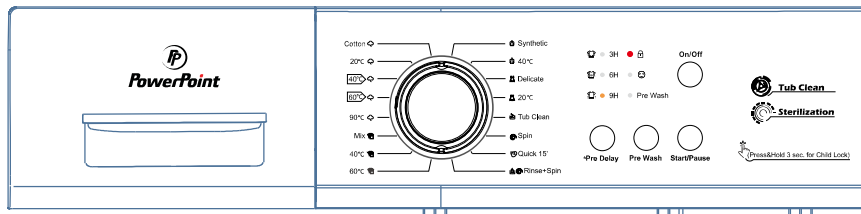

### 1. On /Off Button

Press this button to turn power on / off. When Wash Programme Finished press Power button to cut power off.

### 2. Start / Pause Button

Press this button to Start operating, Press it to also pause during operation press again to continue.

### 3. Pre Wash Button

Press this button if clothes are extra dirty, you can choose this programme before washing.

### 4. Delay button

Press this button to set the delay time of a wash cycle from 3 hours to 18 hours

### 5. Programme Knob

Turn this knob clockwise or anticlockwise to select the required wash program. Once the "Start/Pause" button is pressed and the machine is running, the program cannot be changed. At the end of a wash cycle, the knob must be turned to the position "0".

Standard 60 °C and 40 °C are suitable to clean normally soiled cotton laundry and they are the most efficient programs in terms of combined energy and water consumptions for washing.

### 6. Child Lock Button

Press this Button to prevent against Children operating, When Child lock is in operation all other buttons are unavailable except on /off.

Press Pre Delay button for more than 3 seconds to unlock the child lock function.

## 7. Status Indicator



Wash this Icon indicates the start and end of the wash



Rinse This Icon indicates the start and end of Rinse



Spin This Icon Indicates the start and end of Spin



Door Lock This Icon indicate the when Door Lock on and Off



Child Lock This Icon Is used to control Child Lock on and Off

### ***Programmes:***

Cotton 20, 40, 60 & 90 degree

Mix 40, 60 degree

Synthetic 40 degree

Delicate 20 degree

Drum / Tub Clean

Spin

 

 
 
Quick 15''

Rinse & spin

Child Lock

## The introduction of washing programs

### P35106SKW

program	temperature (°C)	rinse (times)	time (m)	revolution (rpm)	maximum load	Cloth type
Cotton	Cold	2	88	800	rated	general cotton fabrics
20°C	20	2	93	800		
	40	2	254	1000		
	60	2	272	1000		
90°C	90	2	149	800		
Mix	Cold	2	66	800	≤4kg	cotton fabrics/ cellulose compound
40°C	40	2	78	800		
60°C	60	2	95	800		
Synthetic	Cold	2	61	800	≤3kg	cellulose compound
40°C	40	2	73	800		
Delicate	Cold	2	56	800	≤3kg	Gauze/Silk Fabric
20°C	20	2	59	800		
Tub Clean	60	2	78	800	—	Normal (Intensive, Time Save)
Spin	—	—	14	800	rated	cotton fabrics/cellulose compound
Quick 15'	Cold	2	15	800	≤2kg	not too dirty and frequently used clothes
Rinse+Spin	Cold	2	34	800	rated	cotton fabrics/ cellulose compound
<b>Note:</b>   is the standard energy efficiency program.						

 

 
 
**Standard Cotton at 40 °C and 60 °C are suitable to clean normally soiled cotton laundry and they are the most efficient programs in terms of combined energy and water consumptions for washing that type of cotton laundry; in addition, the actual water temperature may differ from the declared cycle temperature.**

Remarks:

- 1.The time consumption will be changed according to the water pressure、cloths variety、quantity、water temperature.
- 2.The difference between displayed on screen and actual time consumption will happen.
- 3.If speed is too lower, poor washing effect will happen, please add more rinse time.
- 4.Different parameters, different models.
- 5.When self-designed default procedure is energy procedure, the washing time will be increased automatically.

## The introduction of washing programs

### P35127SKW

program	temperature (°C)	rinse (times)	time (m)	revolution (rpm)	maximum load	Cloth type
Cotton	Cold	2	88	1000	rated	general cotton fabrics
20°C	20	2	93	1000		
	40	2	275	1200		
	60	2	295	1200		
90°C	90	2	149	1000		
Mix	Cold	2	66	1000	≤4kg	cotton fabrics/ cellulose comdound
40°C	40	2	78	1000		
60°C	60	2	95	1000		
Synthetic	Cold	2	61	1000	≤3kg	cellulose compound
40°C	40	2	73	1000		
Delicate	Cold	2	56	1000	≤3kg	Gauze/Silk Fabric
20°C	20	2	59	1000		
Tub Clean	60	2	78	800	—	Normal (Intensive, Time Save)
Spin	—	—	14	1000	rated	cotton fabrics/cellulose comdound
Quick 15'	Cold	2	15	1000	≤2kg	not too dirty and frequently used clothes
Rinse+Spin	Cold	2	34	1000	rated	cotton fabrics/ cellulose compound
<b>Note:</b>   is the standard energy efficiency program.						

 

 
 
**Standard Cotton at 40 °C and 60 °C are suitable to clean normally soiled cotton laundry and they are the most efficient programs in terms of combined energy and water consumptions for washing that type of cotton laundry; in addition, the actual water temperature may differ from the declared cycle temperature.**

Remarks:

- 1.The time consumption will be changed according to the water pressure、cloths variety、quantity、water temperature.
- 2.The difference between displayed on screen and actual time consumption will happen.
- 3.If speed is too lower, poor washing effect will happen, please add more rinse time.
- 4.Different parameters, different models.
- 5.When self-designed default procedure is energy procedure, the washing time will be increased automatically.

## The introduction of washing programs

### P35128SKW


program	temperature (°C)	rinse (times)	time (m)	revolution (rpm)	maximum load	Cloth type
Cotton	Cold	2	88	1000	rated	general cotton fabrics
20°C	20	2	93	1000		
	40	2	233	1200		
	60	2	248	1200		
90°C	90	2	149	1000		
Mix	Cold	2	66	800	≤4kg	cotton fabrics/ cellulose compound
40°C	40	2	78	800		
60°C	60	2	95	800		
Synthetic	Cold	2	61	1000	≤3kg	cellulose compound
40°C	40	2	73	1000		
Delicate	Cold	2	56	800	≤3kg	Gauze/Silk Fabric
20°C	20	2	59	800		
Tub Clean	60	2	78	800	—	Normal (Intensive, Time Save)
Spin	—	—	14	1000	rated	cotton fabrics/cellulose compound
Quick 15'	Cold	2	15	1000	≤2kg	not too dirty and frequently used clothes
Rinse+Spin	Cold	2	34	1000	rated	cotton fabrics/ cellulose compound
<b>Note:</b>   is the standard energy efficiency program.						

**Standard Cotton at 40 °C and 60 °C are suitable to clean normally soiled cotton laundry and they are the most efficient programs in terms of combined energy and water consumptions for washing that type of cotton laundry; in addition, the actual water temperature may differ from the declared cycle temperature.**

Remarks:

- 1.The time consumption will be changed according to the water pressure、cloths variety、quantity、water temperature.
- 2.The difference between displayed on screen and actual time consumption will happen.
- 3.If speed is too lower, poor washing effect will happen, please add more rinse time.
- 4.Different parameters, different models.
- 5.When self-designed default procedure is energy procedure, the washing time will be increased automatically.

## Using Detergent and Fabric Softener

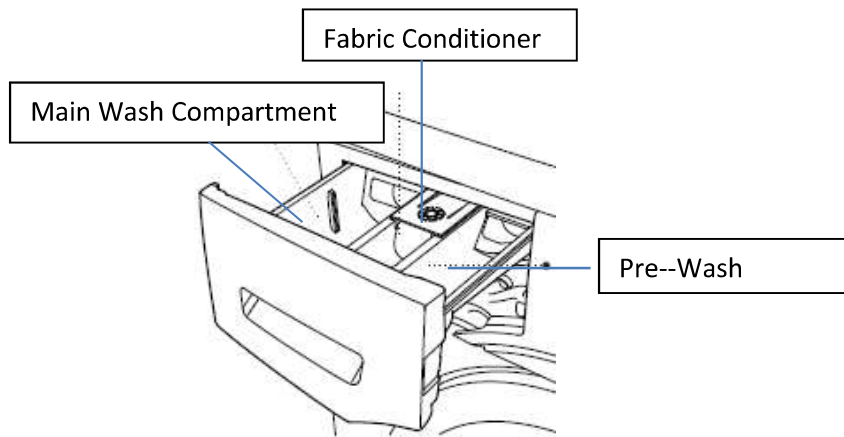

The detergent drawer is made up of 3 compartments:

1. Pre-Wash
2. Main Wash
3. Softener

Different detergents should be used for coloured, white and woollen laundry. See detergent/softener packaging for instruction on quantities required. Tablets may not be suitable for short cycles.

- Add detergent and softener before washing
- Don't open detergent drawer whilst machine is in operation
- If using a programme that does not require pre-wash, do not put any detergent in pre-wash compartment
- Take care to add the correct amount of detergent to your washing machine

## ***Using your Washing Machine***

- Open the door, and put the clothes into the drum one by one
- Choose a programme by turning the knob
- Press “ Start/Pause” button to start the washing machine
- Upon completion of the cycle turn the programme selection dial to the off position. Your washing machine door lock will automatically be released approximately 2 minutes after the programme has finished
- It is possible to stop the cycle by pressing the power button and the lock will release after 2 minutes
- Pull the door handle forwards and open the door
- Remove laundry from the drum
- Leave the door open for a short time to allow the interior of the machine to dry
- Close the door
- The machine is fitted with a balance control device to ensure that it is stable during the spin cycle. This will rotate the drum in reverse to redistribute the load. If after 15 minutes this has not been rectified the machine will not spin and laundry must be redistributed manually and spin cycle reselected



## ***Cleaning and Care***

### ***Cleaning your Detergent Drawer***

This should be cleaned every 4-5 weeks as the use of detergent may cause residual build up in the detergent drawer over time. Remove the drawer at regular intervals to clean the accumulated residue. Clean with a soft brush and replace.

### ***Cleaning the Door and Drum***

Run a Sterilisation programme every 3 months. Wipe the drum clean after each wash ensuring that there is nothing left in the drum. Use a mild, non-abrasive cleaning agent, or soap and water, to clean the external casing. Wipe dry with a soft cloth.

### ***Cleaning Water Inlet Filters***

Water inlet filters prevent dirt from entering your machine. These filters should be cleaned when your machine is unable to receive sufficient water. To clean the water inlet filters:

- Unscrew the water inlet hose from the washing machine by turning the hose anticlockwise and gently pulling
- To remove the water inlet filter from the water inlet valve use pliers to pull on the plastic bar in the filter
- Clean the filter thoroughly with a soft brush, wash with soapy water and rinse thoroughly
- Re-insert the filter by gently pushing it back into place

A second water inlet filter is located in the tap end of the water inlet hose which also needs to be cleaned.

### ***Draining Water and Clearing the Pump Filter***

If the machine fails to drain water the pump filter is clogged:

- Before opening the filter cover, place a container under the filter cover to collect any water left in the machine
- Pull the top of the cover until the pump filter is fully exposed. Allow the water to drain
- Remove any foreign objects from the filter with a soft brush
- Rotate pump by hand
- Clean the pump with a soft brush
- Re-fit the filter by inserting it and turning clockwise
- Close the filter cover

### ***Moving your Washing Machine***

- Unplug the appliance before transporting it
- Remove water drain and water supply connections
- Drain the remaining water in the appliance
- Install transportation safety bolts
- Do not turn machine upside down or on its side
- 2 or more people are required to carry this machine

### ***Top Tips***

- Laundry items with metal elements such as, underwired bras, buckles or buttons will damage the appliance. Remove the metal pieces or wash the clothes by putting them in a laundry bag or pillow case
- Empty pockets
- Put small items in a laundry bag or pillow case
- Do not wash colours and whites together as dark coloured cottons release a lot of dye
- Treat tough stains prior to washing
- Wash delicate laundry turned inside out

- Sort the laundry by colour and by care label
- Close any zips, fasten hooks and eyes etc. before washing
- Dark textiles often contain excess dye and should be washed separately several times before being included in a mixed load
- Always wash whites and coloureds separately
- Badly soiled areas, stains etc. should be pre-treated with liquid detergent, stain removers etc.

#### ***Energy Saving Tips***

- Do not over-load the appliance
- Follow the instructions on the detergent packaging
- Wash lightly soiled laundry at a low temperature
- Do not use prewash or high temperatures for laundry that is not heavily soiled

### ***Problem Solving***

***Fault*** Machine does not operate

***Cause*** Machine is switched off at mains, programme dial is in off position or  
Door is open

***Fault*** Machine not receiving water

***Cause*** Water tap is off, hose is bent or filters are blocked

***Fault*** Machine is not draining

***Cause*** Drain hose is bent or pump filter is obstructed

***Fault*** Machine is vibrating

***Cause*** Feet are not adjusted or transit bolts are in place

***Fault*** Clothes are not washed properly

***Cause*** Incorrect programme was selected, insufficient detergent was used  
or the machine was overloaded

## Technical Data

### Specification

Model	P35106SKW
Rated washing capacity	6.0kg
Rated spinning capacity	6.0kg
Rated voltage	220-240V~,50Hz
Rated washing power	250W
Rated spinning power	400W
Power consumption of off-mode	0.45W
Power consumption of left-on mode	0.50W
Rated heating power	1500W
Maximum power	1750W
Water consumption (Based on 220 standard washing cycles for cotton programmes at 60 °C and 40 °C at full and partial load)	10560 L/annum (Actual energy consumption will depend on how the appliance is used)
Energy consumption (Based on 220 standard washing cycles for cotton programmes at 60 °C and 40 °C at full and partial load)	170 kWh/annum (Actual water consumption will depend on how the appliance is used)
Maximum spin speed	1000rpm
Spin-drying efficiency class	C
Washing noise (Airborne acoustical noise emission during washing phase for standard 60 °C cotton programme at full load)	60dB(A)
Spinning noise (Airborne acoustical noise emission during spinning phase for standard 60 °C cotton programme at full load)	74dB(A)
Waterproof class	IPX4
Water pressure	0.03-1.0Mpa
EU Ecolabel award	N/A

## Technical Data

### Specification

Model	P35127SKW
Rated washing capacity	7.0kg
Rated spinning capacity	7.0kg
Rated voltage	220-240V~,50Hz
Rated washing power	300W
Rated spinning power	500W
Power consumption of off-mode	0.45W
Power consumption of left-on mode	0.50W
Rated heating power	1500W
Maximum power	1750W
Water consumption (Based on 220 standard washing cycles for cotton programmes at 60 °C and 40 °C at full and partial load)	11500 L/annum (Actual energy consumption will depend on how the appliance is used)
Energy consumption (Based on 220 standard washing cycles for cotton programmes at 60 °C and 40 °C at full and partial load)	174 kWh/annum (Actual water consumption will depend on how the appliance is used)
Maximum spin speed	1200rpm
Spin-drying efficiency class	B
Washing noise (Airborne acoustical noise emission during washing phase for standard 60 °C cotton programme at full load)	60dB(A)
Spinning noise (Airborne acoustical noise emission during spinning phase for standard 60 °C cotton programme at full load)	76dB(A)
Waterproof class	IPX4
Water pressure	0.03-1.0Mpa
EU Ecolabel award	N/A

## Technical Data

### Specification

Model	P35128SKW
Rated washing capacity	8.0kg
Rated spinning capacity	8.0kg
Rated voltage	220-240V~,50Hz
Rated washing power	300W
Rated spinning power	500W
Power consumption of off-mode	0.45W
Power consumption of left-on mode	0.50W
Rated heating power	1500W
Maximum power	1750W
Water consumption (Based on 220 standard washing cycles for cotton programmes at 60 °C and 40 °C at full and partial load)	12000 L/annum (Actual energy consumption will depend on how the appliance is used)
Energy consumption (Based on 220 standard washing cycles for cotton programmes at 60 °C and 40 °C at full and partial load)	195 kWh/annum (Actual water consumption will depend on how the appliance is used)
Maximum spin speed	1200rpm
Spin-drying efficiency class	B
Washing noise (Airborne acoustical noise emission during washing phase for standard 60 °C cotton programme at full load)	60dB(A)
Spinning noise (Airborne acoustical noise emission during spinning phase for standard 60 °C cotton programme at full load)	76dB(A)
Waterproof class	IPX4
Water pressure	0.03-1.0Mpa
EU Ecolabel award	N/A

## **Health & Safety**

### *Location*

- This appliance is intended to be used in household and residential type environments. It is not suitable for use in shops, offices and other working environments
- Do not use outdoors or in a bathroom
- Do not place appliance on a highly polished wooden surface as damage may occur to the surface
- Do not place the appliance on or near a hot surface
- This appliance should not be used in an unheated, cold room i.e. Garage, conservatory, annex, shed, out-house etc.

### *Mains Cable*

- Do not let the lead run across an open space
- Do not let the cable run across a cooker or hot area which may damage the cable
- The mains cable should reach from the socket to the base unit without straining the connections
- The power cord cannot be replaced

### *Personal Safety*

- Do not touch discharging hose or water as they may reach high temperatures and risk burning
- To protect against the risk of electric shock ensure the electrical connections are kept dry
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities

### *Children*

- Children should be supervised to ensure that they do not play with this appliance
- Teach children to be aware of dangers in the kitchen
- Do not allow children to play with the appliance or tamper with the controls
- Children under the age of 8 should not use this appliance

*Other Safety Considerations*

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner
- Do not use the appliance for anything other than its intended purpose
- Unplug from the outlet when not in use or unattended and before assembling, disassembling and cleaning
- Make sure the appliance is switched off before connecting to or disconnecting from the mains supply
- If the appliance is dropped or damaged in any manner, return the appliance to the nearest authorized dealer or after-sales service centre for examination, repair, electrical or mechanical adjustment



## **Warranty Information**

### **Registering Your 2 Year Guarantee**

Your standard one year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with the supplier Shomar Ltd. If you do not register the product with Shomar Ltd within 28 days, your product is guaranteed for 1 year. To validate your 2 year guarantee register with us by completing the form attached and posting it to Shomar Ltd.

Please note that the 2 year guarantee is only available in Ireland.

Please refer to the one year guarantee for more information.

### **One Year Guarantee**

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the product.

Model no.

Serial no.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced. If for any reason, this item is replaced during the guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 1 year guarantee, the appliance must have been used according to the instructions supplied.

### **Exclusions**

Shomar Ltd shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff.
4. The appliance has been used for hire purposes or non-domestic use.
5. The appliance is second hand.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. This guarantee is valid in Ireland and the UK only.

PowerPoint appliances products are intended for household use only. See usage limitations in "safety instructions". Shomar Ltd has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

## **Contact Details**

The After Sales Division for PowerPoint appliance Appliances is located at the offices of the Brand owner and Distributor –

Shomar Ltd, Unit 9 Western Industrial Estate, Dublin 12, Republic Of Ireland.

Helplines (office hours) & Spare Parts contact number is 01-450 5327 or email [service@shomar.ie](mailto:service@shomar.ie)



