

BJ7Y4181

借(通)件登记

旧底图总号

底图总号

签名

日期

 
技术要求:

- 1、说明书采用70g白色双胶纸;
- 2、尺寸140x210m。
- 3、符合RoHS环保要求。

标记	处数	分区	更改文件号	签名	年、月、日
设计			会签		
审核			会签		
审核			标准化		
审核			批准		

P74755KW

说明书  
(出口爱尔兰)



BJ7Y4181

阶段标识

重量

比例

1:1

共5张

第1张

安徽康佳同创电器有限公司

# PowerPoint

Please read this user's manual thoroughly before using

## REFRIGERATOR INSTRUCTION USER'S MANUAL

**MODEL: P74755KW  
P75562KW  
P75562KIN  
P75562KBL**

**Thank you for choosing this PowerPoint refrigerator.  
If cared for correctly you will get many years of use  
from your new appliances.**

**Please log on to [www.powerpointappliances.ie](http://www.powerpointappliances.ie) to  
register your 2 year Free Parts & Labour Warranty,  
order a spare part or contact our after sales service  
department.**

Dear customer:

Thank you for buying this refrigerator. To ensure that you get the best results from your new refrigerator, please take time to read through the simple instructions in this booklet.

Please ensure that the packing material is disposed of in accordance with the current environmental requirements.

When disposing of any refrigerator equipment please contact your local waste disposal department for advice on safe disposal.

This appliance must be only used for its intended purpose.

### CAUTION :

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

### TECHNICAL DATA

MODEL	P74755KW	P75562KW	P75562KIN	P75562KBL
Climate Type	N ST	N ST	N ST	N ST
Protection Class	I	I	I	I
Rated Voltage/Frequency	220-240V~ /50Hz	220-240V~ /50Hz	220-240V~ /50Hz	220-240V~ /50Hz
Rated Current	0.7A	0.5A	0.5A	0.5A
Lamp Rated Power(W)	1.5W	10W	10W	10W
Energy consumption E <sub>32</sub>	0.968 kWh/24h	0.874 kWh/24h	0.874 kWh/24h	0.874 kWh/24h
Annual Energy Consumption AE	244 kWh/a	222 kWh/a	222 kWh/a	222 kWh/a
Energy Efficiency Class	F	F	F	F
Total Volume	172L	201L	201L	201L
Fresh Food Compartment Volume	110L	159L	159L	159L
Freezer Compartment Volume	62L	42L	42L	42L
Refrigerant, Mass	R600a , 40g	R600a , 50g	R600a , 50g	R600a , 50g
Freezing Capacity	3.0kg/24h	2.0kg/24h	2.0kg/24h	2.0kg/24h
Temperature Rise Time	6.0h	14.0h	14.0h	14.0h
Foaming Agent	Cyclopentane	Cyclopentane	Cyclopentane	Cyclopentane
Net Weight	35kg	41kg	41kg	41kg
Overall Dimension (WxDxH)(mm)	470x573x1410	544x530x1445	544x530x1445	544x530x1445

## WARNING

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
  - Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
  - Do not damage the refrigerant circuit.
  - Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer;
  - The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
  - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
  - Children should be supervised to ensure that they do not play with the appliance.
  - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
  - Please abandon the refrigerator according to local regulations due to its use of flammable blowing gas and refrigerant.
  - Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. This appliance is intended to be used in household and similar applications.
- WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance
- The foaming agent used in Refrigerator-freezer is flammable. Scrapping and recycling of the Refrigerator-freezer shall be handled by specialized companies to prevent hazards to the environment or other dangers from being caused.

- ◇ Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of your refrigerator.
- ◇ When moving the refrigerator, do not tilt the refrigerator beyond 45° from upright position.
- ◇ After removing all of the packaging materials, clean the inside of your refrigerator before using it.

For compression-type appliances which use flammable refrigerants, instructions shall include information pertaining to the installation, handling, servicing (IEC 60335-2-24)

- this appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
- children shall not play with the appliance
- cleaning and user maintenance shall not be made by children without supervision



Warning; Risk of fire / flammable materials

### Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## SPACE REQUIREMENTS

**WARNING: Keep flammable materials and vapors, such as gasoline, away from refrigerator.**

**Failure to do so can result in death, explosion, fire or burns.**

- ◇ To ensure proper ventilation for your refrigerator, allow for 200mm space on each side between walls, 100mm space between back of your refrigerator and the wall, and 300mm space between counter top and the roof or ceiling.
- ◇ If you are installing your refrigerator next to a fixed wall, leave sufficient space on the hinge side to allow for the door to swing open.
- ◇ Never install your refrigerator near heat source and direct sunshine.

## ELECTRICAL REQUIREMENT

**WARNING: DO NOT REMOVE GROUND PRONG.**

**DO NOT USE AN ADAPTOR.**

**DO NOT USE EXTENSION CORD.**

**Failure to follow these instructions can result in death, fire or electrical shock.**

Before you move your refrigerator into its final location, it is important to make sure you have the proper electrical connection.

## INSTALLING YOUR REFRIGERATOR

### UNPACKING YOUR REFRIGERATOR

**WARNING: Use two or more people to move refrigerator.**

**Failure to do so can result in back or other injury.**

- ◇ Remove tape and any labels from your refrigerator before using (except the rating label).
- ◇ To remove any remaining tape or glue, rub the area briskly with your thumb. Tape or glue residue can also be easily removed by rubbing a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.

### Recommended Earthing Method

AC 220-240 V 50Hz only 10 Amp fuse and properly earthed electrical supply is required. It is recommended that a separate circuit serving only this appliance should be used. Use a receptacle which cannot be turned off with a switch or pull chain. Do not use an extension cord.

**NOTE:** Before performing any type of installation, cleaning, or removing a light bulb, disconnect the refrigerator from the electrical source. When you are finished, connect the refrigerator to the electrical source and reset the control to the desired setting.

## LEVELING

If the refrigerator is not leveled during installation. The doors may not close or seal properly, causing cooling, frost, or moisture problems. It is very important for the refrigerator to be level in order to function properly.

To level your refrigerator, you may either turn the level leg clockwise to raise that side to the refrigerator or turn counter – clockwise to lower that side.

**NOTE:** Having someone push against the top of the refrigerator take some weight off the leveling leg. This makes it easier to adjust the leveling leg.

## USING YOUR REFRIGERATOR

To obtain the best possible results from your refrigerator, it is important that you must operate it properly.

### **Setting the Thermostat controls**

Controls for the refrigerator and freezer are located at the top shelf of the refrigerating compartment. **When you first install your refrigerator, set the Thermostat knob at 5.** Give your refrigerator time to cool down completely before adding food. It is best to wait 24 hours before adding food. The thermostat knob controls the temperature. The higher number setting, the longer the compressor will run to keep the temperature colder.

### **Changing the Light Bulbs**

- ◇ Unplug refrigerator or disconnect refrigerator from power supply before you remove the bulb.
- ◇ Replace the bulb with 15 or 10 -watt appliance bulb. Not all bulbs will fit your refrigerator. Be sure to replace the bulb with one of the same size and shape.
- ◇ plug in refrigerator or reconnect refrigerator to power supply.

### **Power Interruptions**

If the electricity in your house goes off for a shorter period, keep both doors closed to help food stay cold and frozen.

If the power will be out for a longer period, remove food from the freezer and store it in a frozen food locker.

### **Fresh Food Storage**

Wrap or store food in the refrigerator in airtight and moisture – proof material. This prevents food odor and taste transfer throughout refrigerator.

- ◇ Fruit –wash, let dry and store in refrigerator in plastic bags or crisper.
- ◇ Leafy vegetables-Remove wrapping and trim or tear off bruised and discolored areas, wash in cold water and drain. Place in plastic bag or plastic container and store in crisper.
- ◇ Fish –Use fresh fish the same day as purchased.
- ◇ Meat –Store most meat in original wrapping as long as it is airtight and moisture – proof.
- ◇ Re – wrap if necessary.
- ◇ Leftovers –Cover leftovers with plastic wrap or aluminum foil.

Plastic containers with airtight lid can also be used.

### **Frozen Food Storage**

The freezer compartment is designed for storing frozen food and for freezing food at home.

Successful freezing depends on the correct packaging. When you close and seal the package you must not allow air or moisture in or out. If you do, you could have food odor and taste transfer throughout the refrigerator, and also dry out frozen food.

**NOTE:** Never put bottled food or drinks in the freezer compartment.

For best performance, leave enough space in the freezer and refrigerator compartment for air to circulate around the packages. Also let enough room at the front so the door can close tightly.

### **Defrosting**

- ◇ Refrigerator compartment
  - Defrosting process is automatic by thermostat knob Melted frost flow into drip tray and automatic evaporating.
- ◇ Freezer compartment
  - Defrosting for the freezer compartment is by manual process.
  - ◇ Leave open the freezer door.
  - ◇ Remove all foods and shelf or transfer to refrigerating compartment.
  - ◇ Clean and wipe out the melted frost with a cloth.
  - ◇ After defrosting, turn thermostat knob to origin position.

**NOTE:** To avoid damaging the freezing compartment wall, do not use any sharp objects to remove the frost or separate the frozen food.

## **MAINTAINING YOUR REFRIGERATOR**

The refrigerator should be clean at least once a month to prevent odors from building up. Wipe up spills immediately.

### To clean your refrigerator:

- ◇ Unplug it.
- ◇ Remove all movable parts from inside, such as shelves and crisper. Etc.
- ◇ Use a clean sponge or soft and a mild detergent in warm water. Do not use abrasive or harsh cleaners.
- ◇ Hand wash, rinse and dry all surfaces thoroughly.
- ◇ Do not use cleaning waxes, concentrated detergents, bleaches or cleaners containing petroleum on plastics and rubber parts.
- ◇ Never use paper towels, window sprays, scouring cleansers or flammable fluids on plastic parts as these can scratch or damage material.

## TROUBLESHOOTING

In case of malfunction, you can solve many common problems easily.

### Your refrigerator will not operate...Check if

- ◇ The power supply cord is unplugged.
- ◇ The thermostat knob is set to OFF position.

### The light so not work...Check if

- ◇ The power supply cord is unplugged.
- ◇ A household fuse or circuit breaker has tripped.
- ◇ A light bulb is loose in the socket.
- ◇ A light bulb has burned out.

### Food in the refrigerator compartment freezing...Check if

- ◇ The thermostat knob is set too cold.
- ◇ The position of food stored touches the refrigerant power of refrigerator back wall.

### Food in the refrigerator compartment is not cold...Check if

- ◇ The air vents are blocked in the compartment. This prevents the movement of cold air.
- ◇ The door(s) are opened too often or not close properly.
- ◇ A large amount of food has just been added to the refrigerator or freezer compartment.
- ◇ The position of thermostat knob is adjusted too low.

### Melted frost Leak over compartment inside or on floor...Check if

- ◇ The drain – off mouth entrance is blocked.
- ◇ Evaporator pan is in place.

### The refrigerator seems to make unusual noise...Check if

- ◇ The refrigerator is leveled on the floor.
- ◇ The body of the refrigerator touches the wall.
- ◇ The drip tray is not placed properly.

### There is interior moisture build - up...Check if

- ◇ The air vents are blocked in the refrigerator.
- ◇ The door is opened often.
- ◇ The room is humid.
- ◇ The food is not packaged correctly.
- ◇ The control is not set correctly of the surrounding conditions.

### The doors will not close completely...Check if

- ◇ Food packages are blocking the door open.
- ◇ The shelves are out of position
- ◇ The gaskets are dirty.
- ◇ The refrigerator is not leveled properly.

## WARNING

- ◇ the appliance is not intended for use by young children or infirm persons without supervision.
- ◇ young children should be supervised to ensure that they do not play with the appliance.

## REQUESTING ASSISTANCE OR SERVICE

If the problem is not due to one of the items listed in Troubleshooting, Contact the dealer or authorized Service Company.

### HOW TO DISPOSE OF THE PACKING MATERIAL

The packing material is recyclable.

The following procedure is recommended:

- dispose of paper, card and carton in the relative containers;
- dispose of plastics in the relative containers.
- If you have no recycling bins in your area then you can put this material in the ordinary bins and/or take it to the appropriate collection centers.