 


PowerPoint

Fridge Freezer

P7531M/4

Instruction Manual

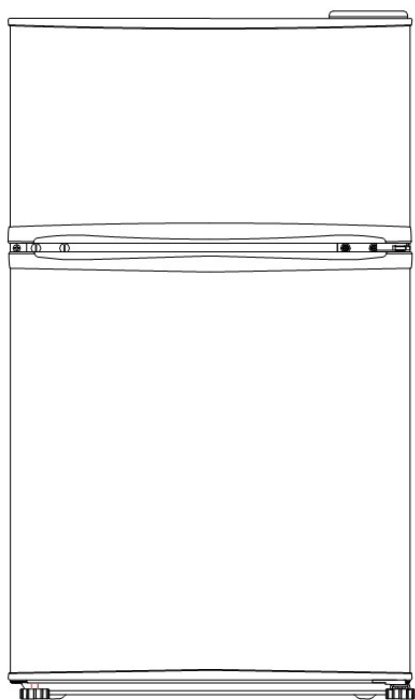

This product was supplied by Shomar Ltd Dublin. If you have any problems with the operation of this appliance please contact us on Dublin 01 - 4505327 or visit our web site www.powerpointappliances.ie.

SAFETY

⚠ THIS APPLIANCE MUST BE PLUGGED INTO AN Earthed SOCKET.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply lead is damaged it must be replaced by a competent person using the correct lead.
- Don't store chemicals or liquids such as ether, methanol, petrol etc., which are easy to evaporate, burn or explode.
- Don't store heavy objects on top of the refrigerator and do not pour water on it.
- After turning off the electricity do not switch back on for at least five minutes, otherwise the compressor may be damaged.
- To save energy, you should minimize the frequency and duration of door opening.
- It is **not** recommended to use an extension lead to power this appliance.
- This item is designed for **Domestic use only**.

Electrical Safety

⚠ THIS APPLIANCE MUST BE PLUGGED INTO AN EARTHED SOCKET.

Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This product is designed to operate on 220 - 240V AC; 50Hz. Connection to any other power source may damage the unit.

This product may be fitted with a non - rewirable plug. If it is necessary to change the fuse in the plug, the fuse cover must be refitted. If the fuse cover becomes lost or damaged, the plug must not be used until a suitable replacement obtained.

 
If the plug has to be changed because it is not suitable for your socket, or becomes damaged in any way, it should be cut off and an appropriate plug fitted following the wiring instructions below. This should be carried out by a qualified electrician. The removed plug must be disposed of safely, as insertion into a 13 Amp socket is likely to cause an electrical hazard.

Wiring Instructions

The wires in this mains lead are colored in accordance with the following code:

Blue = Neutral Brown = Live Green/Yellow= Earth

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows (refer to the plug wiring diagram).

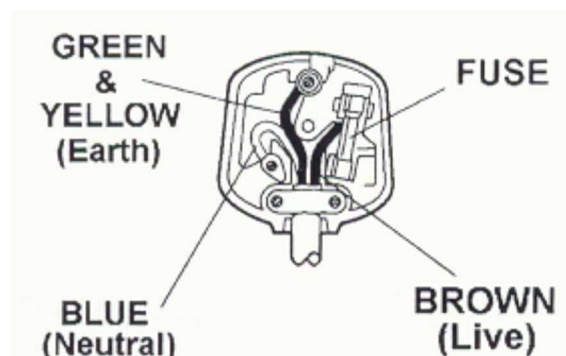

The wire which is coloured **BLUE** must be connected to the terminal which is marked with the letter N or coloured Black.

The wire which is coloured **BROWN** must be connected to the terminal which is marked with the letter L or coloured Red.

The wire which is coloured **GREEN/YELLOW** must be connected to the terminal which is marked E.

If a 13Amp (BS1363) plug is used, a 13Amp (BS1362) fuse must be fitted, or if any other type of plug is used, a 13Amp fuse must be fitted, in the plug or adaptor.

Before Use

Thank you for purchasing this fridge freezer.

Please read these user instructions thoroughly before use.

Keep this booklet in a safe place for future use.

Transportation and Handling

For safe lifting, tilt the appliance backwards by no more than 45 degrees, hold the base and rear corners of cabinet. Lift the appliance carefully.

Never use the door handles for lifting.

To move the appliance on a flat level surface, tilt it slightly backwards onto the two rear rollers and push backwards.

Installation

 
1. Do not site in a location which is likely to drop below 16°C, i.e. garage or shed.
2. Install the refrigerator on flat, firm ground to prevent vibration and noise. Adjust the feet located at the front base of unit, to ensure the item is level.
3. Choose a dry and well-ventilated location. A space of no less than 2cm must be left around the refrigerator.
4. Choose a location where there is no heat source. Keep the appliance away from direct sunlight, radiators, heaters and oven etc.

5. Wipe all internal parts warm water mixed with a gentle cleaning solution and then rinse with clean water and dry.
6. Allow to stand for a minimum of 4 hours after moving before plugging in to mains.

❗ THIS APPLIANCE MUST BE PLUGGED IN TO AN EARTHED SOCKET.

❗ DO NOT USE AN EXTENSION REEL WITH THIS APPLIANCE.

INTRODUCTION

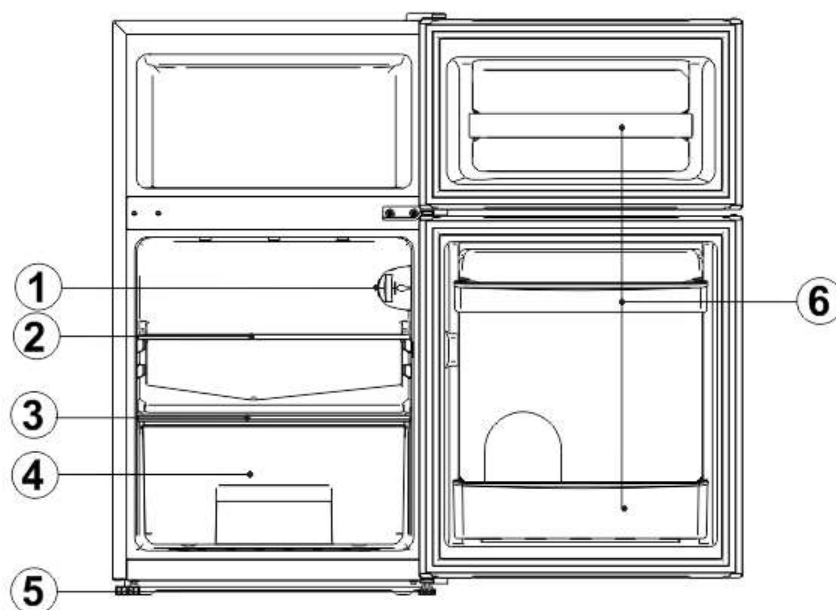


No	Description
1	Thermostat
2	Fridge glass shelf
3	Crisper cover
4	Crisper
5	Leveling feet
6	Bottle racks

First Use

- ⓘ Allow to stand for a minimum of 4 hours before plugging in to the mains

 Setting the temperature

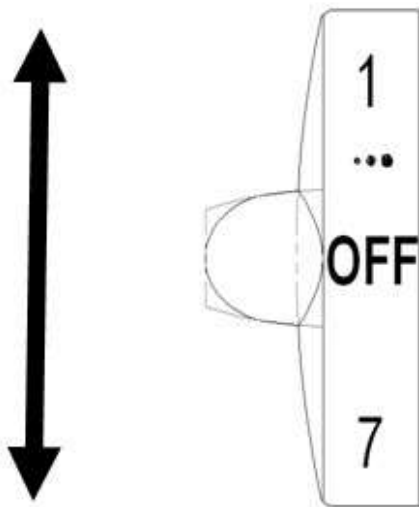

The temperature in the appliance is controlled by the temperature control knob located on the top right hand side of the refrigeration compartment. Rotate the control knob up or down to regulate the temperature inside the fridge freezer.

On the temperature control, 1 is the warmest setting and 7 is the coolest setting. Under normal conditions the temperature control should be set at 4.

Once the temperature control has been set, close the door and plug in the appliance. We recommend that the door is not opened for a minimum of 4 hours to allow the appliance to reach standard operating temperature.

Note: The standard operating temperature for the refrigeration compartment should be between 2°C and 5°C . The freezer compartment operating

temperature (Four star****) the temperature should be between -18°C and -25

°The Fridge/Freezer may not operate at the correct temperature if it is located in a particularly hot or cold room or if the doors are open too often.

Super Freezing

Quick freezing allows moisture inside food stuffs to be retained and thus the original freshness and nutrition constituent can be retained. Fresh meat and fish to be kept for a long time must use quick freezing.

1. Turn the temperature control knob to 7.
2. Add food to be frozen quickly. NOTE: The maximum allowable capacity for super freezing is **2.0 Kg** at a time.
3. Once food is frozen return the temperature control knob back to it's original position (normally the time for quick freezing shall not exceed 4 hours).

Hints and Tips

 
Storage of Frozen food

- Fresh foods such as fish and meat can be frozen to maintain freshness, and keep the nutrients in the food (see Super Freezing section).
- Wrap food to be frozen or place it in an airtight container.
- Do not allow already frozen food into direct contact with food to be frozen.
- Ready frozen food should be placed it in freezer as soon as possible.
- Do not re-freeze food once it has thawed.

Storage of Fresh food

- Food should always be covered tightly with foil, wrapped in film, placed in an airtight bag or container. This will prevent it from dehydrating and prevent strong smells contaminating other food.
- Do not allow raw meat to come into contact with cooked foods.
- Fruit and vegetables should be stored in the bottom box with the glass cover in place.
- Space should be left between food items to allow free movement of cold air.
- Cool hot food down to room temperature before storing.

How to save energy

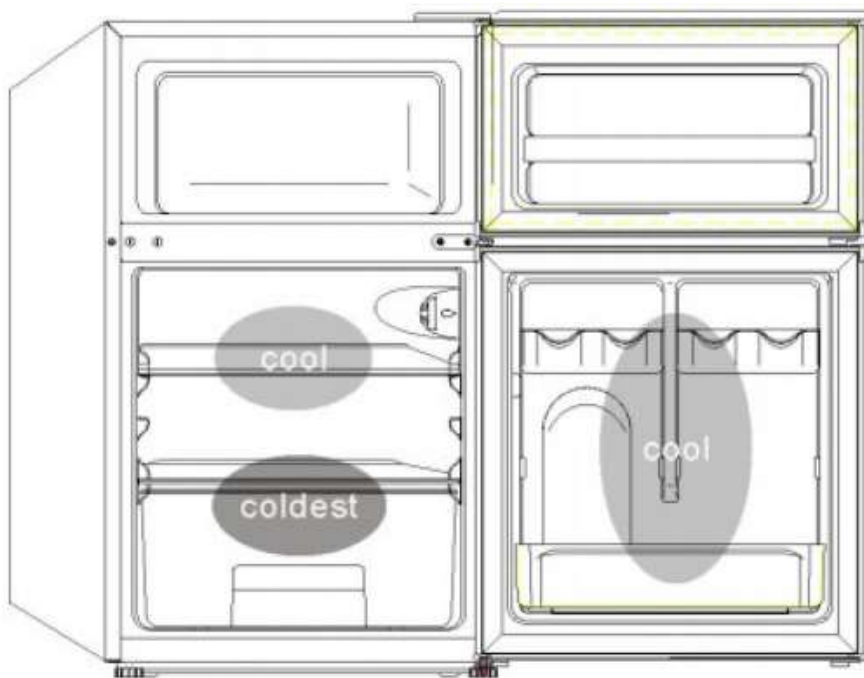

- Install the refrigerator in the coolest part of the room, out of direct sunlight and away from heating ducts or radiators. Do not place the appliance next to heat producing appliances such as ovens or dishwashers.
- The appliance doors should remain open only as long as necessary; do not place hot food inside the appliance.
- Organize the refrigerator to reduce door openings. Remove as many items as needed at one time and close the door as soon as possible.
- The refrigerator door should be properly closed to avoid increased energy consumption, and the formation of excess ice and/or condensation inside.

 
- Constantly circulating the cold air keeps the temperature homogenous inside the appliance. For this reason, it is important to properly distribute the food, to facilitate to flow of air.
- If the appliance is not in use over a prolonged period of time it is advisable to disconnect it from the power supply, remove all the food and clean it. The door should be left slightly open to avoid mould and unpleasant odours. This will not affect the refrigerator when it is reconnected.
- Shelves should not be lined with aluminium foil, wax paper or paper towelling. Liners interfere with cold air circulation, making the refrigerator less efficient and could cause food to be spoiled.

Care and Maintenance

Replacing the bulb

When replacing the bulb, proceed as follows:

- Unplug the appliance from the mains.
- Locate the lamp cover which is on the rear of the temperature control panel at the top of the refrigeration compartment.
- Remove the screw, located at the rear of the lamp cover, with a screw driver and remove the cover.
- Unscrew the bulb and replace with a new one (maximum 10W).
- Put the lamp cover back on.
- Check the temperature control knob has not been accidentally altered.
- Plug the appliance in to the mains.

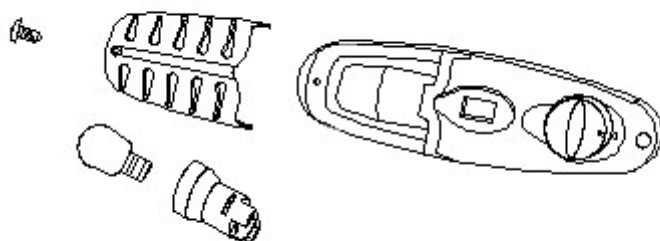

Door Reversal

The Fridge Freezer has the capability of opening the door from either the left or the right side. The unit is delivered to you with the door opening from the left side.


⚠ We strongly recommend that this task is performed by 2 people to avoid any injury or damage.

⚠ Ensure the appliance is unplugged and all contents have been removed.

To change the opening direction, please follow these instructions.

- Carefully lay the appliance on its back.
- Working at the bottom of the refrigerator door; unscrew the bolts which hold the lower hinge bracket in place.
- Move the two fittings on the lower hinge bracket to the opposite pair of holes (C in Fig.1).
- Lay the bracket and bolts to one side.
- Remove the screw and plastic hinge bush and relocate to the opposite side.
- Remove the refrigerator section door and store in a safe place.
- Working at the bottom of the freezer compartment door. Unscrew the bolts which retain the middle hinge (B in Fig 2) and remove the freezer door.
- Working at the top cover. Unscrew the upper hinge pin (A in Fig. 1) and relocate on the opposite side.
- Replace the freezer door and the middle hinge.
- Replace the fridge door and the lower hinge.
- Check that doors are properly aligned and both door seals made contact with the body at all points before tightening up all screws and bolts.
- Return the unit to the upright position and check that the door seals contact the cabinet at all points. If necessary the hinge positions can be adjusted to ensure this is achieved.

 Fig. 1.

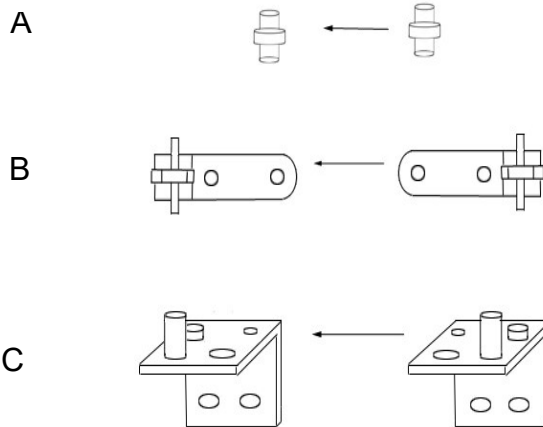

⚠ THE APPLIANCE MUST NOW BE UPRIGHT FOR AT LEAST 2 HOURS BEFORE BEING PLUGGED IN.

Cleaning

- Ensure the appliance is unplugged
- Wipe the inner and outer sides with a soft cloth or sponge using warm, clean, soapy water.
- Remove the parts individually and wipe with warm, clean, soapy water. Do not wash in a dishwasher.
- Never use flammable, explosive, or corrosive materials for cleaning the appliance.
- Ensure the appliance is dry before plugging back in.

Defrosting

Occasionally the inner surface of the freezer compartment may become covered with a layer of white frost. This should be removed as soon as possible as it may raise power consumption and reduce refrigeration performance.

- Remove the plug of the appliance.
- Remove all frozen food and store in a cold place.
- Remove frost with a plastic scraper, or let the temperature rise

naturally until frost melts. Then wipe away remaining ice and water.

- Replace the plug into the electricity socket.

⚠ Never use sharp metal tools as it may damage the appliance.

Trouble shooting

If the appliance has stopped functioning completely:

- Check the electrics in the location of the appliance.
- Check the plug has been correctly connected to the socket.
- Check the fuse in the plug.
- Are there any faults with the socket? For this purpose, try the plug of your refrigerator by connecting it to a socket which you are sure is working.

If your refrigerator does not get cold enough:

- Turn the Thermostat control towards 7.
- Are the doors of your refrigerator opened very frequently and do they remain open for long periods of time? Reduce frequency and length of time the doors are open for.
- Ensure the door is fully shut and the seal is making complete contact to the cabinet.
- Are any containers or dishes placed in your refrigerator contacting the back wall in such a way that they are obstructing the air circulation?
- Is your refrigerator over-filled?
- Check that there is a minimum of 2cm gap around the appliance.

The Fridge/Freezer may not operate at the correct temperature if it is located in a particularly hot or cold room.

If the appliance is operating noisily:

Occasionally the compressor will make some noise. This is perfectly normal and is part of the cooling process. This noise should also diminish periodically.

If there is still noise:

- Check the appliance is level. Use a spirit level. Adjust the feet at the front base of the appliance.
- Check there is nothing behind the appliance.
- If there is a vibrating sound from the shelves or the items placed on the shelves, rearrange the items so that they are more secure.

Compressor Noise:

- It is a normal engine noise. This noise indicates that the compressor is operating normally.

- As the compressor is being energized, it might run a bit more noisily for a short period of time.

Bubbling and gurgling sound:

- This noise is emitted as the coolant fluid flows through the pipes within the system. This is normal.

Water flowing sound:

- This is the normal sound of water flowing into the drain trough during the defrosting process.

Excessive moisture build up inside the refrigerator:

- Check all food is covered and sealed. Check wet containers have not been placed in the appliance.
- Are the doors of the refrigerator opened very frequently? Once the door is opened, the humidity found in the air in the room enters the refrigerator. Especially if the humidity levels in the room are very high. The more frequently the door is opened in humid conditions the more chance of the build-up of moisture.

The doors do not close properly:

- Ensure there are no obstructions preventing door closure.
- Check the door compartments and shelves are correctly in place
- Check the door seal is not warped or torn.
- Check the appliance is level.

IMPORTANT NOTES:

- In case of a sudden power loss or disconnecting and reconnecting of the plug to the electrical socket, the compressor protective thermal element will be opened as the pressure of the gas in the cooling system of your refrigerator has not yet been balanced. 4 or 5 minutes later, your refrigerator will start to operate; this is normal.
- If you won't be using your refrigerator for a long time, disconnect the plug from the socket. Clean your refrigerator as per the cleaning instructions and leave the door open to prevent any humidity or odour formation.

Warranty

Registering Your 2 Year Guarantee

Your standard one year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with the supplier Shomar Ltd. If you do not register the product with Shomar Ltd within 28 days, your product is guaranteed for 1 year. To validate your 2 year guarantee register with us visit www.powerpointappliances.ie

Please note that the 2 year guarantee is only available in Ireland.

Please refer to the one year guarantee for more information.

One Year Guarantee

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the product.

Model no.

Serial no.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced. If for any reason, this item is replaced during the guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 1 year guarantee, the appliance must have been used according to the instructions supplied.

Exclusions

Shomar Ltd shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff.
4. The appliance has been used for hire purposes or non-domestic use.
5. The appliance is second hand.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory

rights as a consumer. This guarantee is valid in Ireland and the UK only. PowerPoint products are intended for household use only. See usage limitations in “safety instructions”. Shomar Ltd has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

Contact Details

The After Sales Division for PowerPoint Appliances is located at the offices of the Brand owner and Distributor –
Shomar Ltd, Unit 9 Western Industrial Estate, Dublin 12, Republic Of Ireland.
Helplines (office hours) & Spare Parts contact number is 01-4504327 or email service@shomar.ie


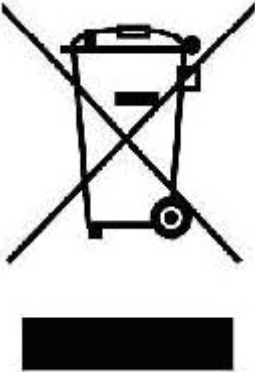
Correct Disposal of this product	
	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>

 Diagram of Circuit Principles

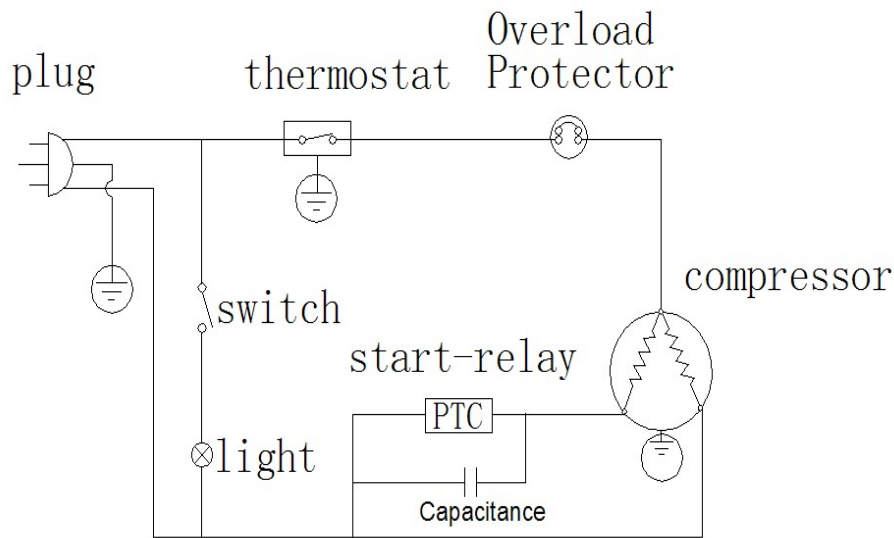

This appliance is intended for DOMESTIC use ONLY.

Supplier's trademark	POWERPOINT
Supplier's model	P7531M/4
Category of refrigerating appliance	Home appliance
Energy efficiency class	A+
Annual energy consumption(KWh)	166
Freezing storage volume & star rating	25 *
Refrigerator storage volume	61
Identification of frost free compartments	/
Temperature rise time (power-cut safe time)	510min
Freezing capacity	2.0 kg/24h
Climate class	N/ST
Airborne noise emissions	42 dB

* Annual energy consumption at 166 kwh/year,
based on test average temperature at 25 °C

* Test voltage and Frequency: 230V±1% and 50Hz±1