



Model	A1	A2	X1	X2	Y1	Y2	B1	B2	C1	C2	D	H
<b>PDD 80Lx80R</b>	800	800	789-797	789-797	776-784	776-784	446	446	193-201	193-201	825	2000
<b>PDD 80Lx90R</b>	800	900	789-797	889-897	776-784	876-884	446	446	193-201	293-301	825	2000
<b>PDD 80Lx100R</b>	800	1000	789-797	989-997	776-784	976-984	446	446	193-201	393-401	825	2000
<b>PDD 90Lx80R</b>	900	800	889-897	789-797	876-884	776-784	446	446	293-301	193-201	825	2000
<b>PDD 90Lx90R</b>	900	900	889-897	889-897	876-884	876-884	446	446	293-301	293-301	825	2000
<b>PDD 90Lx100R</b>	900	1000	889-897	989-997	876-884	976-984	446	446	293-301	393-401	825	2000
<b>PDD 100Lx80R</b>	1000	800	989-997	789-797	976-984	776-784	446	446	393-401	193-201	825	2000
<b>PDD 100Lx90R</b>	1000	900	989-997	889-897	976-984	876-884	446	446	393-401	293-301	825	2000
<b>PDD 100Lx100R</b>	1000	1000	989-997	989-997	976-984	976-984	446	446	393-401	393-401	825	2000