

INSTRUCTION BOOKLET

OA115A PARTY SPEAKER



Model: OA115A

ALL IN ONE DJ SYSTEM SPEAKER SET

Introduction


Congratulations on your new purchase of the OA115 DJ System Speaker Set! We appreciate your business and hope you enjoy the quality sounds and set up of our speakers. It is our goal to provide a good audio system at a good price. Our OA115 is a powerful speaker with two ways to charge and even more ways to play. Included in this set is a 15" speaker, speaker stand and microphone. The speaker is also pole mounting ready. Please read and understand this manual completely before attempting to operate your new speaker system. This booklet contains important information concerning the proper and safe operation of your new speaker.

Safety Precautions

We recommend that all fitting and installation of this speaker cabinet be carried out by a qualified adult following the approved safety standards. Do not attempt to clean the plastic enclosure with solvents or petrochemical based cleaners. Do not place objects which are sources of heat on the speaker cabinet such as lighting equipment or smoke machines. Do not expose the speaker cabinet to direct rain or water. Liquid getting into the box will risk a short circuit and is very hazardous. Do not stack the speaker cabinet in a manner that could cause injury should a cabinet become dislodge. When using this speaker make sure the grille is always attached. Before powering on make sure to set the gain controls to their lowest level to avoid damaging the speaker.

Before Installation

Ensure that the voltage and frequency of the wall outlet intended for use matches the power requirements of the speaker. When connecting other cables, disconnect the main power cord to cut off electrical flow and avoid surges. Make sure that the power-cord is never crimped or damaged by sharp edges. Never let the power-cord come into contact with other cables. Only handle the power-cord by the plug. If the fuse or cable needs to be replaced, it **MUST** be identical in rate and dimensions to the original cord. Fully charge the battery before using the speaker.

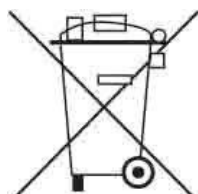

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

TECHNICAL SPECIFICATION

Every OA115 has been thoroughly tested to meet our standards. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your units for any damage and be sure all accessories necessary to operate the system have arrived intact. In the event damage has been found or parts are missing, please contact us for support.

Speaker and Amplifier

Input voltage: 115 VAC 60 Hz

Power consumption: 30 W

Memory Card Reader: USB / SD

TWS Bluetooth Compatible

Independent Volume Control

Treble and Bass Control

MIC INPUT

Speaker with Amplifier / Passive speaker

12V7AH battery inside: 3 hour working, 8 hours recharge

Maximum Power: 90 W PMPO

Impedance: 4 ohm

Frequency response: 60 Hz – 20 kHz

Sensitivity: 98 dB/W/m

Cabinet Size: 44.2 cm X 35.8 cm X 68.5 cm

Tweeter : Pizeo

Woofer 15" (38,10 cm)

Accessories

Wireless Microphone 1 pc


Speaker stand 1pc

Power cable 1pc

TWS Bluetooth Instructions:

- Use the MODE button to enter Bluetooth Mode.
- Use the TWS button to enter Bluetooth automatic pairing.
- Blue LED will flash rapidly when searching.
- Enable Bluetooth on your device and select One Audio to connect.
- A solid light will indicate the device is paired.

Active Speaker Rear Panel

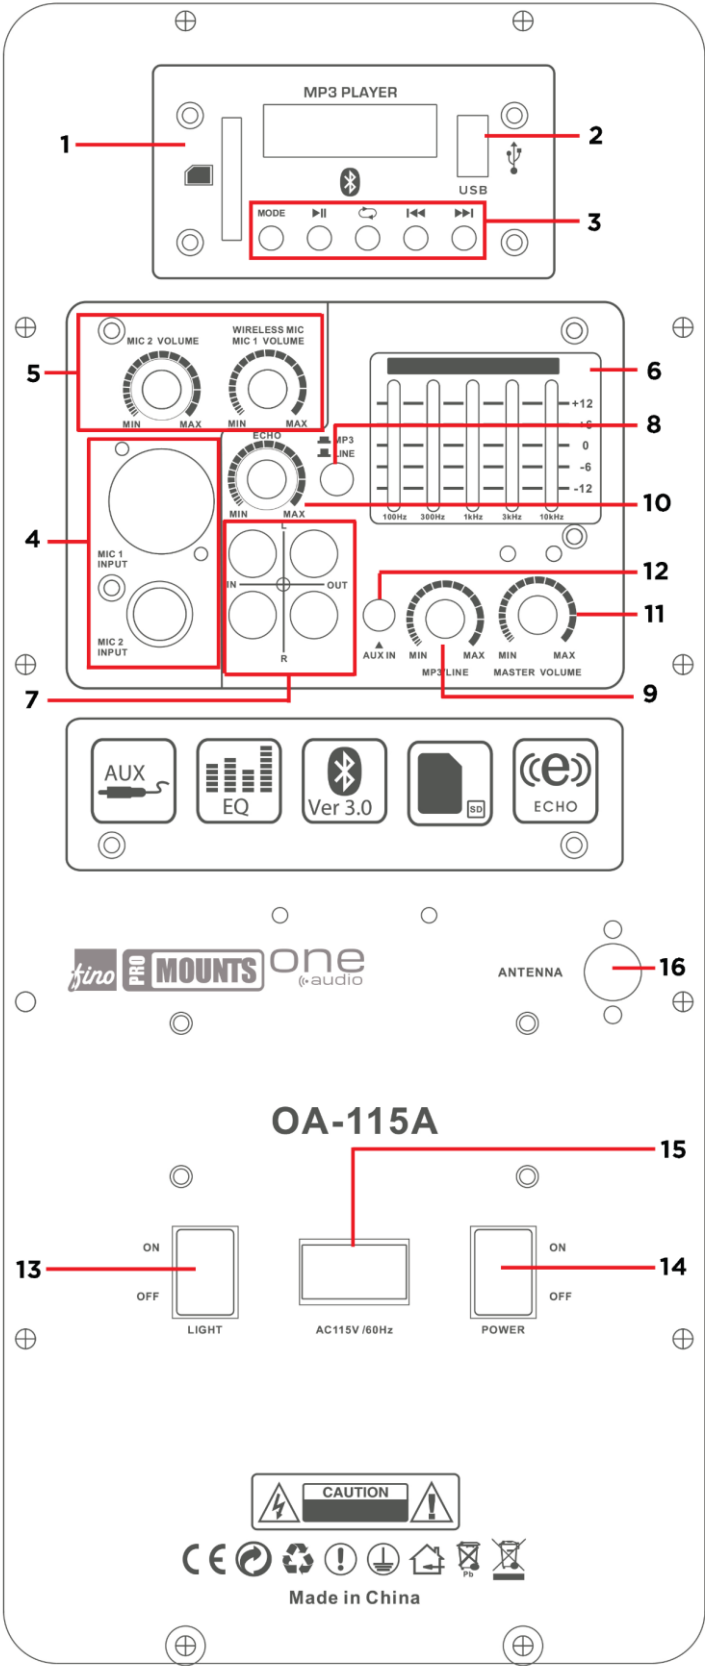

Rear Panel Guide

1. **SD:** Entry for SD Memory Cards up to 16GB
2. **USB:** Entry for USB Memory Cards up to 16GB
3. **Play, Pause and Skip Functions**
4. **MIC 1 and 2 Input:** 6.35 Jack input for Microphone
5. **Microphone Controls:** Separate Volume Control for the inputs for Microphone MIC1 and MIC2
6. **Equalizer Panel:** 5 Band Equalizer with range from -12 to +12 Db
7. **L/R RCA Input/Output**
8. **MP3/Line Toggle:** Mode selection button to switch between Line and MP3
9. **MP3/Line Volume:** Control for the USB/SD/AUX/Bluetooth or Line modes
10. **MIC Echo Control:** Control for the intensity of the echo effect on the microphone inputs
11. **Master Volume Control:** Adjusts the intensity or level of the volume
12. **AUX IN:** 3.5mm auxiliary jack input
13. **LED Light Switch:** Switch for the built in LED lights on the front of the speaker
14. **Power Switch:** Switch to turn the speaker on or off
15. **Power Socket:** Location for the power cord for wired and charging modes
16. **Speaker Antenna**

Getting Set Up

Speaker Pole/Tri-pod Mounting

The OA115 speaker set also includes a pole mount option. The pole mount socket located on the bottom of the speaker may be used to secure the speaker to the included tri-pod. Always be sure to follow the guidelines listed below when pole mounting your speaker;

- Always be sure the stand is designed to support the weight of the speaker
- In outdoor situations that are prone to strong windy conditions, be sure to use sandbags to weigh down the tri-pod support, this will greatly reduce the risk of tipping
- Do not stack speakers on top of each other when mounting on a tri-pod. Only one speaker should be mounted to a tri-pod at one time.
- Always position the tri-pod legs away from foot traffic
- Extend the tri-pod legs to their fully extended position to avoid accidental tipping
- Observe and follow all safety guidelines and regulations specified by the tri-pod's manufacturer
- Be sure the tri-pod is situated on a flat, level, and stable surface and always tighten all locks.

Warranty

1-year limited warranty

One Audio hereby warrants to the original purchaser that all One Audio products to be free of manufacturing defects in material and workmanship for a period of 1 year (365 days) from the date of purchase. This warranty shall be valid only if the product is purchased within the North American continent. It is the owner's responsibility to establish date and place of purchase by acceptable evidence, at the time service is sought.

For warranty service, send the product only to the One Audio factory. (Contact us for more information) All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty One Audio will pay return shipping charges only to a designated point within the North American Continent. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, One Audio shall have no liability whatsoever for loss of or damage to any such accessories, nor for the safe return thereof.

This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which One Audio concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the One Audio factory unless prior written authorization was issued to the purchaser by One Audio; if the product is damaged because not properly maintained as set forth in the instruction manual.

One Audio reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any product theretofore manufactured.

No warranty, whether expressed or implied is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by One Audio in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and or dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall One Audio be liable for any loss or damage, direct or consequential arising of the use of, or inability to use this product.

One Audio by Promounts
© Scadlock LLC
20218 Hamilton Ave
Torrance, CA, USA 90502
www.promounts.com
Tel: 1 310 645 6400