



Glowing Bluetooth® Pool Speaker

Model: ITSBO-512



Instruction Manual

Please read these instructions carefully before using
and keep for future reference.

OPERATION

ON/OFF BUTTON:

Press the ON/OFF button located on the bottom of the product to turn the unit ON or OFF.

BATTERY CHARGING:

Before using the product, charge the speaker for 6 to 8 hours by:

1. Insert the adapter plug into the charging port and connect the external adapter into an electrical outlet.
2. Place the Pool Speaker on the charging base.
3. The LED Charging Indicator will light up Red while charging, and will turn Green when fully charged.

NOTE: Disconnect the external adapter from the electrical outlet when not in use or when the speaker is fully charged.

CAUTION: The built-in rechargeable battery is not replaceable. Do not remove or replace it, do not throw in the trash or in a fire. Do not dispose device in standard garbage disposal sites. Dispose of device at available Battery Recycling Sites after fully discharging battery. Not doing so may violate local disposal laws and regulations. Please refer to local regulations for proper battery disposal.

WARNING: • Keep the external adapter out of reach of children.

- Never attempt to open the external adapter.

CAUTION: Danger of explosion if battery is incorrectly replaced.
Replace only with same or equivalent type.

CONNECTING VIA BLUETOOTH:

Make sure the Pool Speaker is powered ON before connecting your device.

1. Press and Hold the Bluetooth Button (located on the Remote Control), there will be an audible activation beep once in Bluetooth Pairing Mode.
2. Once in Bluetooth Pairing Mode, select "ITSBO-512" from your device's Bluetooth Settings Menu. Another audible beep will sound once your device is connected.
3. To disconnect your Bluetooth Device, Press and Hold the Bluetooth Mode Button, there will be an audible deactivation beep indicating that the device has been disconnected from Bluetooth Mode.

SETTING TIMER:

 
The Pool Speaker's Timer function allows the product to automatically turn off after a set amount of time. In order to set the timer, press the TIME Button (located on the Remote Control) once to change color, each color indicates a different Timer Duration. The Pool Speaker will stay lit the LED Color that is chosen for the entire Timer Duration. Follow the Guide Below:

LED Color	Timer Duration
Red	30 min.
Green	60 min.
Blue	90 min.
Yellow	120 min.
Light Blue	150 min.
Pink	180 min.

***Note:** There are 2 ways to deactivate the timer:

- 1) Press the ON/OFF button on the speaker **OR**
- 2) On the remote control, simultaneously press the LED ON/OFF button and Bluetooth button.

REMOTE CONTROL

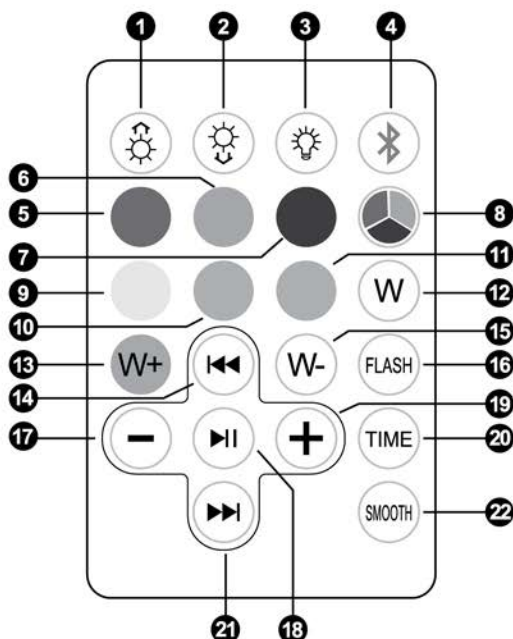

- 1 **Brightness Up**
- 2 **Brightness Down**
- 3 **LED ON/OFF**
- 4 **Bluetooth** - See CONNECTING VIA BLUETOOTH
- 5 **Red LED**
- 6 **Green LED**
- 7 **Blue LED**
- 8 **Manually Switch LED Color**
- 9 **Yellow LED**
- 10 **Light Blue LED**
- 11 **Pink LED**
- 12 **White LED**
- 13 **Warm LED - Increase White**
- 14 **Previous Track**
- 15 **Warm LED - Decrease White**
- 16 **Flash** - Dancing LED Colors along with Music
- 17 **Volume Down**
- 18 **Play/Pause**
- 19 **Volume Up**
- 20 **Time** - See SETTING TIMER
- 21 **Next Track**
- 22 **Smooth** - Automatic Smooth Transition of LED Colors


REPLACING REMOTE CONTROL BATTERIES:

- Remove the old battery by pressing the tab on the side of the battery cover and then sliding it out from the remote control.
- Take notice of the positive (+) and negative (-) direction of the battery. Make sure that the new battery (CR2025) is inserted the right way.
- Dispose of the old battery responsibly.

SPECIFICATIONS

Ambient Temperature for Operation.....	-14 °C to 35 °C (7 °F to 95 °F)
LEDs.....	12 x RGB, 0.18W per RGB, 7 Colors
Battery	Rechargeable Lithium
	3.7V, 2000mAh (7.4Wh)
Remote Control Battery.....	CR2025 (3V)
Remote Control Range.....	Max 6 meters (19.7 feet)
Charging Time.....	Approx. 6 hours
Operation Time.....	Approx. 4 to 6 hours
Charger	Input: 100-240V AC, 0.6 Amp (Max), Output: 7.5V 0.6A (UL Approved)
Bluetooth frequency range.....	100Hz ~ 1KHz
Bluetooth transmit power	2.8W

 UK PLUG

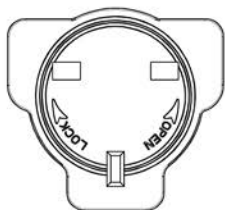

1

 


2




"CLICK"

3

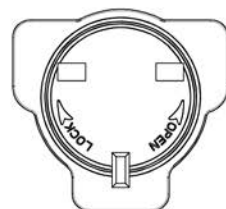

4

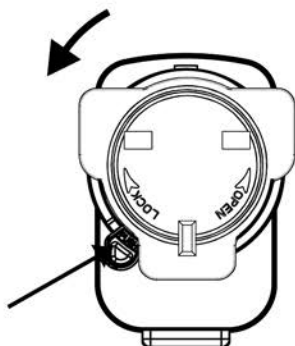 


5




6

 
EUROPE PLUG

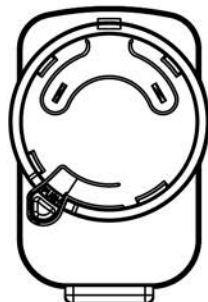

1


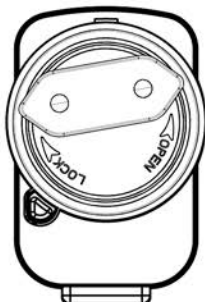 


2

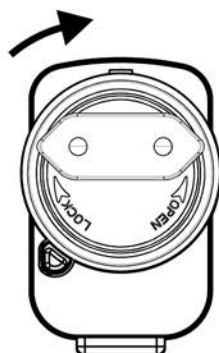 


"CLICK"

  
3

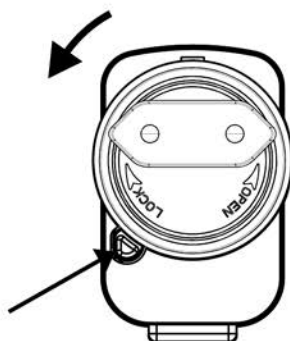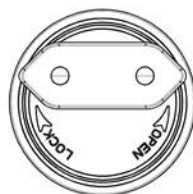

4

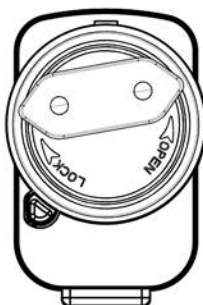 

5

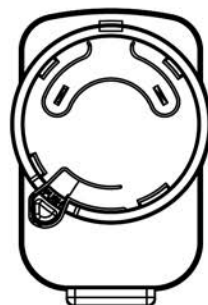 

6

PAIRING 2 SPEAKERS

Pair Both Speakers Together BEFORE connecting to Bluetooth.

Pairing Speakers for the first time

- 1) Quickly press the ON/OFF button on the two (2) speakers.
 - 2) Press and hold the ON/OFF button on one (1) of the speakers. Hold until an audible tone is heard. This speaker is now the master. The Bluetooth indicator will start flashing to pair with the second speaker. If paired successfully, the Bluetooth indicator on the master speaker will keep flashing quickly. The second speaker's Bluetooth indicator will flash slowly and will produce an audible beep.
 - 3) Now you can pair with your Bluetooth device. Once the speakers are connected to a Bluetooth device and the music is paused or stopped the Bluetooth indicator on the master speaker will remain lit (blue). The second speaker's Bluetooth indicator will flash slowly.
 - While in Bluetooth mode and music is playing, the Bluetooth indicator on BOTH speakers will be off.*
 - 4) While speakers are paired, quickly press the master speaker's ON/OFF button. The second speaker will turn off as well with the Bluetooth indicator remaining lit.
 - 5) When the speakers are paired and the second speaker is turned off, the master speaker will continue to play audio. (Quickly press ON/OFF button to turn off) The second speaker will disconnect from pairing mode in 10 seconds allowing the master speaker to function on its own.
- To deactivate the pairing function, press and hold either speaker until an audible tone is heard.*

Repairing speakers automatically

If speakers were paired before being turned off, they will pair themselves automatically the next time they are powered on.
Speakers are equipped with a memory function to continue in the same mode prior to being turned off.

Switching master speaker operation

- 1) Disconnect the Bluetooth device.
- 2) Press and hold ON/OFF button on the speaker to determine master operation.

BATTERY WARNING

Chemical Burn Hazard. Do NOT ingest the battery.

The included remote control contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal injury and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think the battery may have been swallowed or placed inside any part of the body, seek immediate medical attention.

Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

The MAINS plug or an appliance coupler is used as the disconnect device, disconnect device shall remain readily operable.

The apparatus shall not be exposed to dripping or splashing nor any objects filled with liquids, such as vases, shall be placed on the apparatus.

WARNINGS AND PRECAUTIONS

These products and their packaging are not toys; please keep out of reach of children.

- The remote control and charger are not waterproof and must be kept in a dry location at all times.
- Only use the power adapter provided to charge this product.
- Never charge the product in a pool, water or rain; charge in a dry, indoor location.
- Disconnect the power adapter from power source when not in use.
- Do not stand or jump on this product.
- Do not use this product if it is cracked or damaged.
- Keep the product away from chemicals and heat.
- Do not attempt to open the product.

Outdoor Use:

- The external adapter should not be used outdoors, not exposed to rain, humidity, liquid, or heat.
- The remote control should not be exposed to rain, humidity, any liquid, or heat.
- Do not use these products outdoors if they are cracked or damaged.
- Do not use this product as a flotation device.
- Never charge this product outdoors.
- Floating Pool speaker has a waterproof level of protection, but should NOT be fully submerged as it may damage the speaker/lights.

General Care:

It is recommended that after use, products are turned off, rinsed using clean water and dried using a soft cloth. Store these products out of reach of children and out of direct sunlight when not in use.

Please Note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Other trademarks and trade names are those of their respective owners.

Made in China.

Imported by:

Exertis Supply Chain Services Ltd.

M50 Business Park, Ballymount Rd. Upper,

Dublin 12, D12 T4C2, Ireland



Hereby, Innovative Technology Electronics, LLC, declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The full test of the EU declaration of conformity is available at the following internet address: www.victrola.com/eudoc



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.