

VICTROLATM



Retro Bluetooth[®] Radio

Model: VRS-2800

Instruction Manual

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USE
AND KEEP IT FOR FUTURE REFERENCE.

SAFETY INSTRUCTIONS

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash with arrowhead within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.</p>	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PROFESSIONAL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	--	---

- 1) Please read these instructions and keep them for future reference.
- 2) Pay attention to all warnings.
- 3) Follow all instructions.
- 4) Do not use this apparatus near water.
- 5) Clean only with a dry cloth.
- 6) Do not block any ventilation openings.
- 7) Install in accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus
- 8) Protect the power cord from being walked on or kinked, where the Plug is fitted and at the point where it exits from the apparatus.
- 9) Only use attachments / accessories specified by the manufacturer.
- 10) Unplug this apparatus during lightning storms or when unused for long periods.
- 11) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 12) This appliance should not be exposed to dripping or splashing water and no object filled with liquids, such as vases, should be placed on the apparatus.
- 13) Do not overload the wall power outlet. Use only power source as indicated - i.e. 230V AC mains.

IMPORTANT NOTES

Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates too much heat, places lacking ventilation or dusty areas, places subject to constant vibration and/or humid or moist areas.

Do not attempt to clean this unit with chemical solvents as this might damage the finish.

Use a clean dry cloth. Operate controls and switches as described in the manual.

 
Before turning On the power, make sure the AC power cord is plugged in.

When moving the unit, be sure to first disconnect the power cord.


POWER SOURCE

This product is designed to operate on 230V 50Hz AC Mains only. Attempting to operate this system from any other power source may cause damage to the system, and such damage is not covered by your warranty.

AC SOCKET: Connect the AC power cord into AC connection socket and then insert the AC plug into a wall outlet. It is strongly recommended that this product be operated only from the type of power source indicated on the marking label.

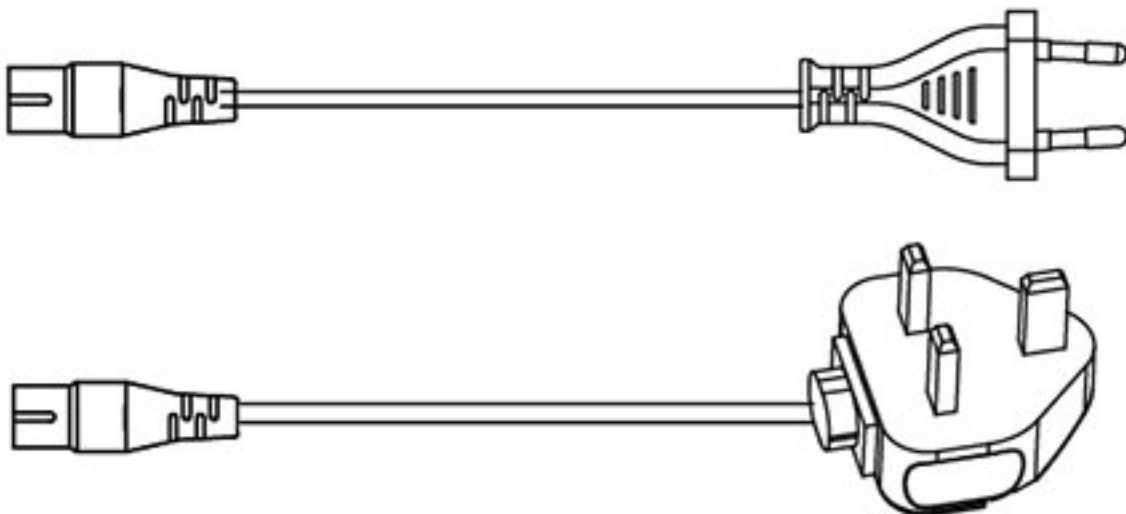

PRODUCT OVERVIEW

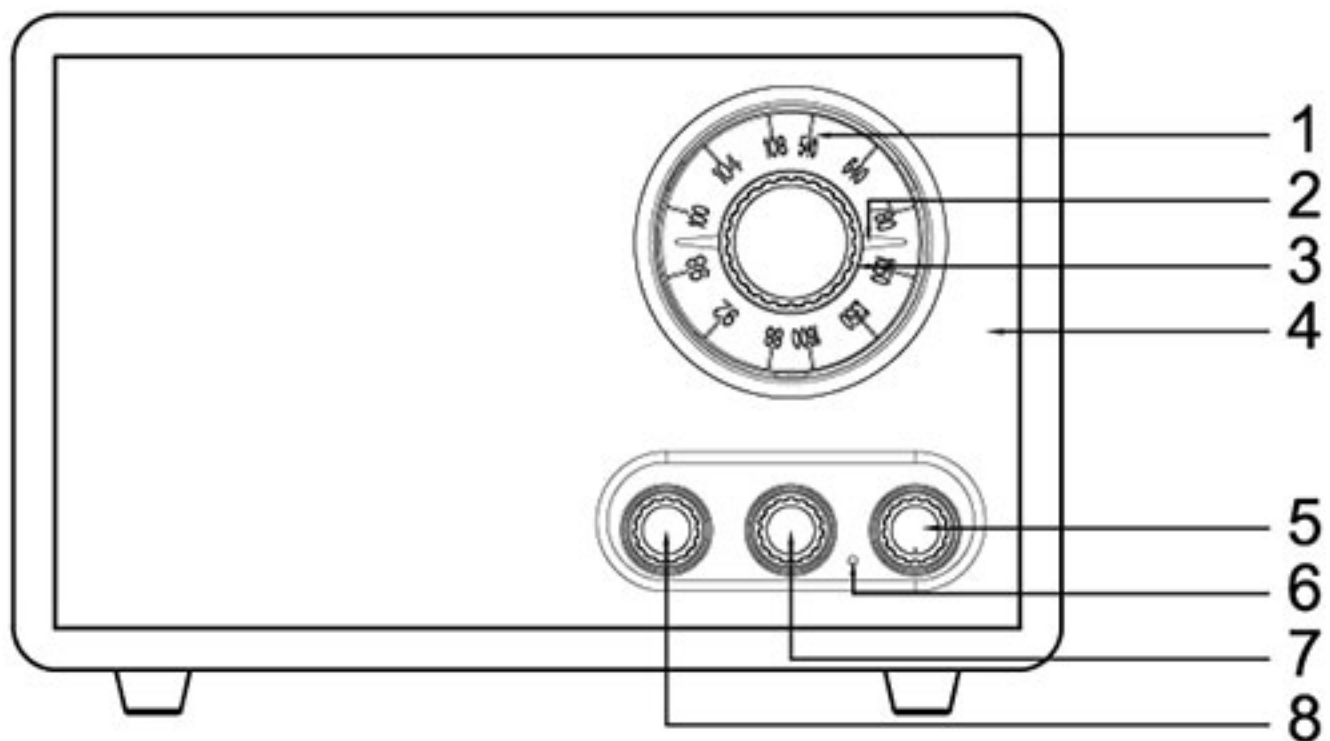 


FRONT VIEW

- | | |
|-------------------------|--|
| 1. AM / FM scale | 6. Power / LED Indicator |
| 2. AM / FM pointer | 7. Adjustable Tone Control Knob
(Bass and Treble) |
| 3. TUNING knob | 8. AM / FM / BT Knob |
| 4. Speaker Grill | |
| 5. OFF / Volume control | |

REAR VIEW

- | |
|--|
| 9. FM Antenna |
| 10. Power Jack
(Plugs into a wall outlet) |

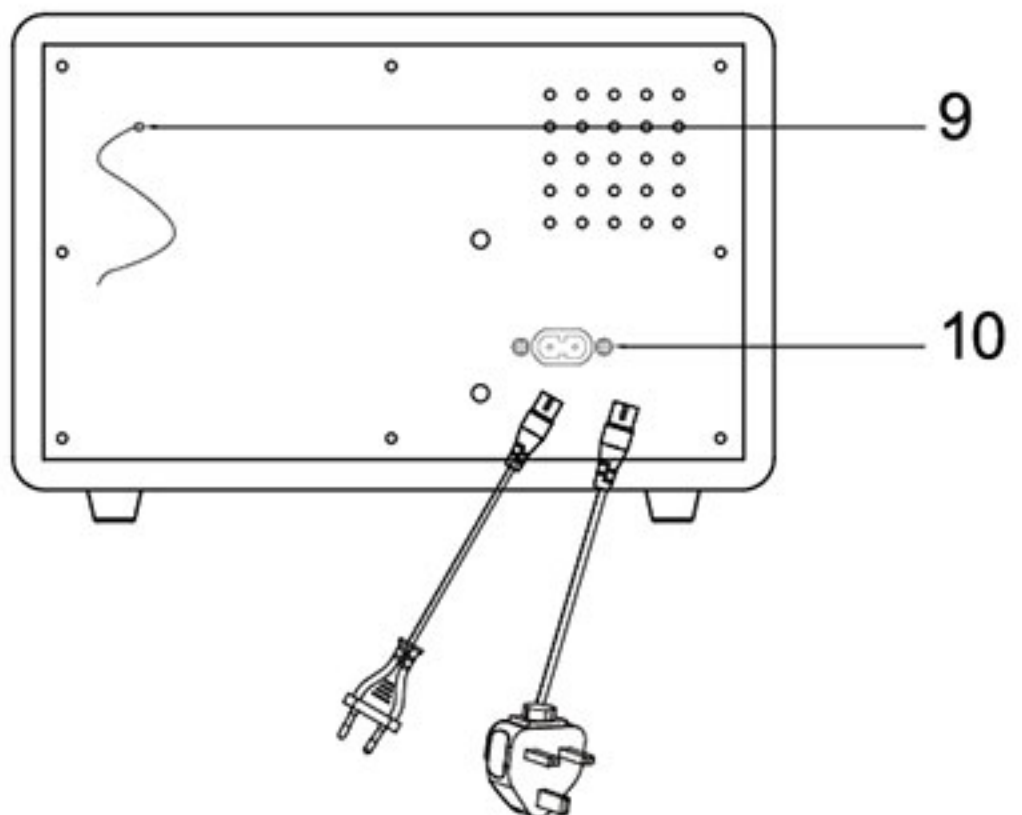 

LISTENING TO FM RADIO

1. Turn the unit ON, then rotate the AM / FM / BT selector to select FM.
2. Rotate the Volume Knob to adjust your desired volume level.
3. Rotate the TUNING knob to select your desired station.
4. Adjust the antenna (located on back of unit) to get the best reception.

LISTENING TO AM RADIO

1. Turn the unit ON, then rotate the AM / FM / BT selector to select AM.
2. Rotate the Volume Knob to adjust your desired volume level.
3. Rotate the TUNING knob to select your desired station.

LISTENING TO AN EXTERNAL DEVICE (BLUETOOTH)

In Bluetooth Mode, this Unit can play music from external devices that are Bluetooth Compatible.

CONNECTING YOUR BLUETOOTH DEVICE

1. Turn the unit ON, then rotate the AM / FM / BT selector to select BT.
2. Rotate the Volume Knob to adjust your desired volume level
3. Turn ON the Bluetooth function on your external device.
4. Open Bluetooth settings on your external device. *Note: The effective distance between your external device and this unit is 10 meters (33 ft).*
5. Wait a moment for “**VRS-2800**” to appear on the device list of your external device’s Bluetooth setting, then select “**VRS-2800**”. If your device asks for password enter “0000” then press “OK”.
6. When the Bluetooth connection has been established successfully you will hear audible beep and the LED Indicator will remain lit.
7. Start playback through your external device.

BASS AND TREBLE CONTROL

Turn the Tone Control Knob to your desired preference.

- To hear more Bass turn the knob to the left.
- To hear more Treble turn the knob to the right.

SPECIFICATIONS

GENERAL

Power Requirements.....	AC230V~50Hz
Power Consumption.....	7W
Dimensions (L x H x D)	9.4 in x 4.9 in x 6.1 in (approx) 240mm x 125mm x 155mm (approx)
Weight.....	2.86 lbs (approx) 1.30 Kg (approx)

SPEAKER SYSTEM

Type.....	1-Way
Impedance.....	4 ohms
Output power	3W

RADIO

FM Range	87-108 MHz
AM Range.....	530-1710 KHz

BLUETOOTH

Bluetooth Version.....	Bluetooth V4.1
Bluetooth Profile.....	A2DP, AVRCP1.4
Bluetooth Frequency Range.....	2.40~2.48GHz
Bluetooth Transmit Power.....	≤ 4 dBm (Class 2)
Operating Distance.....	10 meters

TROUBLESHOOTING

	Symptom	Possible Cause	Solution
GENERAL	• Unit will not power on.	• Unit is unplugged.	• Connect the unit to the AC power supply.
	• No sound output from speakers.	• The volume level is set too low. • The input selector does not match the playback source.	• Adjust the volume. • Select the correct input source.
	• Noise/Distortion in sound output.	• The unit is too close to a TV set or another interfering device.	• Turn off the TV or other appliance, and relocate the unit.
	• Unit fails to respond.	• It might result from external factors such as ESD (Electro-static discharge).	• Disconnect the power cord and external audio device. Re-plug the power cord after one minute.
RADIO	• Cannot listen to any station, or signal appears weak.	• The station is not tuned-in properly. • A TV set is being used nearby and is interfering with the radio reception.	• Properly tune-in the desired station. • Turn-off the interfering TV set.
	• The sound is distorted.	• The antenna is not oriented properly.	• Re-orient the antenna until reception improves.
BLUETOOTH	• No Sound.	• The unit is not switch to Bluetooth mode. • Your device's and/or the unit's volume not turn up. • Your device is too far from the unit or there is an obstacle between your device and the unit.	• Ensure the unit is switched to BT mode. • Move your Bluetooth device closer to unit. • Turn up the volume on your portable device or the unit. • Turn off your Bluetooth device and unit then power them both back ON.
	• Sound has a lot of static.	• Your device is too far away.	• Bring your device closer to the unit.
	• Unable to pair with a Bluetooth device.	• Your device doesn't have Bluetooth connectivity. • The Bluetooth pairing is not successful.	• Confirm that your device is Bluetooth compatible. • Repair the unit and device again.

Please note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.
Other trademarks and trade names are those of their respective owners.

Made in China.

Imported by:
Exertis Supply Chain Services Ltd.
M50 Business Park, Ballymount Rd. Upper, Dublin 12, D12 T4C2, Ireland

This product is manufactured and sold by Innovative Technology Electronics LLC. Victrola and the Victrola logo are trademarks of Technicolor or its affiliates and are used under license by Innovative Technology Electronics LLC. Any other product, service, company, trade or product name and logo referenced herein are neither endorsed nor sponsored by Technicolor or its affiliates.

Declaration of Conformity



This device complies with the essential requirements and other relevant provisions of below

1. RED directive: 2014/53/EU
2. Low voltage directive: 2014/35/EU
3. ROHS directive: 2011/65/EU

You can download the complete EU conformity declaration from www.victrola.com/eudoc



The New Recast WEEE Directive (DIRECTIVE 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE).

1. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
2. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
3. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service.