

VICTROLA™

Bluetooth® Speaker Table

Model: VS-140



Instruction Manual

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USE
AND KEEP IT FOR FUTURE REFERENCE.

CONTENTS

SAFETY INSTRUCTIONS	2
SPECIFICATIONS	3
SPEAKER ASSEMBLY.....	4
OPERATION	5
BLUETOOTH OPERATION	6
AUX-IN OPERATION.....	6
BATTERY / CHARGING	7

Imported by:

Exertis Supply Chain Services Ltd.

M50 Business Park, Ballymount Rd. Upper, Dublin 12, D12 T4C2, Ireland

This product is manufactured and sold by Innovative Technology Electronics LLC. Victrola and the Victrola logo are trademarks of Technicolor or its affiliates and are used under license by Innovative Technology Electronics LLC. Any other product, service, company, trade or product name and logo referenced herein are neither endorsed nor sponsored by Technicolor or its affiliates.

Design and specification are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Other trademarks and trade names are those of their respective owners.

Made in China.

SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions–The safety and operating instructions should be retained for future reference.
3. Heed all warnings–All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture –for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug the apparatus during lighting storms or when unused for long periods of time.
13. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



14.

	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p>	
<p>AVERTISSEMENT: RISQUE DE CHOC ÉLECTRIQUE—NE PAS OUVRIR.</p>		

-This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

- Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

-The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

15. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

16. WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.


17. The use of the equipment in moderate climate.

18. The ventilation should not be impeded by covering the ventilation openings with items such as, newspapers, tablecloths, curtains, etc.

19. No naked flame sources, such as lighted candles, should be placed on the apparatus.

20. The symbol with ~ Indication AC voltage.

21. CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

22. 

RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

23. 

This appliance complies with the following EEC directives: 2014/35/EU Low voltage directive /2014/30/EU EMC directive

24. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

25. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

DECLARATION STATEMENTS

- Hereby, Innovative Technology Electronics, LLC, declares that this Bluetooth Speaker Table is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

- The full test of the EU declaration of conformity is available at the following internet address: www.victrola.com/eudoc

Notes on the EU Declaration of Conformity



This device complies with the essential requirements and other relevant provisions of the RE Directive 2014/53/EU, the Ecodesign Directive 1275/2008 and the RoHS Directive 2011/65/EU.

 
SPECIFICATIONS

Functions:.....	Bluetooth, USB Charging, Aux-In, Hands-free phone call
Bluetooth version:	V4.2
2 USB charging ports (Output):	2.1A/1A
Battery:	Built-in 2,200mAh Li-ion (24.42Wh) Rechargeable Battery
Playing time:	5-6 hours (100% volume level) 8-10 hours (50% volume level)
Charging time:	4 hours (powered off) 6 hours (in use)
Total output power:	88W
RMS:.....	30W (15W x 2)
Speaker (Midrange):	2.75" 4Ω, 12W x 4pcs
Tweeter:	31mm, 8Ω, 20W x 2pcs
Radiator:	75mm 4pcs
Power Supply:	AC Adaptor: 100-240, 50-60Hz DC-16V/2A
Included:.....	Speaker, Three (3) Legs, Instruction Manual, 3.5mm Aux-In Cable, Power Supply

CAUTION:

The built-in rechargeable battery is not replaceable. Do not remove or replace it, do not throw in the trash or in a fire. Do not dispose device in standard garbage disposal sites. Dispose of device at available Battery Recycling Sites after fully discharging battery. Not doing so may violate local disposal laws and regulations. Please refer to local regulations for proper battery disposal.

SPEAKER ASSEMBLY

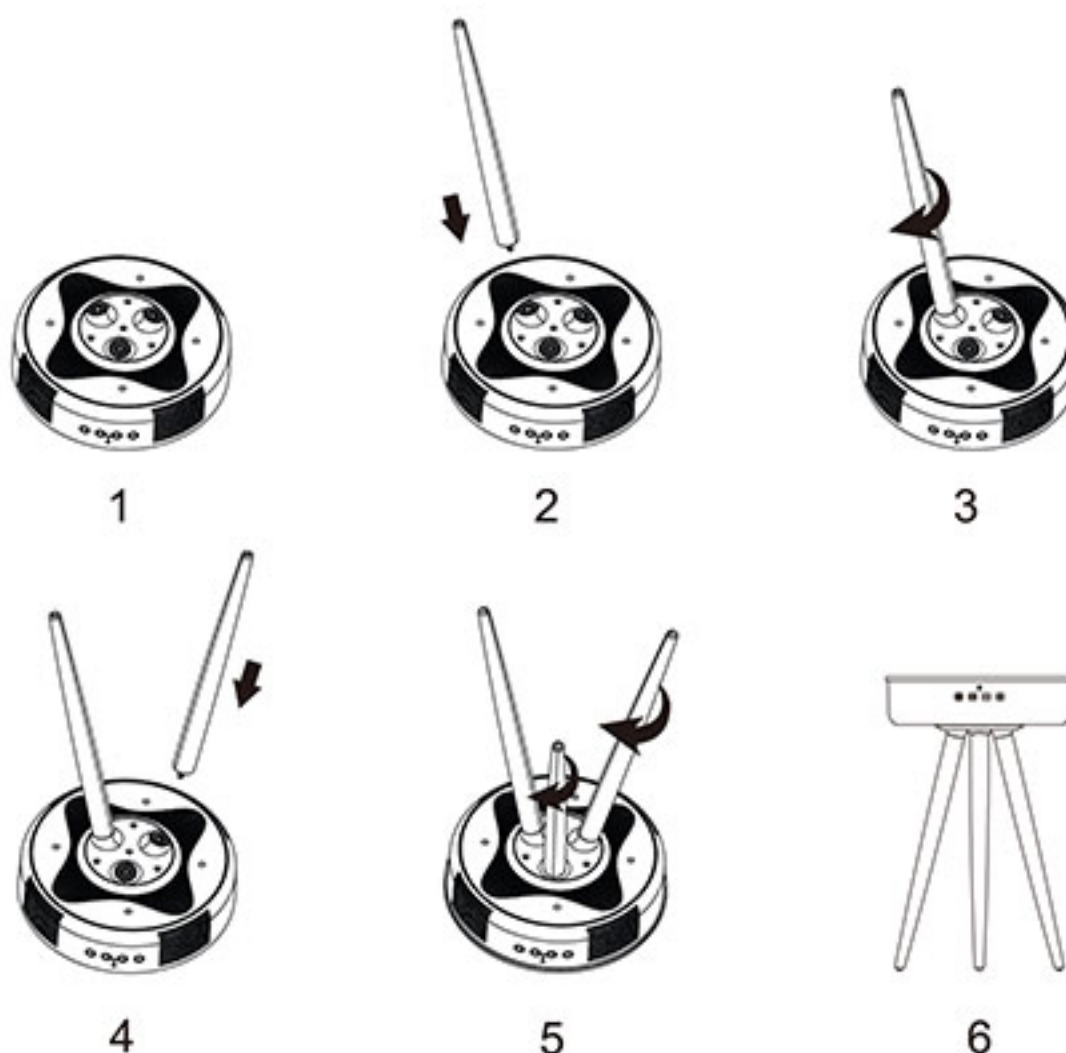


1. Place speaker on a flat surface with base (showing screw holes) upwards.
2. Insert one wooden leg into a screw hole.
3. Rotate wooden leg clockwise until tightly fastened.
4. Repeat Step 2 for remaining two wooden legs.
5. Repeat Step 3 for remaining two wooden legs.
6. Once all the wooden legs are secure, turn speaker right side up.

WARNING:

1. Maximum support capacity of this speaker is 11 lbs (5kg).
DO NOT place an item heavier than 11 lbs (5kg) on this product.
It will result in damage to the unit.
2. DO NOT use as a seat.
This will result in personal injury and cause damage to the unit.
3. Please keep out of reach of children.

 OPERATION

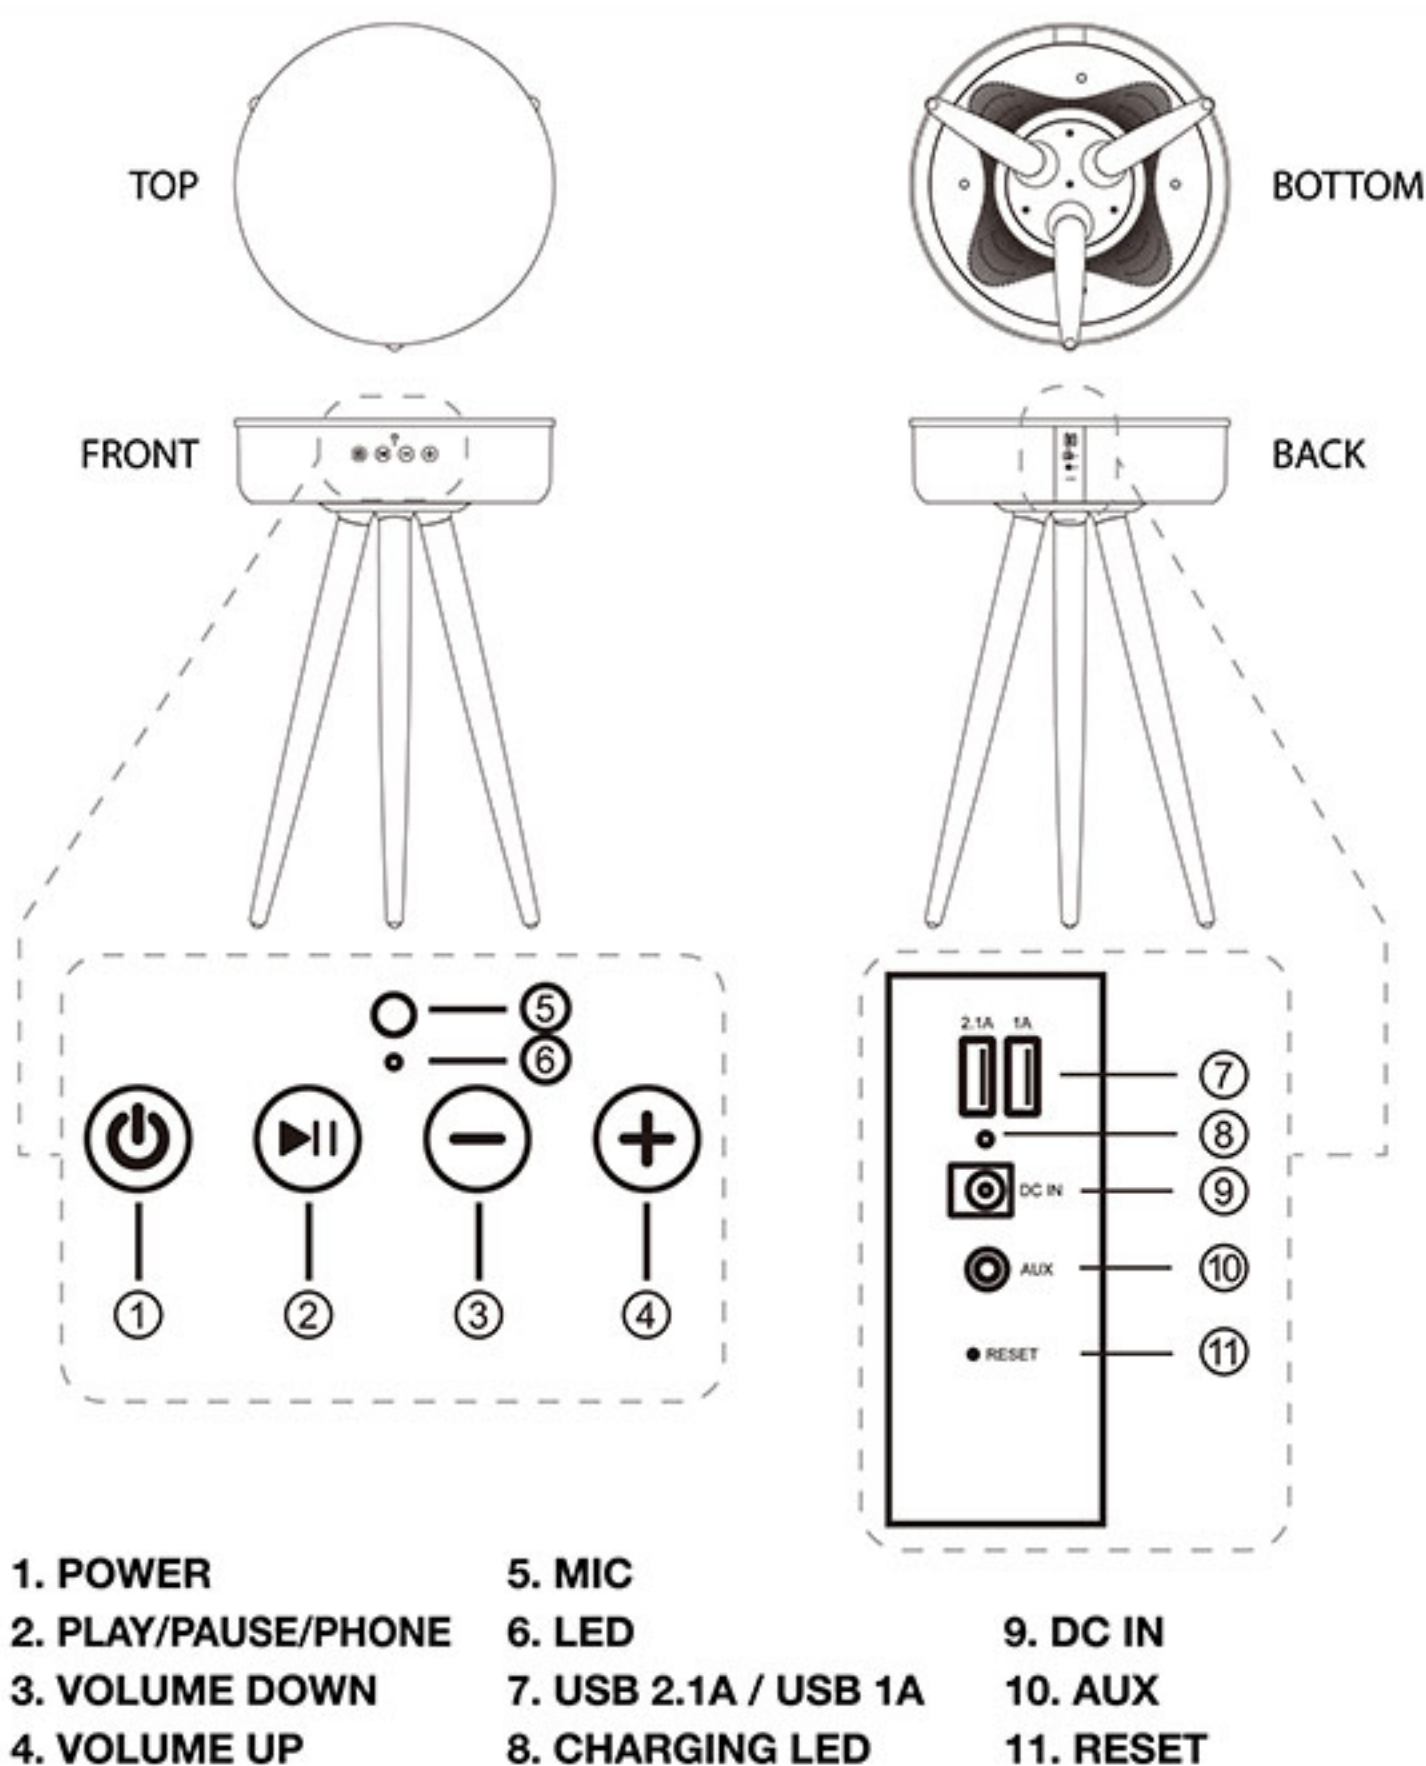

POWER ON/OFF

1. Press and hold the POWER button to turn ON - wait for an audible tone. The speaker will automatically be in Bluetooth mode. The blue LED light will begin to flash. A Bluetooth compatible device can now be paired with speaker.
2. Press and hold the POWER button to turn OFF. An audible tone and no illuminated LEDs signify the speaker is now OFF.

NOTE: If the speaker is dormant for 10 minutes, an audible tone will sound and it will automatically power OFF.

It is recommended to fully charge the unit prior to first use.

BLUETOOTH OPERATION

An external device with Bluetooth Connectivity can be wirelessly connected to this speaker using the Bluetooth function.

1. Press and hold the POWER button to turn ON - wait for an audible tone. The speaker will automatically be in Bluetooth mode. The blue LED light will begin to flash. A Bluetooth compatible device can now be paired with the speaker.
2. Turn your external device's Bluetooth Setting ON. Wait a moment, then look for the Bluetooth pairing name "**VS-140**".
3. Select the Bluetooth pairing name, to connect the unit. Once connected, the blue LED light will stop flashing.
NOTE: If the connection is unsuccessful the blue LED light will begin to flash slowly.
4. You are now connected to your external device via Bluetooth!
5. Adjust the sound level using the VOLUME +/- buttons.

Playing music after connecting to Bluetooth:

PAUSE

- Quickly press the Play/Pause/Phone button to pause.
- Quickly press the Play/Pause/Phone button again to resume the Play function.

DISCONNECTING BLUETOOTH

- Press and hold the Play/Pause/Phone button to disconnect Bluetooth pairing.
- Follow steps 2 to 5 above to pair a new external device.

NOTE: The maximum recommended distance between a Bluetooth enabled device and speaker is ≥ 33 ft (10m).

MAKING A PHONE CALL VIA BLUETOOTH

1. When there is an incoming call, the speaker will give an audio prompt.
2. Quickly press the Play/Pause/Phone button to accept the phone call.
(Press and hold the Play/Pause/Phone button to decline the call.)
3. The internal MIC allows you to communicate with the caller.
4. Quickly press the Play/Pause/Phone button to disconnect the call.
5. Quickly press the Play/Pause/Phone button two times to redial the last dialed number.

AUX-IN OPERATION

An external (auxiliary) audio source (i.e. personal CD/MP3 Player/Mobile phone or computer) can be connected to this speaker via the AUX JACK.

1. Plug a detachable Aux Cable into the AUX socket on the rear panel of the speaker.
2. The speaker will automatically switch to AUX mode, the LED will turn green.
NOTE: The speaker will automatically switch to Bluetooth mode when the AUX Cable is removed. The LED will turn blue and begin blinking.

BATTERY / CHARGING INFO

Low Battery prompt to charge speaker:

1. The speaker automatically issues an audible tone to remind the user that the speaker requires charging.

NOTE: If the speaker is not charged it will automatically power off.

2. Connect the A/C adapter to the DC port on the back of the speaker. The red LED light will illuminate signifying the speaker is charging. The red LED will turn off when the speaker is fully charged.

 
WARNING: Please use the included A/C adapter for charging. If not, it may cause the speaker to charge too slow or not at all. In extreme cases, A/C adapter will become damaged or additional incidents may occur.

CHARGING YOUR EXTERNAL DEVICE VIA USB

When the speaker is powered on OR connected via the A/C adapter, the USB ports can charge 2 devices simultaneously. When the speaker is turned off however, the USB port can not charge external devices.

HOW TO INSTALL / REMOVE POWER ADAPTOR PLUG

UK Plug

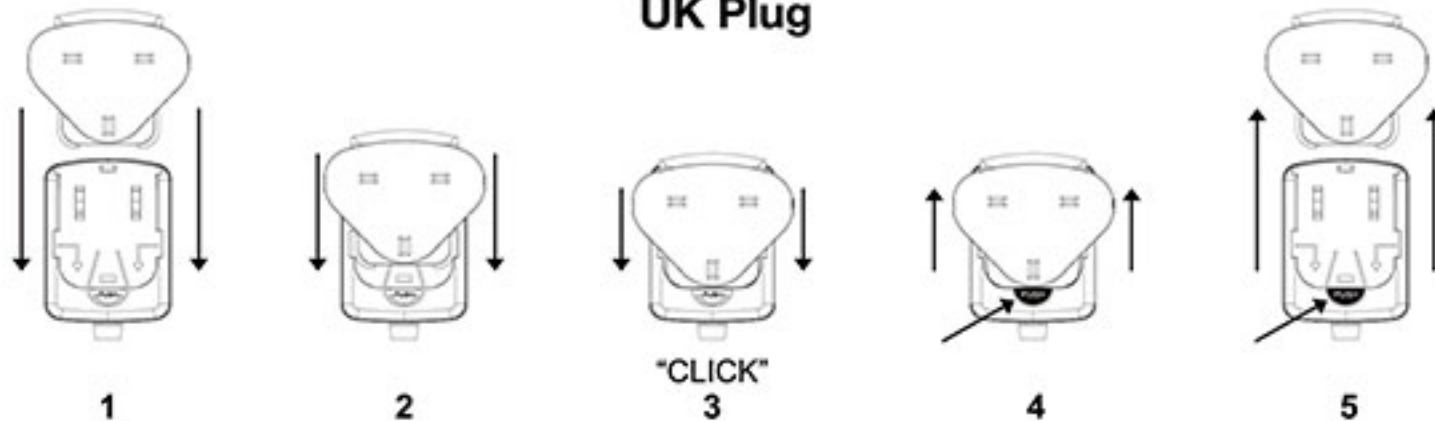

Europe Plug

