

VICTROLA™

3-IN-1 TURNTABLE

MODEL: VTA-67



Instruction Manual

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY
BEFORE USE AND KEEP IT FOR FUTURE REFERENCE.

CONTENTS

Safety Instructions.....	1
Product Overview.....	3
Setup/Basic Operation.....	5
Listening to a Vinyl Record.....	6
Listening to the FM Radio.....	6
Listening to an External Audio Device (AUX Mode).....	6
Listening to an External Audio Device (Bluetooth Mode).....	7
Maintenance/Proper Handling.....	8
Troubleshooting Guide.....	10
Specifications.....	12
WEEE & CE Statements.....	13

SAFETY INSTRUCTIONS

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash with arrowhead within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.</p>	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PROFESSIONAL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	--	---

Please, read these safety instructions and respect the following warnings before the appliance is operated:

- ~ AC voltage
- == DC voltage
- Class II equipment
- 🏠 For indoor use only
- Ⓥ Energy efficiency marking with level VI
- ⚡ Polarity of d.c. power connector

The shown above appears on electrical and electronical equipment (or the packaging) to remind users of this.

Users are requested to use existing return facilities for used equipment and batteries.



Warning:

- Always follow basic safety precautions when using this appliance, especially when children are present.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not damage the power cord, neither do not place any heavy objects on it, do not stretch it or bend it. Also do not attach extension cables. Damage to the power cord may occur fire or electric shock.
- If the supply cord is damaged, it must be replaced by the manufacturer, a service agent or similarly qualified persons in order to avoid a hazard.
- Ensure that the unit is plugged into an AC 100-240V 50/60Hz power outlet. Using higher voltage may cause the unit to malfunction or even fire catching.
- If the power plug does not fit into your outlet, do not force the plug into an electrical socket if it does not fit.
- Turn off the unit before unplugging it from power source to completely switch it off .
- Do not disconnect or connect the power cord with wet hands. It may cause an electric shock.
- Ensure that the mains plug is always easily accessible.
- This product does not contain any parts that are serviceable by the user. In case of a fault, contact the manufacturer or authorised service department. Exposing the internal parts inside the device may endanger your life. The manufacturers guarantee does not extend to faults caused by repairs carried out by unauthorised third parties.
- Do not use this product immediately after unpacking. Wait until it warms up to room temperature before using it.
- Ensure this product is used in moderate climates only (not in tropical/subtropical climates).
- Place product on a flat, stable surface that is not subject to vibrations.
- Ensure the product and its parts is not overhanging the edge of the supporting furniture.
- To reduce the risk of fire, electric shock or damage to this product, do not expose it to direct sunlight, dust, rain and moisture. Never expose it to dripping or splashing and do not place objects filled with liquids on or near the product.
- Do not place objects filled with liquids, such as vases, on the apparatus.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not place the product where the humidity is high and ventilation is poor.
- Don't mount this product on a wall or ceiling.
- Do not place the unit near TVs, speakers and other objects that generate strong magnetic fields.
- Do not leave the unit unattended when it is in use.
- Allow at least 30 cm clearance from the rear and the top of the unit and 5 cm from each side. Do not block any ventilation openings of this product. Always ensure that the ventilation openings are not covered with items such as newspapers, table-cloths, curtains, etc.
- NEVER let anyone, especially children, push anything into holes, slots or any other openings in the unit's casing as this could result in a fatal electric shock.
- Storms are dangerous for all electric appliances. If the mains or aerial wiring is struck by lightning, the appliance might get damaged, even if it is turned off . You should disconnect all the cables and connectors of the appliance before a storm.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Do not cover ventilation openings, this is not intended to be used on soft support.

Maintenance

- Unplug the power cable from the power source before cleaning the appliance.
- Use a soft and clean rag to clean the outside of the unit. Never clean it with chemicals or detergent.

Power Adapter

- To disconnect the unit from the mains supply, unplug the lead from the mains socket.
- Only use the supplied mains adaptor as failure to do this may result in a safety risk and/or damage to the unit.
- The main plug of power adaptor is used as the disconnect device. The socket-outlet shall be installed near the equipment and shall be easily accessible.

Trademarks:



 
The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

ACCESSORIES INCLUDED

- INSTRUCTION MANUAL
- POWER ADAPTER

PRODUCT OVERVIEW

Front View

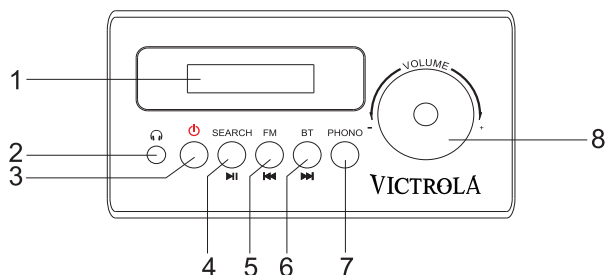

1. Display Screen

2. **3.5mm EARPHONE JACK:** Accepts headphone/earphone plugs.

3. **POWER:** Press to turn the unit ON or OFF.

4. **SEARCH / ►||**

In FM mode, press this button to automatically search stations.

Press and hold this button to search stations manually

In BT mode, press this button to play/pause playback.

5. **FM / ◀◀**

Press to enter FM mode.

Press and hold to skip to the previous track or station.

6. **BT / ▶▶**

 
Press to enter BT mode.

Press and hold to skip to the next track or station.

7. **PHONO:** Press to enter PHONO mode.

8. **Volume Knob:** Turn to adjust volume.

Rear View

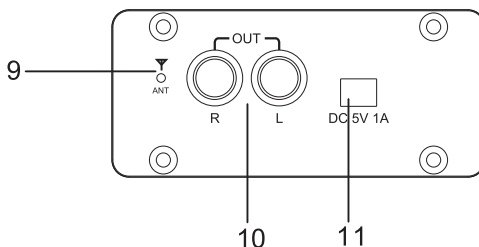

9. FM wire antenna

While tuned to a station in FM mode, extend the wire and reposition.

 
10. LINE OUT jacks

For amplifier device with RCA auxiliary input sockets, insert the white and red plugs on the RCA cable into the unit. Insert the opposite end into the amplifier device. Be sure to connect the white plug to the white jack and the red plug to the red jack.

11. DC Input Jack

Connect the power adapter to the jack to power on the unit.

Part of the Turntable

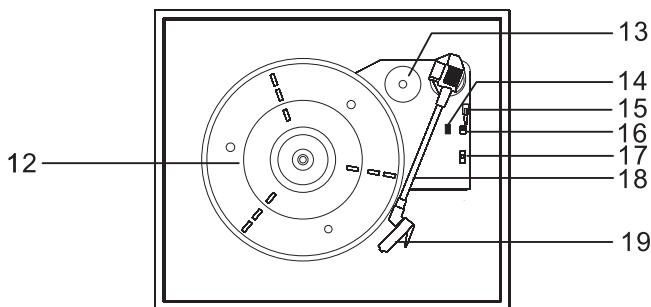

12. Turntable

13. 45 RPM adapter

14. Tone Arm holder

15. Cue Lever: Before use, gently push the Tone Arm holder to the right to release the TONE ARM.

16. AUTO STOP ON/OFF SWITCH: Switch "ON", the turntable will stop automatically when finished playing. Switch "OFF", the turntable will keep turning when finished playing.

17. Speed Selector

18. Tone Arm

19. STYLUS

 
SETUP/BASIC OPERATION

Setup

1. Remove white protective needle cover by gently pulling towards front of unit.
2. Remove any packaging materials from the unit.
3. Connect the power adapter to the DC Input jack to power on the unit.

Note:

- It is strongly recommended that this product should be operated only from the type of power source indicated on the marking label.

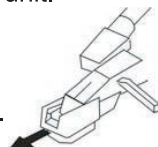

Basic Operation

 
1. Press the POWER button to turn the unit on.
2. Select mode by pressing the FM/BT/PHONO buttons on the front panel.
3. Rotate the VOLUME KNOB to adjust to the desired sound level.

Listening through RCA LINE OUT

For amplifier device listening, first reduce the volume level to minimum. Insert the white and red plugs on the RCA cable into the unit, then insert the opposite end into the amplifier device. Be sure to connect the white plug to the white jack and the red plug to the red jack.

Listening through Earphones/Headphones (not included)

For private listening, first reduce the volume level to minimum. Insert your headphones' plug into the 3.5mm jack, then adjust the volume up by turning the VOLUME KNOB.





Note: The speakers will automatically be deactivated while headphones are plugged in.

CONDENSATION WARNING:

When the unit is moved from a cold or warm place, or is used following a sudden temperature change, there is the danger that water vapor in the air may condense on the unit, preventing proper operation. In such cases, leave the unit for 1-2 hours after powering on the unit to allow it to stabilize at the temperature of its surroundings.

LISTENING TO A VINYL RECORD

  1. Turn the unit ON by pressing the POWER button.
2. Press the PHONO button to enter the PHONO mode.
3. Gently open the dust cover.
4. Put the record on the turntable. Select the speed. When playing a 45 RPM record, use the included 45 adaptor.
5. Gently push the Tone Arm holder to the right to release the TONE ARM.
6. Raise the Cue Lever to lift the TONE ARM off the tone arm support.
7. Move the TONE ARM gently to the edge of the record (or the starting point of the track). The turntable will begin to turn.
8. Gently lower the TONE ARM by slowly releasing the CUE LEVER.
You can lower the TONE ARM manually if the CUE LEVER has not been raised.
9. Turn the VOLUME KNOB to adjust the volume.
10. When playback has finished, slightly lift the tone arm using the CUE LEVER and return it to the TONE ARM holder.

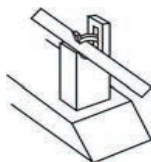

LISTENING TO THE FM RADIO

1. Press the FM/◀◀ button to enter the FM mode.
2. Press SEARCH/▶▶ button, the unit will search the stations and stores the stations it searches automatically.
NOTE: You can press SEARCH/▶▶ button again to stop searching.
3. Press and hold SEARCH/▶▶ button to search stations manually.
4. Press and hold the FM/◀◀ or BT/▶▶ button to skip to the previous/next stored station.

 
Adjusting for Best Reception

FM broadcast: Extend and reposition the FM antenna.

LISTENING TO AN EXTERNAL DEVICE (AUX MODE)

LINE-OUT Jacks on the BACK of the unit:

If you play this device through external powered speakers, you can connect the unit with an RCA component cable (not included). Make sure to connect the white plug to white jack (left) and the red plug to the red jack (right).

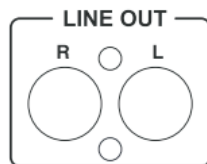

LISTENING TO AN EXTERNAL DEVICE (BLUETOOTH MODE)

In BT (bluetooth) mode, this unit can play music from external devices which have a built-in Bluetooth feature.

GETTING CONNETTED USING BLUETOOTH

1. Press the BT/▶II button to enter BT mode.
 2. The “bt” will flash on the Display Screen.
 3. Turn ON the Bluetooth function on your external device.
- NOTE: The effective distance between your external device and this unit is 10 meters (33ft).
4. Wait for the “**VTA-67**” to appear on the paired devices list of your external device and press “**VTA-67**”.
 5. A few seconds later, your Bluetooth connection is successful and the “bt” on the Display Screen will stop flashing.
 6. Select the music media files on your external device, then press the SEARCH/▶II button to begin playback.
 7. To temporarily pause playback, press the SEARCH/▶II button. Press again to resume.
 8. To skip to the previous or next tracks, press and hold the FM/◀◀ or BT/▶▶ button to listen.

Note: Stop, Fast Forward/Rewind are only available on your external device.

MAINTENANCE/PROPER HANDLING

Handling Vinyl Records

- Do not touch the record's grooves. Only handle records by the edges or the label with clean hands. Touching the record surface will cause your record's quality to deteriorate.
- To clean a record, use a soft anti-static cloth to gently wipe the record surface.
- Keep records in their protective sleeves when not in use.
- Always store records upright on their edges.
- Avoid placing records in direct sunlight, close to a heat source (radiators, stoves, etc.), or in a location subject to vibration, excessive dust, heat, cold or moisture.

How to Replace the Turntable Stylus (Replacement Needle # ITNP-S1)

 
The stylus should last about 50 hours under normal use. However, it is recommended that the stylus be replaced as soon as you notice a change in sound quality. Prolonged use of a worn-out stylus may damage the record. The highest speed of 78 RPM records would wear out the stylus more quickly.

Removing the Stylus from the Cartridge

1. Set a screwdriver at the tip of the stylus and push down to the direction "A".

WARNING: When applying force to stylus, too much may damage or break the stylus.

2. Pull the stylus out toward the direction "B".

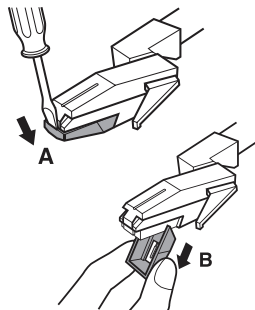


Installing the Stylus

1. Hold the tip of the stylus and insert the other edge by pressing toward direction "C".
2. Push the stylus up toward direction "D" until it locks at the tip.

Caution:

 - Do not remove or bend the stylus needle.
- Do not touch the needle to avoid injury to your hand.
- Turn off the unit's power before you replace the stylus.
- Keep out of reach of children.

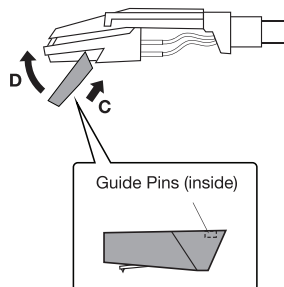

TROUBLESHOOTING GUIDE

	Symptom	Possible Cause	Solution
GENERAL	<ul style="list-style-type: none"> Unit will not power on. 	<ul style="list-style-type: none"> Unit is unplugged. 	<ul style="list-style-type: none"> Connect the DC power adapter to the jack.
	<ul style="list-style-type: none"> No sound output from speakers. 	<ul style="list-style-type: none"> The volume level is set too low. The input selector does not match the playback source. 	<ul style="list-style-type: none"> Adjust the volume. Select the correct input source.
	<ul style="list-style-type: none"> Noise/Distortion in sound output. 	<ul style="list-style-type: none"> The unit is too close to a TV set or another interfering device. 	<ul style="list-style-type: none"> Turn off the TV or other appliance, and relocate the unit.
	<ul style="list-style-type: none"> Unit fails to respond. 	<ul style="list-style-type: none"> It might result from external factors such as ESD (Electro-static discharge). 	<ul style="list-style-type: none"> Disconnect the power cord and external audio device. Re-plug the power cord after one minute.
FM RADIO	<ul style="list-style-type: none"> Cannot listen to any station, or signal appears weak. 	<ul style="list-style-type: none"> The station is not tuned-in properly. A TV set is being used nearby and is interfering with the radio reception. 	<ul style="list-style-type: none"> Properly turn-in the desired station. Turn off the interfering TV set.
	<ul style="list-style-type: none"> The sound is distorted. 	<ul style="list-style-type: none"> The antenna is not oriented properly. 	<ul style="list-style-type: none"> Re-orient the antenna until reception improves.
PHONO	<ul style="list-style-type: none"> Decline in turntable audio performance. 	<ul style="list-style-type: none"> The turntable stylus is worn out. 	<ul style="list-style-type: none"> Replace the stylus.

	Symptom	Possible Cause	Solution
BLUETOOTH	<ul style="list-style-type: none"> • No sound. 	<ul style="list-style-type: none"> • The unit is not switched to Bluetooth mode. • Your device's and/or your unit's volume is not turn up. • Your device is too far from the unit or there're some obstacle between your device and your unit. 	<ul style="list-style-type: none"> • Ensure the unit is switched to BT mode. • Move your Bluetooth device closer to unit. • Turn up the volume on your porta device and/or the unit. • Turn OFF your bluetooth device and unit. Then power them both back ON.
	<ul style="list-style-type: none"> • Sound has a lot of static. 	<ul style="list-style-type: none"> • Your device is too far away. 	<ul style="list-style-type: none"> • Bring your device closer to the turntable.
	<ul style="list-style-type: none"> • Unable to pair with a bluetooth device. 	<ul style="list-style-type: none"> • Your device dosen't have Bluetooth connectivity. • The Bluetooth pairing is not successful 	<ul style="list-style-type: none"> • Confirm that your device is Bluetooth compatible. • Re-pair the unit and device again.

SPECIFICATIONS

GENERAL

Power adapter -----DC 5V/1A

Power Consumption -----5W

Power Output -----2 × 2W

Size-----12.7" (322mm) W × 11.4" (290mm) D × 5.2" (132mm) H

Weight -----4.5 lbs (2kg)

Operating Temperature -----5°C - +40°C

FM RADIO

Range-----88 to 108 MHz

RECORD PLAYER

Speeds -----33-1/3 RPM, 45 RPM and 78 RPM

BLUETOOTH

Bluetooth Version-----Bluetooth V4.0

Bluetooth Profiles -----A2DP, AVRCP

Bluetooth Frequency range -----2.402GHz-2.480GHz

Bluetooth Transmitter Power ----≤1.2dbm

Operating Distance-----10 meters (33 ft.)

WEEE & CE STATEMENTS

Declaration of Conformity



This device complies with the essential requirements and other relevant provisions of below

1. RED directive: 2014/53/EU
2. Low voltage directive: 2014/35/EU
3. ROHS directive: 2011/65/EU

You can download the complete EU conformity declaration from www.victrola.com/eudoc



The New Recast WEEE Directive (DIRECTIVE 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE).

1. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
2. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
3. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service.

Please note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

Made in China.

Imported by:

Exertis Supply Chain Services Ltd.

M50 Business Park, Ballymount Rd. Upper, Dublin 12, D12 T4C2, Ireland

This product is manufactured and sold by Innovative Technology Electronics LLC. Victrola and the Victrola logo are trademarks of Technicolor or its affiliates and are used under license by Innovative Technology Electronics LLC. Any other product, service, company, trade or product name and logo referenced herein are neither endorsed nor sponsored by Technicolor or its affiliates.