

 





# ITEM NO:C1860D DINING CHAIR

NO.	PART	DESC	DESCRIPTION
A		SEAT	1PC
B		LEG	1PC
C		BOLT 1/4X25mm	4PC
D		FLAT WALEN	4PC
E		ALLENKEY	1PC

**Note:**Pls do not tighten all bolts until the chair is assembled completely.Once assembled,tighten all bolts before attaching the chair.

**Note:** Pls ne pas serrer tous les boulons jusqu'à ce que les selles est completely.Once assemblé assemblé, serrer tous boulons avant de fixer les selles.

Step1

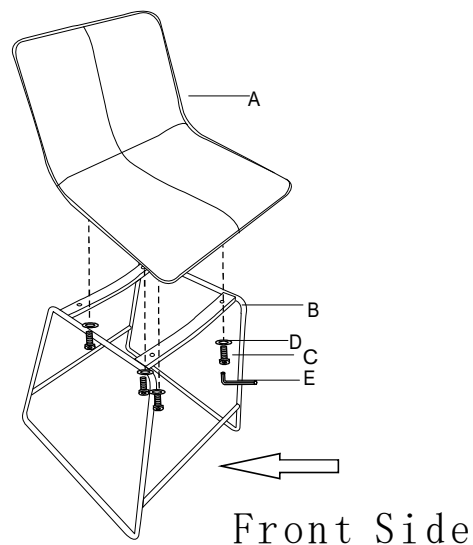

Step2

