
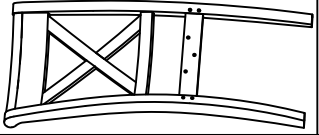


 
 
 
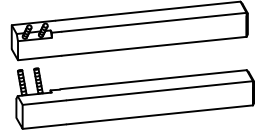

 




**5107S
DINING CHAIR / CHAISE DROITE**

Thank you for purchasing this product. Please take time to read and follow the instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they will be sent to you immediately.

Merci d'avoir acheté ce produit. Veuillez lire et suivre les instructions ci-dessous. Vérifiez avant le montage que vous avez toutes les pièces et fixations. Les pièces qui semblent manquer se trouvent souvent dans les matériaux d'emballage. Si vous n'avez pas toutes les pièces de la liste, demandez à votre détaillant et nous vous les enverrons immédiatement.

NO	HARDWARE LIST/LISTE DE QUINCAILLERIE		NO	PARTS LIST / LISTE DE PIÈCES		
1	Hex Nut / Ecrou hexagonal		4pcs	A Chairback / Dossier de chaise		1pc
2	Lock Washer / Rondelle d'arret		11pcs			
3	Flat Washer / Rondelle Plate		11pcs	B Seat / Siege		1pc
4	Bolt / Boulon 1/4 x 38		3pcs			
5	Bolt / Boulon 1/4 x 85		4pcs	C Front Leg / Pieds avant Left & Right		2pcs
6	Allen Wrench / Clé Allen		1pc			
7	Wrench / Clé		1pc			

