
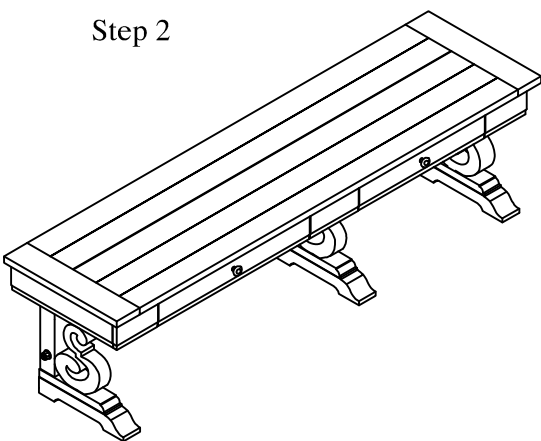


ASSEMBLY INSTRUCTIONS

MODEL: T2491&T4350&T4646-86 CONSOLE SOFA TABLE

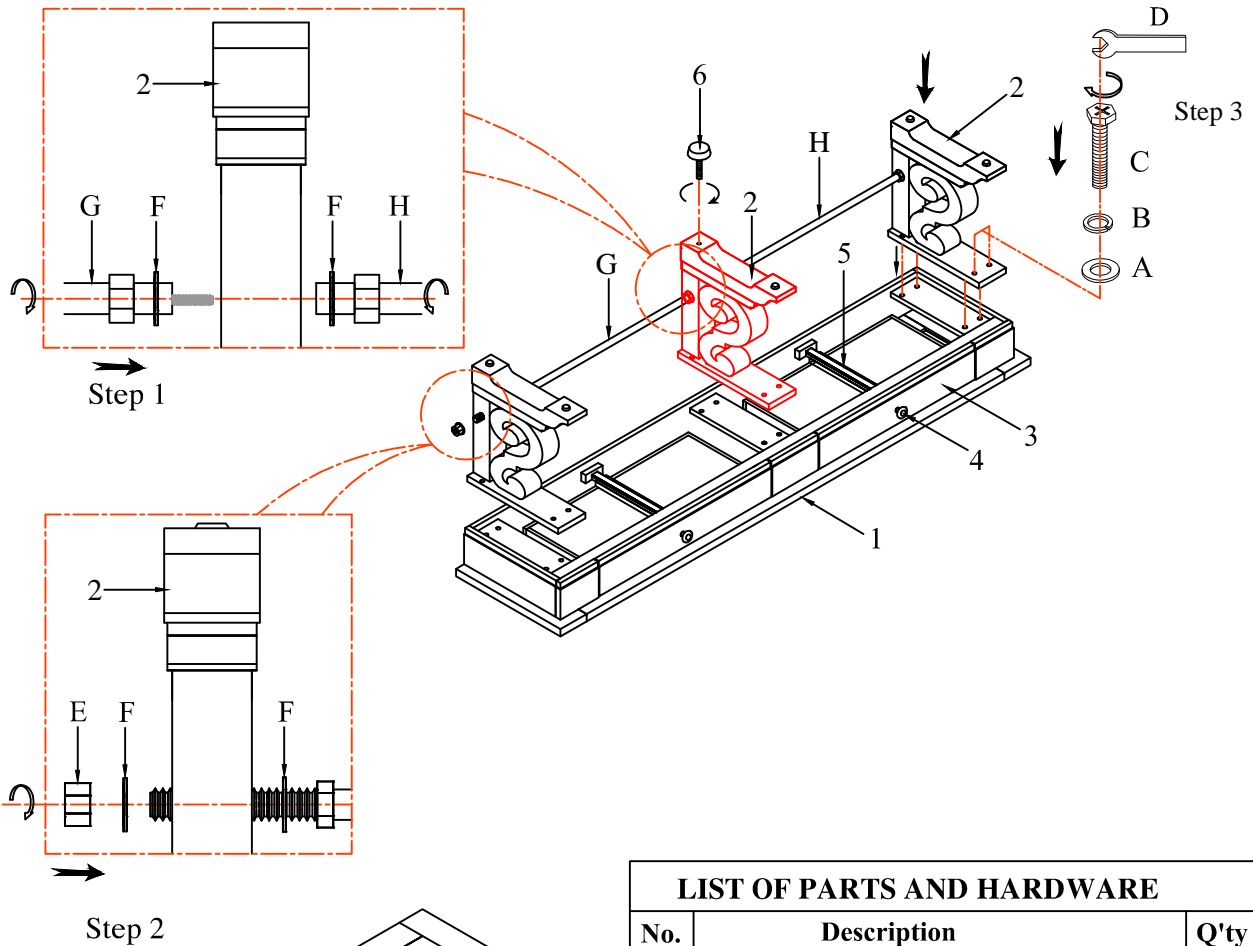

LIST OF PARTS AND HARDWARE

No.	Description		Q'ty
A		Flat washer $\Phi 1/4" \times 16 \times 2\text{mm}$	12
B		Lock washer $\Phi 1/4" \times 11 \times 2\text{mm}$	12
C		Bolt $\Phi 1/4" \times 1-1/2" \text{L}$	12
D		Wrench 10mm	1
E		Nut $\Phi 3/4" \times 29 \times 15\text{mm}$	2
F		Flat washer $\Phi 34 \times 2\text{mm}$	6
G		Male stretcher	1
H		Female stretcher	1
1		Table top	1
2		Table leg	3
3		Drawer	2
4		Drawer knob	2
5		Drawer runner (335*26*17mm)	2
6		Leveler	6

NOTE:
 ASSEMBLE UNIT ON A SOFT SURFACE.
 ASSEMBLEZ L'UNITÉ SUR UNE SURFACE MOLLE.
 ENSAMBLE LA UNIDAD EN UNA SUPERFICIE PLANA Y SUAVE.

DO NOT TIGHTEN BOLTS UNTIL THE UNIT IS COMPLETELY ASSEMBLED.
 NE SERREZ PAS LES BOULONS JUSQU'À CE QUE L'UNITÉ SOIT COMPLÈTEMENT ASSEMBLÉE.
 NO APRIETE LOS TORNILLOS HASTA QUE LA UNIDAD ESTE COMPLETAMENTE ENSAMBLADA.