

Paramount

MODEL NO.: ES-S101

VERNON ELECTRIC STOVE



INSTRUCTIONS FOR USE

Natural flame effect
Constant temperature
Ventilator control switch
Energy-saving
Easy to use
Elegant design
Plug connected
110~120V~ 60Hz 1350W

****IMPORTANT NOTICE****

Please contact our toll free hotline:

 
1-800-561-5550

parts@jrhome.com

For customer service & warranty issues


IMPORTANT INSTRUCTIONS

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least three feet (0.9m) from the front of the heater and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Do not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bath tub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not tripped over.
9. To disconnect heater, turn controls to off, then remove plug from outlet.
10. Connect to properly grounded outlets only. (This item may be omitted if the heater is not provided with a grounding type attachment plug.)
11. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
12. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
13. Do not place electric stove near gasoline, paint, or flammable liquids are used or stored
14. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
15. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire.
16. This heater may include an audible (a visual) alarm to warn that parts of the heater are getting excessively hot, if the alarm sounds (flashes), immediately turn the heater off and inspect for any objects on or adjacent to the heater that may cause high temperatures. DO NOT OPERATE THE HEATER WITH THE ALARM SOUNDING (FLASHING)
17. SAVE THESE INSTRUCTIONS

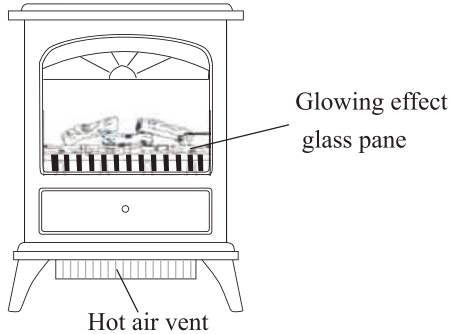

Special characteristics of this heater

 - The smouldering glow of the flames can hardly be distinguished from that of a real fireplace. This heater is deal for use outside the cold season, when the central heating is switched off.
- Produces the effect of a hot current of air.
- Energy-saving, automatic and constant temperature control.

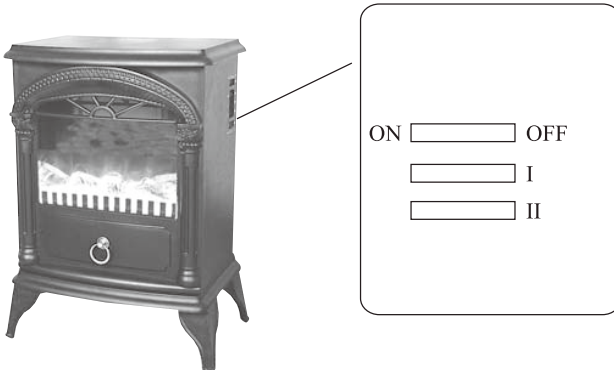


To Switch on

- Plug in the appliance into the socket.
- The control switches are on the right side of the machine.
- For the flame effect, turn the right switch "ON" (since only the lighting is switched on, power consumption is approximately 80W)
- For a low level of heating, turn on switch "I"
- For the full heating, turn on switch "I" and "II"

Unpacking, leg assembly and installing the appliance

 Open the packaging carefully and remove the appliance, 4 legs and the 12 screws required to attach the legs prior to use.

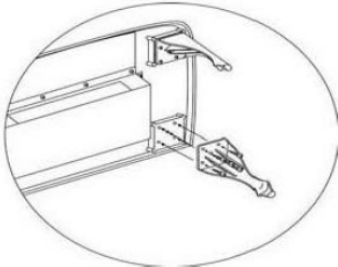

1. Lay Stove on a flat surface
2. Attach leg with provided screws (X3)
3. Repeat for remaining 3 legs.

- Keep the original packaging for future transport.
- Keep the front of the appliance through which the heat is radiated at least one meter away from furniture, curtains and other flammable objects at all times.
- Ensure there is a grounded socket nearby (back of the appliance).
- **Never use an extension cord.** The main cable must remain at the back of the appliance and must not be in contact with any hot elements.

Safety instructions

Only use the appliance in accordance with the instructions in this manual! It cannot be used for any other purpose. Any damage due to inappropriate operation, wrongful use or not observing the safety instructions is not covered by the guarantee.

Never operate the appliance when the appliance itself or the mains cable show any signs of damage.

Be responsible when handling the packing material.

Warning: plastic wrapping may be lethal to children.

Do not place the appliance below a socket.

Never operate the heater on a program switch, timer switch or any other appliance for automatic operation.

The heater is only suitable for indoor use.

Never use the appliance near the bath, shower or a swimming pool.

Never place flammable objects or clothing on top of the heater.

Do not cover the heater.

Never leave children unattended near the appliance.

In case of malfunction, disconnect the plug immediately.

When not in use for a considerable amount of time, unplug the appliance.

Repairs such as replacing a bulb should only be performed by an approved electrotechnician.

Components should only be serviced by an approved electrotechnician.

Cleaning the exterior of the appliance

Before cleaning the appliance, disconnect it from the socket and leave to cool off.

You can clean the exterior of the heater with a soft, damp cloth. Do not use cleaning or polishing products.

 
Instructions for the approved electrotechnician

The appliance comes with the following light bulbs:

Three 40W light bulbs(max. 40W)

Changing the bulbs

Appliance comes with the following light bulbs:
Two 40W light bulbs(max.40W).

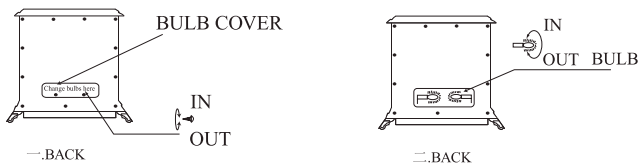

1. SCREW OFF THE BULB COVER

2. THEN CHANGE THE BULBS.

Changing the bulbs:

Loosen the both screws at the bulb cover, then change the bulbs.

CAUTION: sharp edges!

You can now replace faulty bulbs by identical ones with the same wattage.

1. After installation, the power plug should be accessible.
2. If the power cord is damaged. It must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
3. The heater must be located immediately below a socket.
4. The appliance is not intended for use by young children. Young children should be supervised to ensure that they do not play with the appliance.
5. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
6. In order to avoid overheating, do not cover the heater.

 
USER INSTRUCTIONS

1. Instructions and cautionary statements for cleaning, user-maintenance, operations recommended by the manufacturer, such as lubrication or nonlubrication, and a warning to the user that any other serving should be performed by an authorized service representative.
2. Any heater employing a manually reset control shall be provided with instructions to the user regarding its operation.
3. Specific instructions for the proper method of cord storage, total heater storage, and the like when the heater is not in use.

Grounding instructions

(in the case of a heater rated for a nominal 120volts.) this heater is for use on 120volts. The cord has a plug as shown at A in Figure 61.1. an adapter as shown at C is available for connecting three-blade grounding-type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

(in the case of a heater rated for a normal 240 or 208 volts.) this heater is for use on 240(or 208) volts. The cord has a plug as shown in D in Figure 61.1, no adapter is available for this blade configuration, and none should be used. The type outlet is a 240 (or 208) volt grounding outlet. When properly installed, it provides a ground connection through the cord to the heater to protect the operator from electric shock.

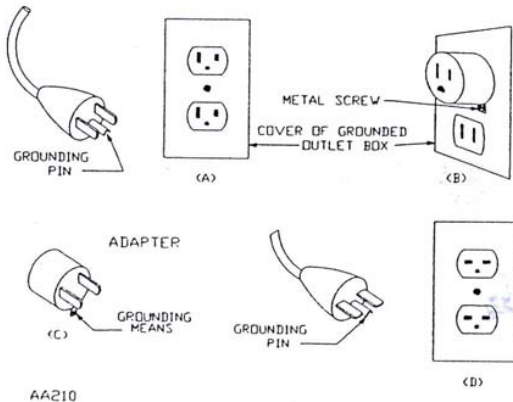

AA210

 
Technical data:

Mains voltage: 110~120V

Mains frequency: 60Hz

Nominal charge: max. 1350W

ELECTRICAL DIAGRAM

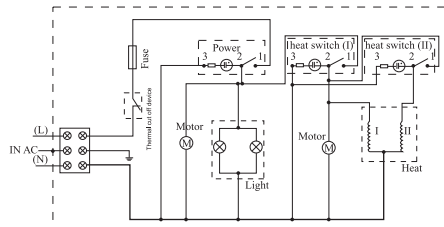

IMPORTANT

For questions, concerns or problems with our product please email our customer service department:

customercare@jrhome.com

DATED PROOF OF PURCHASE REQUIRED FOR WARRANTY SERVICE

Si vous éprouvez des difficultés ou si vous avez des questions ou des préoccupations, prière de faire parvenir un courriel à notre service à la clientèle

customercare@jrhome.com

UNE PREUVE D'ACHAT DATÉE EST REQUISE POUR SE PRÉVALOIR DE LA GARANTIE.

WARRANTY

This product is inspected, tested and carefully packaged to minimize the chance of damage during shipment. If a part (excluding light bulbs, glass and fuses*) within one year from the date of purchase proves to be defective in material or fabrication under normal use, the part will be repaired or replaced. The Company's obligation under the warranty is to replace or repair defective parts at our discretion. Any expenses or damage resulting from the installation, removal or transportation of the product will be the responsibility of the owner and are not covered by this warranty. The owner assumes all other risks arising from the use or misuse of the product. The warranty will be void if the product damage or failure is deemed by the Company to be caused by accident, alteration, misuse, abuse, incorrect installation or removal, or connection to an incorrect power source by the owner. The Company neither assumes, nor authorizes any person or entity to assume for it any obligation or liability associated with its products. Light bulbs and fuses are not covered under this warranty. If you have any questions regarding the warranty or service, please contact us at **customercare@jrhome.com**.

Customer Service :
JR Home Products
Unit 306 - 19100 Airport Way, Pitt Meadows, BC V3Y 0E2
Toll Free : 1-800-561-5550
E-mail : **customercare@jrhome.com**

AVERTISSEMENT

Ce produit a été soigneusement inspecté, testé et emballé afin de minimiser les risques de dommages durant le transport. Si l'une des pièces (à l'exception des verres, des ampoules électriques et des fusibles*) s'avère défectueuse au niveau de sa fabrication ou de ses matériaux dans l'année qui suit la date de l'achat suite à une utilisation normale, la pièce sera réparée ou remplacée. La compagnie est tenue de réparer ou remplacer les pièces défectueuses à sa discrétion, en vertu de la garantie. Tous frais ou dommage résultant de l'installation, du démantèlement ou du transport du produit demeurent la responsabilité du client et n'est pas couvert par cette garantie. Le client assume tout autre risque résultant de l'utilisation correcte ou fautive du produit. La garantie devient nulle si la compagnie détermine que le dommage ou le mauvais fonctionnement est causé par un accident, une modification, une mauvaise utilisation, un abus, une mauvaise installation ou un mauvais démantèlement ou un branchement à une source électrique inadéquate de la part du client. La compagnie n'est pas responsable et n'autorise quiconque, personne ou entité légale, à accepter de responsabilité ou obligation en son nom, en rapport avec ses produits. * Les ampoules électriques et les fusibles ne sont pas couverts par cette garantie. Pour toute question au sujet de la garantie ou du service, contacter le service à la clientèle à : **customercare@jrhome.com**.

Service à la clientèle:
JR Home Products
Unit 306 - 19100 Airport Way, Pitt Meadows BC V3Y 0E2 Numéro sans frais: 1-800-561-5550
Courriel: **customercare@jrhome.com**

You MUST register your product within 30 days of purchase to receive warranty service.

Registration can be completed online at www.jrhome.com or by mailing this form.

Vous DEVEZ enregistrer votre produit dans les 30 jours suivant l'achat pour bénéficier du service de garantie.

L'enregistrement sera complet une fois que vous aurez posté ce formulaire ou que vous serez inscrit en ligne.

Warranty Registration Information Form / Formulaire d'enregistrement de la garantie

Name / Nom : _____

Street / Adresse : _____

City / Ville : _____

Province / Province : _____

Postal Code / Code postal : _____

Daytime Phone # / No téléphone jour : _____

Evening Phone # / No téléphone soir : _____

E-Mail Address / Courriel : _____

Product/Produit : _____

Place of Purchase / Lieu de l'achat : _____

Date of Purchase / Date de l'achat : _____

Model # / No de modèle : _____

Serial # / Numéro de série : _____

You MUST register your product to receive warranty service.

For warranty service, contact J&R Home Products at the address, phone numbers listed below within 30 days of purchase. Be sure to have your sales receipt and original date of purchase. All warranty service will be coordinated by J&R Home Products service center.

Vous DEVEZ enregistrer votre produit pour vous prévaloir de la garantie.

Afin de faire valoir la garantie, communiquez avec J&R Home Products à l'adresse et aux numéros indiqués ci-dessous dans les 30 jours suivant la date d'achat. Ayez en main votre reçu et la date d'achat. Toutes les demandes liées aux garanties seront traitées par le centre de service de J&R Home Products.