

# CARING INSTRUCTIONS

## Before you clean:

Always use wet or at least damp tools for cleaning

To remove dust and dirt particles, a cloth or soft sponge dampened with clean, clear water is sufficient.

We recommend using fine chamois leather, soft cloths, microfiber cloths or sponges to avoid damage to the surface of the suitcase.

## How to remove dirt and sticky residue:

Apply *Isopropanol* to a microfiber cloth and gently rub the area until clean.

### TIPS:

Isopropanol can be found at your local drug store.

Stickers can also be removed by applying a short blast of hot air at a maximum temperature of 80° Celsius. You can use a hair dryer and shake over area. Do not hold the blow dryer still over an area, left still over an area for an extended amount of time could cause the polycarbonate to heat up and disfigure. Residue from soap can also be cleaned with the Isopropanol.

## NOTICE

This suitcase is designed to carry clothes and personal possessions. It is not made to sit or stand on.

Keep the case away from small children. They could accidentally lock themselves inside. Keep in mind the case can become very heavy when filled.

Pay attention that your hands or clothes do not get caught when closing the case.

Pay attention not to put your fingers in the holes of spaces around the bars of the handle.

Use the main or side handle when lifting the suitcase. Do not use the telescopic handle to lift the case as it might break.

This case is not designed to protect valuables. The lock is to prevent unwanted opening, not prevent the suitcase itself from being stolen.

As the case can be lost, you should keep valuables in your possession, not in the suitcase when you check in.

Avoid placing the case on an unstable surface, as this could cause it to fall over or inadvertently move. Laying the suitcase on its side will prevent it from rolling away inadvertently.

Pay attention no to put glass bottles, or other containers of liquids in the suitcase as that could result in damage to the contents.

Pay attention to keep the casters free of string, hair or pebbles that could damage them.

Pay attention to not overfill the suitcase, as it may spill over the edge when closing and damage the frame structure.

Do not use the casters on stairs or stepped surfaces

Keeping the suitcase in hot places such as near a stove, open flames or in a car can result in the deformation of the shell

Store away from direct sunlight and heat

Do not store the suitcase in too high alkaline, acidic, or moist environment, as it could cause damage.

The suitcase is not waterproof. Water seeping in can damage the interior and contents of the suitcase. Take steps to prevent this happening when it rains. If the interior should get wet, wipe it with a towel and leave it to dry in a shady place.

Specifications are subject to change without notice in order to improve the product.