

# HOW TO: start KVANT laser display system

**KVANT**<sup>®</sup>

## 1. Connect the system



**A:** To control the system with an external signal such as Ethernet, DMX or ILDA, plug the corresponding cable into its designated connector at the back of the unit.



**B:** Connect the Emergency STOP Remote to the socket labelled as REMOTE INPUT with a supplied 3-pin XLR cable.



**C:** Insert the Remote Interlock Bypass dongle to the E-STOP Remote *(the USA only)*.



**D:** Use supplied Neutrik powerCON TRUE1 power cable to connect the laser system to mains power supply using the INPUT connector.

## 2. Insert safety keys



**A:** Turn laser system safety key to ON position.



**B:** Turn E-STOP Remote key to ON position.

## 3. Disable the Interlock



**A:** Release the E-STOP button by pulling it upwards.



**B:** Press the START button on the E-STOP Remote.



**4. After the Emission Delay Period, the laser projector will be ready to start the emission.**