

DUO INDOOR BIKE PEDALS

IMPORTANT NOTES

Carefully read these instructions before installing and using this product. Always ensure pedal axles are tightly secured to crank arms before each ride. Loose, worn or damaged parts may lead to injury.

WARNING Clip-in pedals can be dangerous if used incorrectly, used with incompatible shoes or cleats, or not maintained properly. If you have never used clip-in pedals before, read instructions and take time to learn how to use them safely.

1. Clip-in pedals are compatible only with purpose-built cycling shoes.
2. You may also need to read the instructions that came with your cycling shoes.
3. Cleats compatible with Shimano SPD and Look Delta are included.
4. Only use cleats compatible with Shimano SPD and Look Delta with the pedals. The use of non-compatible cleats may be unsafe, and will void warranty.
5. This pedal is for indoor bike use only.

MAINTENANCE

1. Pedals should be maintained if: rotating pedal emits noise, rotation by hand feels rough.
2. Bearings should be cleaned and regreased once needed.
3. Damaged bearings or play in the bearings should be replaced.
4. Damaged pedals should be replaced.
5. Before each ride, ensure cleats are secured tightly to shoe soles.
6. To function properly, pedals and cleats must be kept free of debris and reasonably clean.
7. If pedals have exposed binding springs, lightly lubricate springs occasionally.
8. Minimize walking in cleated shoes as this accelerates wear.
9. Lubricate cleat bolts occasionally to prevent from rusting and seizing.
10. Cleats should be replaced when they are badly worn, loose in pedal binding, or difficult to disengage.
11. Indoor bike pedal is suggested to be replaced every year.

1 YEAR WARRANTY

This product is covered by warranty under normal usage against defects in workmanship and materials to the original purchaser for one year from purchase date.

1. This warranty does not cover any incidental or consequential damages, such as personal injury or any other losses due to accident, neglect, misuse, abuse, modification, normal wear and tear, improper assembly or maintenance.
2. When returning a defective product for warranty purposes, the claimant must provide proof of purchase and a written description of damages.
3. There are no other warranties implied.



THANK YOU FOR YOUR PURCHASE.

We are committed to your satisfaction. If you are not happy with your purchase or need help, please contact us at info@marquecycling.com and we will make it right for you.

FOLLOW US!

To receive awesome deals and information on all the latest products from MARQUE Cycling, sign up for our newsletter at marquecycling.com, or follow us at :



INSTRUCTIONS

MARQUE Duo indoor bike pedals have a Delta-system binding on one side and a SPD-system binding on the other side. The two systems are not compatible with each other.

Please refer to below corresponding instruction for your cleat/shoes system.

PARTS & TOOLS

 
 
PARTS INCLUDED		TOOLS NEEDED
Pedal x 2 (Left & Right)	SPD cleats x 2 (black)	4mm Allen key
Delta cleats x 2 (red)	SPD cleat washers x 2	3mm Allen key
Delta cleat washers x 6	SPD cleat mounting bolts x 4	15mm open end wrench
Delta cleat mounting bolts x 6		

MOUNTING THE PEDALS ON THE CRANK ARMS

1. The right pedal (marked R) is installed in a clockwise direction. The left pedal (marked L) is installed in a counter-clockwise direction.
2. Thread axle into the crank hole with your fingers. Use 15mm open end wrench to tighten pedal (15mm open end wrench is not included).
3. Tighten well but avoid excessive force.



PEDAL TENSION ADJUSTMENT

- 1 Use a 3mm Allen key to adjust the tension on the pedal to fit your cleated shoes (3mm Allen key is not included).
- 2 To increase the tension, turn the adjuster clockwise (for securer shoe/pedal bind, but more difficult to engage and disengage).
To decrease the tension, turn the adjuster counter-clockwise (for less secure shoe/pedal bind but easier to engage and disengage).
- 3 Binding tension should be equal on both pedals to achieve a uniform effect when engaging and disengaging cleated shoes. Minimum tension is recommended for beginners and for rides requiring frequent cleat disengagement.
- 4 Do not over-tighten or over-loosen tension adjuster (over tightening may damage thread, and bolt may fall out if too loose).
- 5 Binding tension adjustment range: 7.8-13.7Nm (69.0-121.2 in-lb)

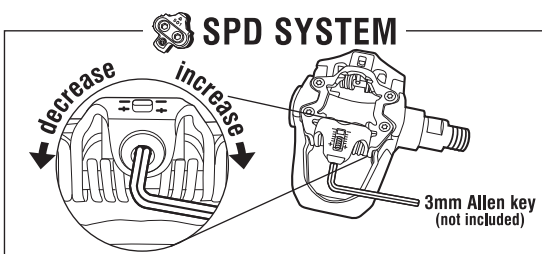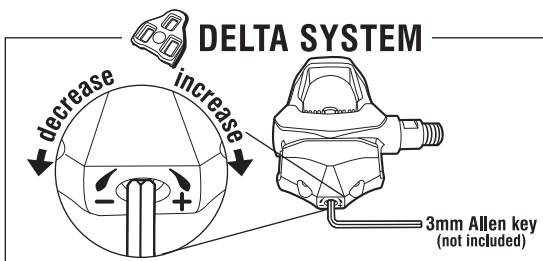

CLEAT INSTALLATION

  - 1 Left and right cleats are identical- the pointed end faces the toe of the shoes.
- 2 The lateral center line of the cleat should be aligned with the center of the ball of the shoe sole.
- 3 Adjust cleats to the best position and tighten all cleat mounting bolts properly with 4mm Allen key (4mm Allen key is not included). Tightening torque : 4.9-7.8Nm (43-69 in-lb)

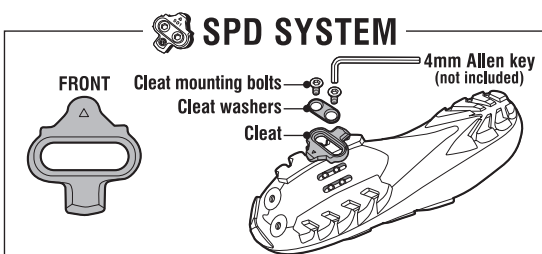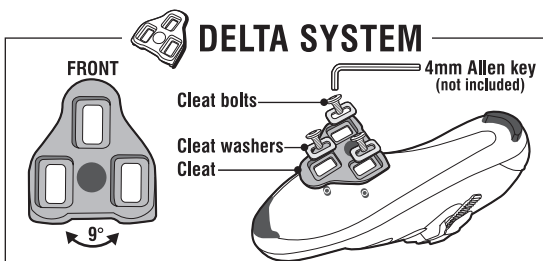

ENGAGING AND DISENGAGING THE CLEATED SHOES

- 1 To engage the cleated shoes into the pedal, aligning the cleat between front and rear bindings while pushing down. To disengage the cleated shoes from the pedal, twisting heel outwards away from the indoor bike.

