

PTAC KEY LOCK KL03E INSTALLATION INSTRUCTIONS


WARNING

INSTALLATION AND REPAIR OF THIS UNIT SHOULD BE PERFORMED **ONLY** BY INDIVIDUALS MEETING (AT A MINIMUM) THE REQUIREMENTS OF AN "ENTRY LEVEL TECHNICIAN" AS SPECIFIED BY THE AIR-CONDITIONING, HEATING, AND REFRIGERATION INSTITUTE (AHRI). ATTEMPTING TO INSTALL OR REPAIR THIS UNIT WITHOUT SUCH BACKGROUND MAY RESULT IN PRODUCT DAMAGE, PERSONAL INJURY OR DEATH.

CAUTION

UNDERWRITERS LABORATORIES INC.® LISTED. FOR INSTITUTIONAL USE ONLY WHERE SUPERVISORY MONITORING IS AVAILABLE. ANY OTHER USE MAY INCREASE THE RISK OF PERSONAL INJURY OR PROPERTY DAMAGE.

Description: The Key Lock kit prevents tampering of the controls used to set temperatures and heating or cooling functions.

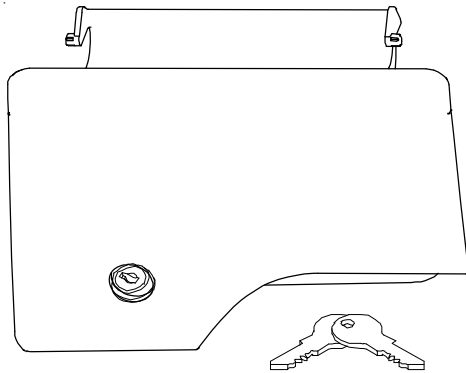

Key lock Assembly

1. Grasp the cabinet front and pull the bottom of the cabinet away from the chassis until the retaining clips disengage. See Figure 1.

NOTE: If front is secured with a screw, remove front mounting screw, then follow removal procedure.

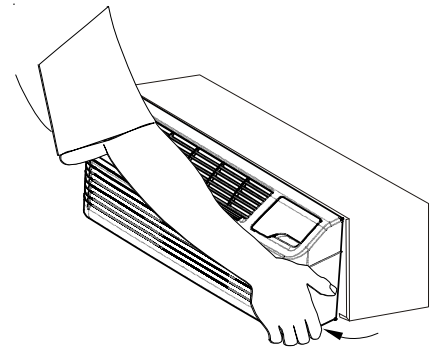


Figure 1

2. Gently disengage the original control door from the door slots on the top of the front cover, and discard door. See Figure 2.

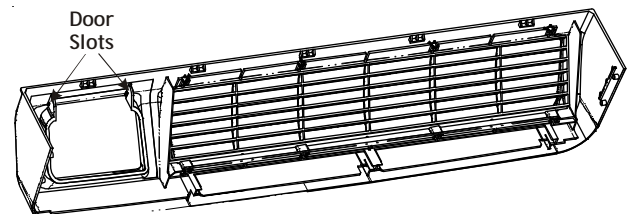


Figure 2 - Back of Cabinet

3. Insert the key lock door assembly in the housing slots.

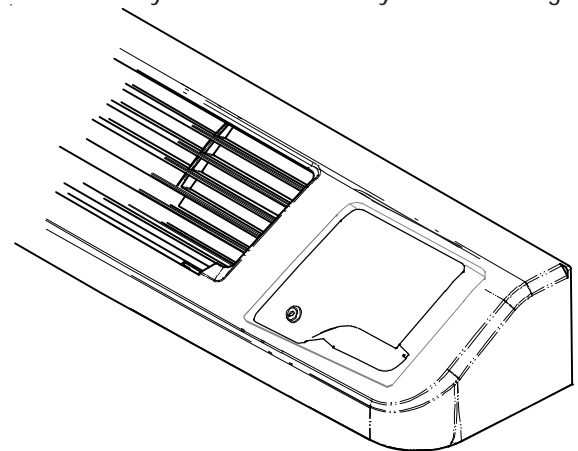


Figure 3

4. Re-attach cabinet front to chassis.

August 2010
IO-750

Goodman Company, L.P.

5151 San Felipe, Suite 500 • Houston, TX 77056

www.amana-ptac.com • © 2010 Goodman Company, L.P.



is a registered trademark of Maytag Corporation or its related companies

and is used under license to Goodman Company, L.P., Houston, TX. All rights reserved.

Due to policy of continued product improvement, the right is reserved to change specifications and design without notice.

