



3 Water End Barns,
Eversholt,
MK17 9EA
+44 (0) 1525-280907
info@tibo-audio.com

BOND



CE RoHS 

 Wi-Fi

SMART[®]
AUDIO 





3 Water End Barns,
Eversholt,
MK17 9EA
+44 (0) 1525-280907
info@tibo-audio.com

Bond – User Guide v 1.0

Table of Contents:

Introduction.....	Page 2
Equipment list.....	Page 3
App download.....	Page 3
Operation.....	Page 4-5
Troubleshooting.....	Page 5
Safety instructions.....	Page 6
Specification.....	Page 6

Introduction

Thank you for purchasing the TIBO Bond unit. We hope that your experience with the Bond will be enjoyable for many years to come. Your unit will be as good as the system it is connected to. The Bond is a wireless music receiver for streaming music that turns speakers, amplifiers and home theatre into a multi-play and multi-place digital music system. Bond supports audio streaming from smartphone, tablets and desktops. Please do not compromise on your amplifier and audio cabling. We recommend amplification from the TIBO range, which has been designed to ensure you get the highest sound quality for value of money. We also recommend you purchase excellent quality speaker cables to ensure your system reaches its full potential. The specialised iOS and Android app offers a simple yet great experience for your music streaming and multi-room set up.

The Spotify software is subject to third party licenses found here: <https://developer.spotify.com/esdk-third-party-licenses/>





3 Water End Barns,
Eversholt,
MK17 9EA
+44 (0) 1525-280907
info@tibo-audio.com

Equipment list:

TIBO Bond unit

 
Micro USB charge cable (Note – Charge port is compatible with Android devices.)

3.5mm jack to jack cable

Quick start guide

Rear side of Bond box

1. WPS button
(Press to connect to Wi-fi)
2. Line out - 3.5mm stereo output
(Use port to connect the Bond to any Hi-fi system with 3.5mm stereo input)
3. USB DC in
(Power supply for the Bond)

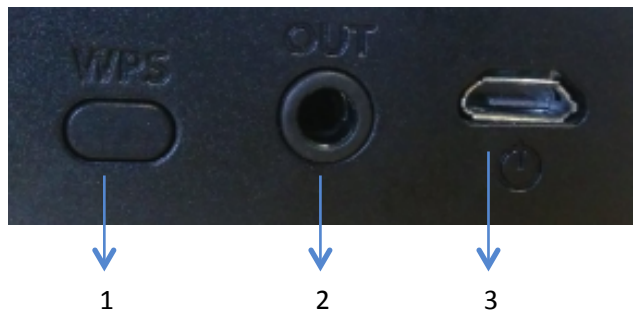

App Download

To use the TIBO system, please download the free TIBO app from the app store or play store.

 




3 Water End Barns,
Eversholt,
MK17 9EA
+44 (0) 1525-280907
info@tibo-audio.com

Operation

1 – To activate the Bond, plug the Micro USB end of the charge cable into the Bond and the USB end into a power source. When activated, a blue light should light up on the front of the Bond.

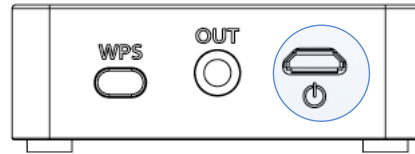

2 – Open the TIBO app on your Android or Apple device. (See separate manual on setting up the TIBO app.)

3 – Once opened, if your TIBO app has no devices connected to it, the screen should look like this. (See right) Click on 'Add Device' at the bottom of the page.


- Make sure your wireless device is **powered on**
- Make sure your wireless device is **on the same network** as your phone or tablet
- If no devices are found, tap the **Add Device** button below

Add Device

4 – The app should now be searching for devices. A message will appear prompting you to press the WPS button on the Bond, this is located on the rear of the unit. Press this to link the Bond with the Wi-fi.





Press the WPS button to configure network

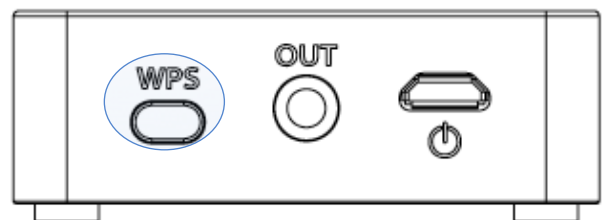




3 Water End Barns,
Eversholt,
MK17 9EA
+44 (0) 1525-280907
info@tibo-audio.com

  5 – After you have pressed the WPS button, click the ‘next’ button on the app, (located top right) type in your Wi-fi password and press connect. The Bond should now appear on your ‘Device List’ within the TIBO app. (See right)

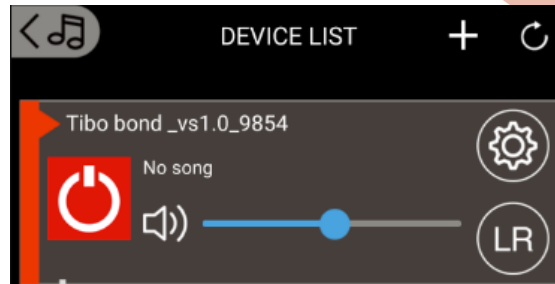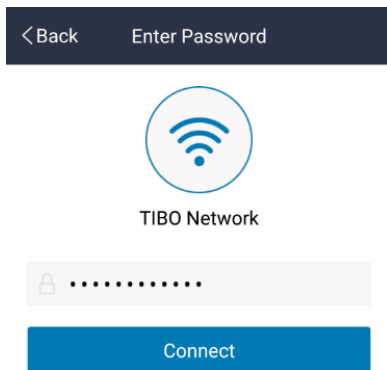


 6 – Connect one end of the 3.5mm cable to the Bond line out. Then connect the other end of the cable to any stereo Hi-fi system that you desire that includes a 3.5mm line in input.

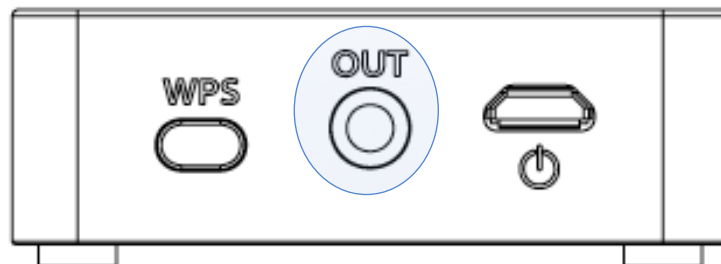

If your Hi-fi system only has a 6.3mm input, you will need to purchase a separate adapter to connect the 3.5mm input.

7 – You should now be able to play music via the TIBO app through your Hi-fi system. Click the music icon in the top left corner of the ‘Device List.’ You can play music from your source, TuneIn radio, Spotify etc.

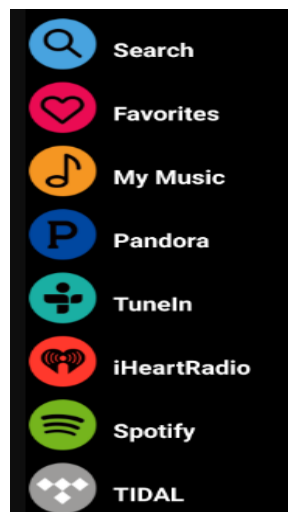




3 Water End Barns,
Eversholt,
MK17 9EA
+44 (0) 1525-280907
info@tibo-audio.com

8 – The ‘Device List’ page in the TIBO app displays every TIBO smart product that is connected to the Wi-fi. To connect other TIBO smart products with your Wi-fi, follow the same procedure of steps 2-6.

 9 – In order to play music through additional TIBO smart products at the same time as your own Hi-fi system, simply group the TIBO smart audio products in the app to the Bond. You can do this by clicking and dragging the other smart audio products on top of the Bond unit in the app. Your ‘Device List’ page should now look something like this. (See right)

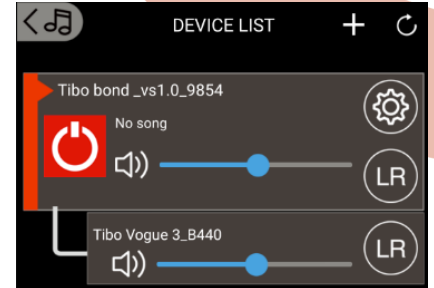

Troubleshooting

Problem	Possible Cause
No power	- The Micro USB charge cable is not connected properly.
No sound	- The speakers are disconnected. - Volume control is at lowest level. - The 3.5mm jack is not inserted properly.
Suddenly no sound during operation	- Speakers may have been disconnected from Wi-fi - The product may have entered overheat protection mode. - Charge cable or 3.5mm jack disconnected
Bad sound/Sound distorted	- Audio source problem. - Bad or incorrect speaker connections.
Product dropping in and out of Wi-fi	- Wi-fi speed - Product too far away from router
Cannot connect to router	- Ensure router is dual band, as TIBO products only connect with 2.4GHz and NOT 5GHz



3 Water End Barns,
Eversholt,
MK17 9EA
+44 (0) 1525-280907
info@tibo-audio.com

Safety Instructions

- To reduce the risk of fire or electrical shock, do NOT expose the product to rain or moisture.
- The product should not be exposed to any dripping or splashing liquid.
- Objects containing liquid should not be placed on or near the product.
- Do NOT pull/push the charge cable or 3.5mm cable excessively and take care not to let each cable become pinched, particularly at or near the ends of each cable.
- Keep the product well away from heat sources such as stoves, heat registers or other appliances that produce heat.
- Avoid direct sunshine on product. Do NOT operate product in a sealed box and be sure to have enough room for heat exchange.
- Avoid opening the bottom of the product. Do NOT open the bottom, re fix or touch the inner parts, refer to our customer service for advice.

Specification

Product name	Bond
Power supply	Charge cable – Micro USB
Max output power	DC 5V
Frequency response	N/A
Impedance	N/A
Dimensions	55 x 55 x 19.7mm
Weight	0.35kg
Sound resolution	N/A