

TIBO




Choros 4 and 6 – User Manual

Contents

- Safety Information
- Introduction
- First time speaker setup
- Wi-Fi mode
- Solo mode and group mode
- Using the pre-set functions
- Bluetooth mode
- Line In mode
- Additional Information
- Troubleshooting
- Specifications

• Safety Information


Do not share the power socket with another appliance.

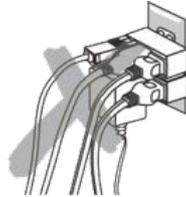

Do not disassemble or attempt to repair the appliance on your own.



If you are not using the appliance, pull the power cord out of the mains socket.

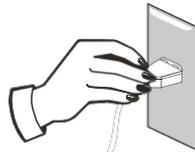

Be careful of the power cord and maintain it as appropriate.

To ensure safety, do not twist the power cord, do not pull it out of the socket, do not compress it or stretch its length.



Do not use the appliance if the supply voltage is lower than 90V or higher than 240V.

If the supply voltage is lower than 90V, the appliance may not work and its lifetime may be affected. If the voltage is higher than 240V, the appliance may catch on fire or cause a fire.

AC 90-240V

Do not wash the appliance or use it in the bathroom, or it may cause potential injuries and other problems.



Installation location

Leave sufficient space around the appliance of at least 5 cm from any wall/obstacle to ensure proper ventilation and prevent the appliance from overheating.

The following places are not suitable installation locations for the appliance:

- An unstable location
- A location near a heat source or in direct sunlight.
- In a wet or dusty environment

Warning

To prevent suffering an electrical shock or another accident, do not operate the appliance in a rainy or humid environment.

Cleaning and maintenance

Use a soft cloth or cotton dipped in a neutral solution for cleaning the surface of appliances. Do not use the type of cloth that you use for washing dishes or aggressive chemical agents.

Before moving the appliance

Before moving the appliance to a different location, please take the disc out of the appliance so that the disc and appliance will not be damaged.

Storm

If the appliance is not working properly during a storm, please disconnect the plug from the power socket and reinsert it after a minute.

Do not drop small items or a liquid into the appliance

In the event that you find small items or a liquid inside the appliance, you see smoke or smell an odour, immediately disconnect the appliance from the power grid. Send the appliance to an authorised service centre.

Repacking the appliance

When sending the appliance by a transport company, use the original packaging to prevent its damage during transport.

- Introduction

Thank you for purchasing the TIBO Choros 4/6 speaker. We hope that your experience with the Choros 4/6 will be enjoyable for many years to come.

The Choros range is a family of smart speaker systems. They are able to connect to one another utilising the latest in exclusive Smart Audio software to deliver a high quality, crisp sound. Designed with motion in mind, you can play whatever and wherever you feel.

Wirelessly connect your mobile phone, tablet or other Wi-Fi/Bluetooth device. The specialised iOS and Android app offers a simple yet great experience for your music streaming and multi-room set up.

The Spotify software is subject to third party licenses found here:
<https://developer.spotify.com/legal/third-party-licenses/>




- First time speaker setup

In the box

- Choros 4/6 speaker
- Standard UK plug
- Standard EU plug
- Quick start guide
- Setup warning

Top panel layout

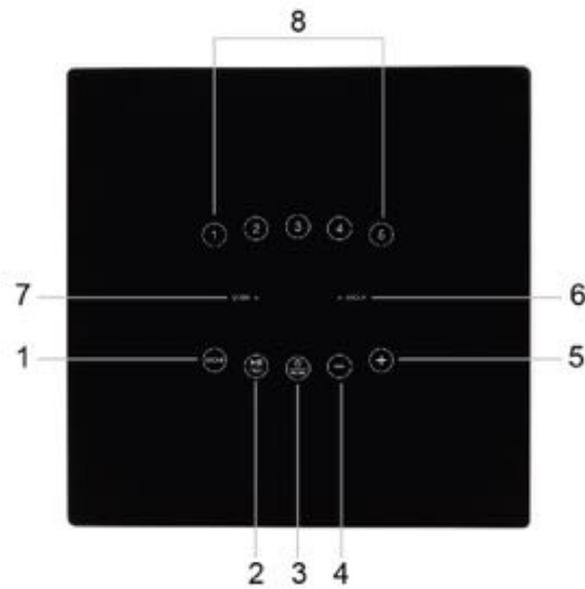

1. Group indicator
2. Play/Pause/Pair
3. Power/Mode indicator
4. Volume down
5. Volume up
6. Group light: (White light in multi speaker group mode)
7. Mode light: (Red light in Wi-Fi mode)
(Blue light in Bluetooth mode)
(Green light in Line In mode)
8. Pre-sets 1-5

Rear panel layout



1. Power cable port
2. WPS button
3. Line in (3.5mm audio stereo input)
4. Power switch
5. USB out

Initial setup steps

- 1) Connect the power cord to the port on the rear of the Choros 4/6.
- 2) Then turn on the power switch at the rear of the Choros 4/6.
- 3) The Choros 4/6 will respond by saying "Power on, powering up for the first time, please wait."
- 4) Do not do anything until the Choros 4/6 has finished booting up. The Choros 4/6 will say "Ready for app setup" when boot up is complete.

App download

The TIBO app helps you get setup for the first time, and helps get the most out of your speaker's functions. The app is compatible with iOS and Android smartphones, and can be downloaded for free on Google Play or in the App Store.




With the TIBO app you can:

- Browse and connect to over 15000 internet radio stations
- Select a sound source
- Manage Multi Mode groups
- Set up, modify, and play your pre-sets
- Check what song or other media is currently playing
- Adjust individual and multi-room volume settings
- Rename your speaker
- Adjust panning
- Add more speakers

- Wi-Fi mode

Wi-Fi mode setup

- 1) Turn on the Choros 4/6 by pressing and holding the power button until the mode light turns on. Then short press the mode button until the speaker replies with “Wi-Fi mode.” (The mode light will turn red)
- 2) Open the TIBO app on your Android or iOS device and follow the instructions on screen.
- 3) Once opened, if your TIBO app has no devices connected to it, the screen should look like this. (See below) Click on ‘Wi-Fi Setup Wizard’ at the bottom of the page.

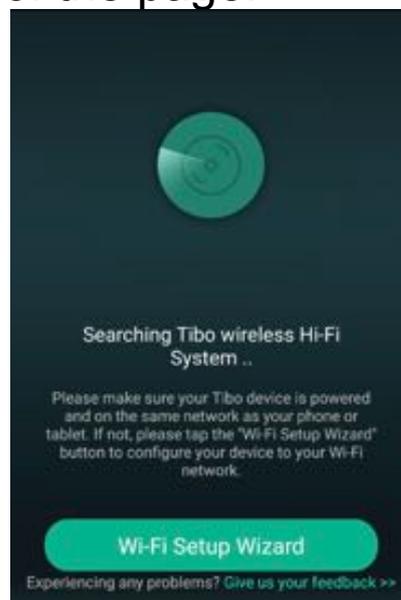

- 4) Make sure you're connected to 2.4G Wi-Fi as TIBO Smart Audio products are only compatible with 2.4G Wi-Fi. Then press 'Next'.




- 5) Find your Wi-Fi network, type in your password and then press 'Next'.



- 6) Press the WPS button on the rear of the Choros 4/6. The speaker will respond by saying "Searching for Wi-Fi connection." Then press 'Next'




7) Then wait for the Choros 4/6 to connect to your Wi-Fi. When connected, the Choros 4/6 will respond by saying “Wi-Fi connected. Then press ‘Next.’”

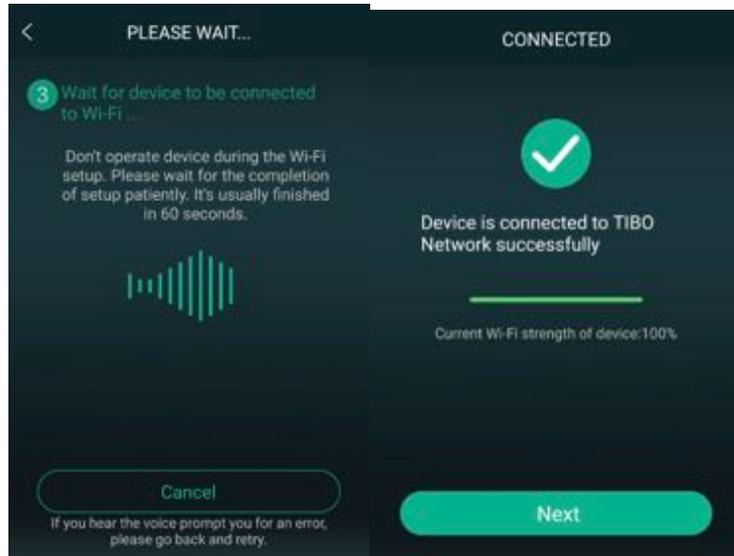

8) You can now name your Choros 4/6 speaker within the app. Either select from the list of pre-set options or click on custom to set your own name. Then press ‘Finish.’




9) Your Choros 4/6 will now appear on your 'Device List' within the app. To add more devices, press the 'cross' icon in the top right of the screen.

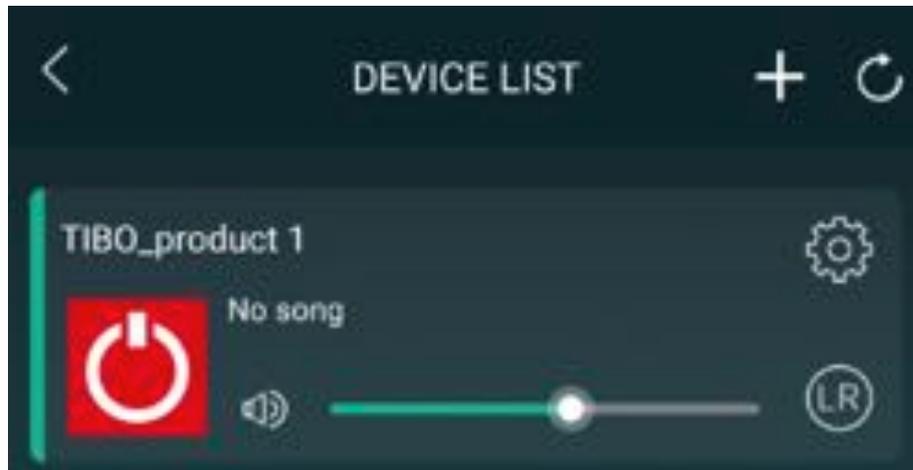

Playing music via Spotify

1. Play some music in Spotify.
2. Click on 'Devices Available' at the bottom of the screen on Spotify.

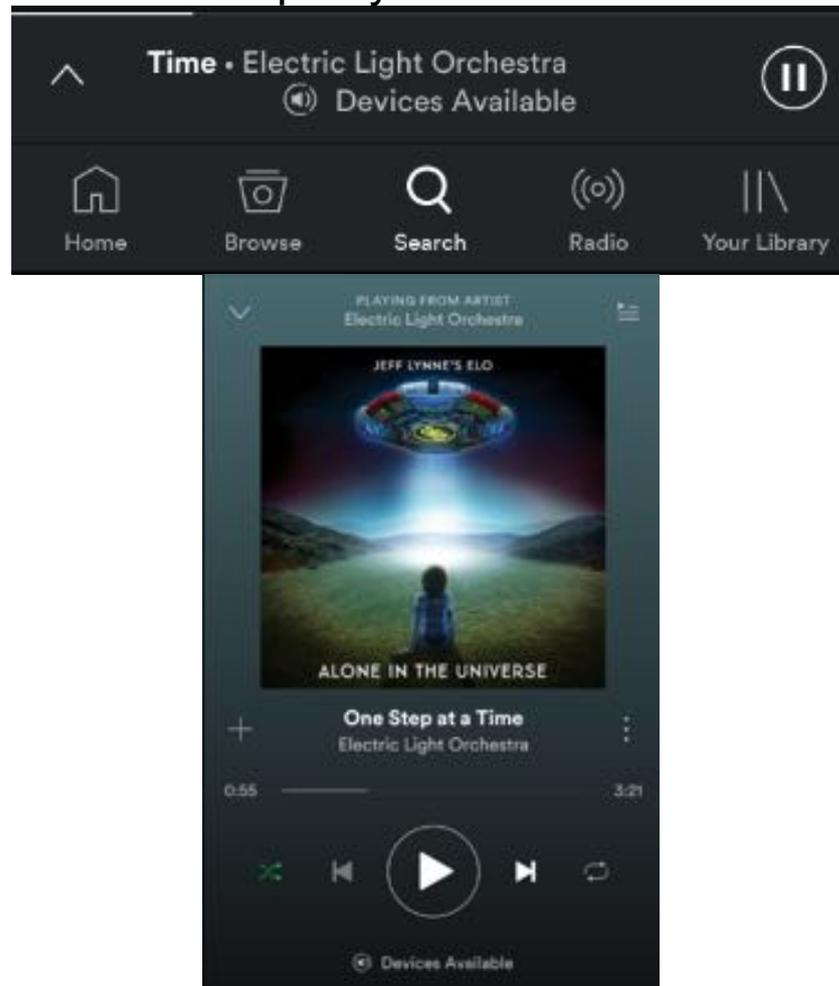

3. Find your Choros 4/6 on the list and connect.




Playing Internet Radio and My Music




Swipe left and right to navigate between each page of the app. Click on 'My Music' to play music from your device or click 'TuneIn' to search for thousands of internet radio station.

- Solo and Multi mode

- 1) In order to use this setting, you will need a minimum of 2 TIBO Smart Audio products. These can be any TIBO Smart Audio products. Press the cross icon in the top right corner to add more devices to your Wi-Fi.

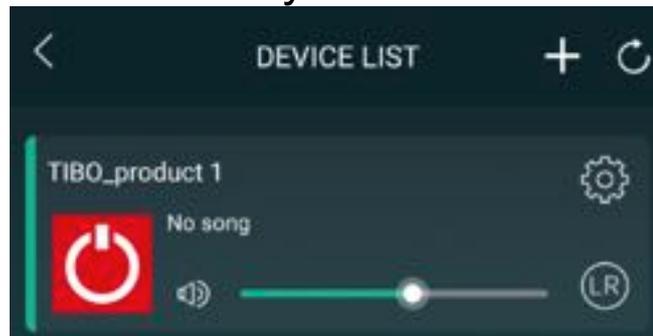


- 2) To group speakers together, simply press and hold one of the speakers within your 'Device List' and drag it on top of another speaker.

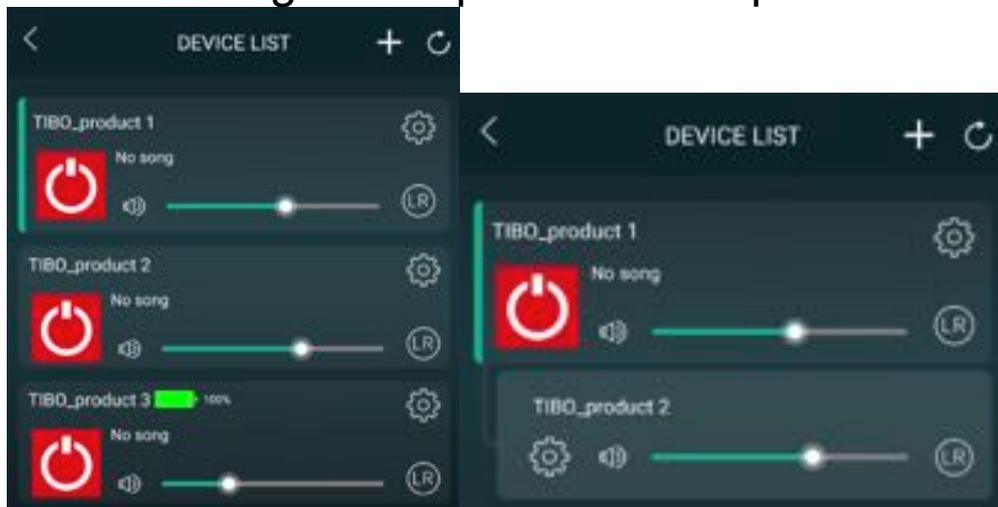

- 3) When grouped together, the Choros 4/6 will respond by saying "group mode." There will also be a white line on the app to show the connection of grouped speakers. You can group up to a maximum of 16 Smart Audio products together.

- Using the pre-set functions


1) On the main menu of the TIBO app, click on TuneIn and search for the radio station that you'd like to save as a pre-set.

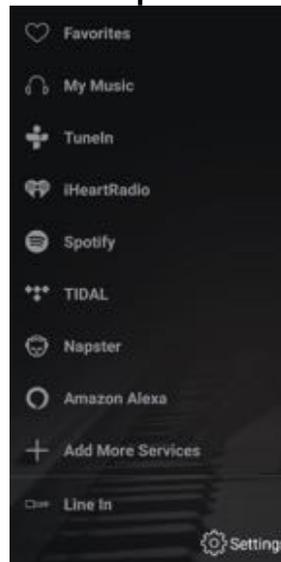

2) Next to all the radio stations you will see a speaker icon on the right of the screen.



- 3) Click on the speaker icon to open the pre-set content. Then click on any of the pre-sets 1-5 to save a radio station as a pre-set. The Choros 4/6 will respond by saying “pre-set saved.”

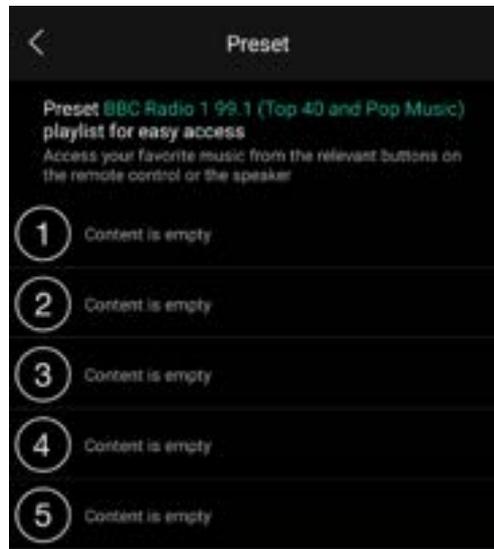

- 4) Press the corresponding number button on the Choros 4/6 to recall the pre-set.

- **Bluetooth mode**


- 1) Hold the power/mode button to turn on. If performed correctly, speaker will respond by saying "Power on." The speaker will then tell you what mode is currently activated. E.g Wi-Fi mode.
- 2) Short press the mode button until the speaker responds saying "Bluetooth mode." The mode light will also turn blue.
- 3) Enable the Bluetooth setting on your source and your source will then automatically search for nearby Bluetooth devices.
- 4) When 'TIBO Choros 4/6' appears on your list 'available devices,' click to pair your source with the Choros 4/6. When connected, the speaker will respond saying "Bluetooth connected."
- 5) You can now play music to the Choros 4/6 via your source, Spotify etc.

- **Line In mode**

- 1) Whilst the Choros 4/6 is turned off, connect a 3.5mm jack cable to the 'Line in' port at the rear of the speaker and the other end of the cable to your Android/iOS device. This is to avoid speaker pop when the speaker is turned on.
- 2) Hold the power/mode button to turn on. If performed correctly, speaker will respond by saying "Power on." The speaker will then tell you what mode is currently activated. E.g Wi-Fi mode.
- 3) Short press the mode button until the speaker responds saying "Line In mode." The mode light will also turn green.
- 4) You can now play music to the Choros 4/6 via your source, Spotify etc.

- **Additional Information**

- 1) **Software updates:** Every so often you may have the opportunity to update the software. This is due to new functions and improved performance. A red 'update' box will appear next to the 'settings' icon on the TIBO app when there are updates available.

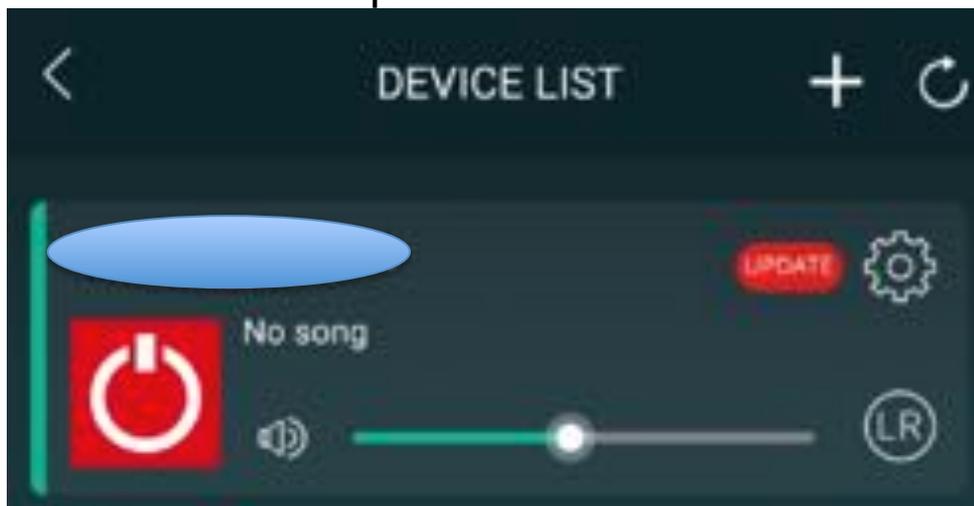

- 2) **Factory reset:** Pressing the WPS button will make the Choros 4/6 search for a Wi-Fi connection. However if you HOLD the WPS for 5 seconds, the Choros 4/6 will restore itself to factory settings.

• Troubleshooting

Problem	Possible Cause
No power	<ul style="list-style-type: none"> - Power switch is off at the back of the speaker. - Power cord loose
No sound	<ul style="list-style-type: none"> - The speakers are disconnected. - Volume control is at lowest level. - The 3.5 mm jack is not inserted properly.
Suddenly no sound during operation	<ul style="list-style-type: none"> - Speakers may have been disconnected from Wi-Fi/Bluetooth. - The product may have entered overheat protection mode. - 3.5mm jack disconnected
Bad sound/sound distorted	<ul style="list-style-type: none"> - Audio source problem. - Bad or incorrect speaker connections.
Product dropping in and out of Wi-Fi	<ul style="list-style-type: none"> - Wi-Fi speed - Product too far away from router
Cannot connect to router	<ul style="list-style-type: none"> - Ensure router is dual band, as TIBO products only connect with 2.4GHz and NOT 5GHz
Product dropping in and out of Bluetooth	<ul style="list-style-type: none"> - Source is too far away from speaker - Bad Bluetooth signal from source

• Specifications

Product name	Choros 4
Power supply	AC 100-240V
Max output power	27W
Frequency response	100Hz – 20kHz
Impedance	4ohms
Bluetooth range	10 meters
Dimensions	140 x 225 x 140mm
Weight	1.9kg
Sound resolution	24 bit/192kHz

Product name	Choros 6
Power supply	AC 100-240V
Max output power	60W
Frequency response	80Hz – 20kHz
Impedance	4ohms
Bluetooth range	10 meters
Dimensions	200 x 280 x 200mm
Weight	3kg
Sound resolution	24 bit/192kHz

The Bluetooth® word mark and logos are registered trademarks owed by Bluetooth SIG Inc. and any use of such marks by TIBO is under license. Other trademarks and trade names are those of their respective owners.