



# HD MP3 and Digital Voice Card Recorder User Guide

**\*Please Read Carefully Before Use\***

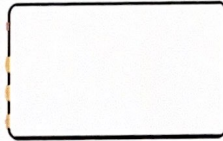

## Buttons and Functions

- ① “+” Button: Next Song / Volume Increase (Press and hold) / Noise Reduction
- ② “-” Button: Play Mode Switch / Volume Decrease (Press and hold) / Auto Record
- ③ Power Switch, Rec/ Save
- ④ Button: Play/Mode Switch
- ⑤ USB / Charging / Headphone Port
- ⑥ Indicator Light

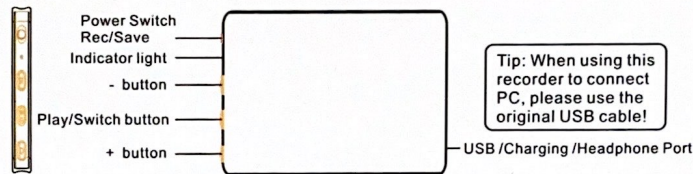

## Instructions

**POWER ON / OFF:** move Power Switch to “ON” (will start recording) and “OFF” position.

**HOW TO RECORD:** move Power Switch to “ON” position, the Indicator Light will turn red and blink 3 times, then the device will start recording.

**\*Note: the device cannot record if headphone is plugged in.**

**HOW TO SAVE RECORD FILE:** when recording, move Power Switch to OFF position, the Indicator Light will turn red and blink 1 time before go off, then the record file is automatically saved.

**HOW TO PLAY RECORD FILE / MUSIC FILE – PLAY MODE:** plug in headphone into Headphone Port and Power ON, the device will enter Play Mode and play your record file; press Play/Switch button can switch to Music Mode to play your MP3 music file.

**\*Note: the device can only play record / music file when headphone is plugged in; you can also view, play, copy record / music file when connect to PC**



## Instructions

**HOW TO PLAY NEXT RECORD / MUSIC FILE:** when playing in Play Mode, press “+” button will play the next record / music file.

**HOW TO PLAY PREVIOUS RECORD / MUSIC FILE:** when playing in Play Mode, press “-” button will play the previous record / music file.

**VOLUME + / - :** when playing in Play Mode, press and hold “+” button to increase volume, press and hold “-” to decrease volume.

**CHARGING:** move Power Switch to “OFF” position and connect the device to power adapter or computer to charge. The Indicator Light will keep blinking until the device is fully charged.  
**\*Note: please power off the device before charging.**

**NOISE REDUCTION:** move Power Switch to “ON” position, then press and hold “+” button until the red Indicator Light goes off will enable Noise Reduction.



### Instructions

**AUTO RECORD:** move Power Switch to "ON" position, then press "-" button until the red Indicator Light goes off will enable Auto Record. When surrounding sound is loud enough, the device will start the recording automatically.

**\*Note: you have to enable Auto Record every time after the device is power off.**

**HOW TO DELETE FILE:** when playing, press and hold "+" "-" buttons together to enter Delete Mode, and the Indicator Light will turn purple.

**Delete Single File:** in Delete Mode, press "+" or "-" button will delete current file, the Indicator Light will turn blue and blink fast.

**Delete All Files:** in Delete Mode, press and hold "+" "-" buttons together to delete all files, the Indicator Light will turn red and blink fast

**\*Note: to prevent deletion mistake, we highly recommend you to conduct file deletion when connected to PC.**

**FAST FORWARD / BACKWARD:** move Power Switch to "ON" position and plug in headphone, the Indicator will turn red; press and hold "+" or "-" button until the Indicator Light turn blue or purple and blinking to enter Fast Forward / Backward Mode; in Fast Forward / Backward Mode, press and hold "+" to fast forward, press and hold "-" to fast backward.



### Instructions

**CHARGING WHEN RECORDING:** move Power Switch to "ON" position and connect USB cable to charge the device, press "+" or "-" until the Indicator Light goes off, the device will start the recording when charging.

**MONITOR RECORDING:** move Power Switch to "ON" position (make sure the headphone is not plugged in), press and hold "+" "-" together until the Indicator Light goes off, then plug in headphone, you can listen to the current recording.

**CHECK RECORDING STATUS:** when recording, press "+" or "-", if Indicator Light turn red and blink 1 time, the recording in progress.


**RESTORE FACTORY SETTING:** move Power Switch to "OFF" position then connect the device to PC, right click the recorder's disk icon and start formatting will restore the device to factory setting.



### Instructions

#### Setting time:

Change the system time, connect the machine to the computer, and after entering the disc, you can see the file called<Time synchronization tool>. Copy this file to your desktop and open the folder. Double click <SET DISK TIME>and check whether PC time is accurate as the figure shows. Click<Set Time>, as shown in the figure, time synchronization is completed.

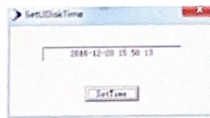

If you want to format the machine, please backup this folder.



### Instructions

#### SPECIFICATIONS:

|                                   |   |
|-----------------------------------|---|
| <b>Battery Type:</b>              | <b>Build-In Lithium Battery</b>           |
| <b>Recording Output Format:</b>   | <b>WAV</b>                                |
| <b>Supported Music Format:</b>    | <b>MP3 / WMA / WAV</b>                    |
| <b>Default Recording Quality:</b> | <b>192Kbps</b>                            |
| <b>Max Record Time (48Khz):</b>   | <b>about 70 hours after fully charged</b> |
| <b>Charging Time:</b>             | <b>about 1 hour</b>                       |
| <b>Memory Size:</b>               | <b>4G / 8G / 16G / 32G</b>                |